



Owner's Manual

IS 350 / IS 300



©2019 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

	Pictorial index	Search by illustration	
1	For safety and security	Make sure to read through them	
2	Instrument cluster	How to read the gauges and meters, the variety of warning lights and indicators, etc.	
3	Operation of each component	Opening and closing the doors and windows, adjustment before driving, etc.	
4	Driving	Operations and advice which are necessary for driving	
5	Lexus Display Audio system	Operating the Lexus Display Audio system	
6	Interior features	Usage of the interior features, etc.	
7	Maintenance and care	Caring for your vehicle and maintenance procedures	
8	When trouble arises	What to do in case of malfunction or emergency	
9	Vehicle specifications	Vehicle specifications, customizable features, etc.	
	Index	Search by symptom	
		Search alphabetically	

2 TABLE OF CONTENTS

For your information	8
Reading this manual	14
How to search	15
Pictorial index	16

1 For safety and security

1-1. For safe use	
Before driving	36
For safe driving	38
Seat belts	40
SRS airbags	45
Pop Up Hood	55
Exhaust gas precautions	58
1-2. Child safety	
Airbag manual on-off system	59
Riding with children	61
Child restraint systems (except for Korea)	62
Child restraint systems (for Korea)	93
1-3. Theft deterrent system	
Engine immobilizer system	104
Double locking system	106
Alarm	107

2 Instrument cluster

2. Instrument cluster	
Warning lights and indicators	114
Gauges and meters	119
Multi-information display	124
Fuel consumption information	141

3 Operation of each component

3-1. Key information	
Keys	148
3-2. Opening, closing and locking the doors and trunk	
Doors	154
Trunk	161
Smart entry & start system	166
3-3. Adjusting the seats	
Front seats	175
Rear seats	177
Driving position memory	179
Head restraints	184
3-4. Adjusting the steering wheel and mirrors	
Steering wheel	187
Inside rear view mirror	189
Outside rear view mirrors	191

3-5. Opening, closing the windows and moon roof

Power windows.....	195
Moon roof.....	199

4 Driving

4-1. Before driving

Driving the vehicle.....	204
Cargo and luggage.....	213
Trailer towing (for South Africa with a towing package).....	214
Trailer towing (vehicles without a towing package).....	221

4-2. Driving procedures

Engine (ignition) switch.....	222
Automatic transmission.....	227
Turn signal lever.....	234
Parking brake.....	236
ASC (Active Sound Control).....	237

4-3. Operating the lights and wipers

Headlight switch.....	239
Automatic High Beam.....	242
Fog light switch.....	246
Windshield wipers and washer.....	247

4-4. Refueling

Opening the fuel tank cap.....	255
--------------------------------	-----

4-5. Using the driving support systems

Lexus Safety System + ...	259
PCS (Pre-Collision System).....	266
LDA (Lane Departure Alert with steering control).....	279
Dynamic radar cruise control.....	289
Cruise control	301
Stop & Start system.....	305
• Hill-start assist control	308
Lexus parking assist-sensor.....	314
Lexus parking assist monitor	323
BSM (Blind Spot Monitor).....	339
• BSM function	345
• RCTA function.....	348
Driving mode select switch	353
Driving assist systems.....	357

4-6. Driving tips

Winter driving tips	363
Eco-friendly driving tips	367

5 Lexus Display Audio system

5-1. Basic Operations

Lexus Display Audio system	372
Steering wheel audio switches.....	378
USB/AUX Ports	379

5-2. Setup

Setup menu.....	382
General settings.....	383
Voice settings	386
Display settings	387

5-3. Using the audio system

Selecting the audio source	389
Optimal use of the audio system	390
Audio settings.....	391
Audio menu screen operation	400

5-4. Using the radio

Radio operation	404
-----------------------	-----

5-5. Playing an audio CD and MP3/WMA/AAC discs

Audio CD/DVD player operation	408
-------------------------------------	-----

5-6. Playing a video CD

Video CD operation.....	413
-------------------------	-----

5-7. Playing a DVD

DVD video operation.....	415
--------------------------	-----

5-8. Using an external device

Listening to an iPod	420
Using USB memory device.....	424
Using the AUX port	429

5-9. Connecting Bluetooth®

Steps for using Bluetooth® devices.....	430
Registering a Bluetooth® device.....	432
Selecting a Bluetooth® device.....	433
Connecting a Bluetooth® audio player	434
Connecting a Bluetooth® phone	435
Displaying a Bluetooth® device details	436
Detailed Bluetooth® settings.....	437

5-10. Bluetooth® Audio

Listening to Bluetooth® Audio.....	438
------------------------------------	-----

5-11. Bluetooth® Phone

Using a Bluetooth® Phone.....	439
Making a call	441
Receiving a call	444
Speaking on the phone.....	445
Using the steering wheel switches.....	447
Bluetooth® phone settings.....	448

5-12. Phonebook	
Contact settings	450
5-13. Bluetooth®	
What to do if... (Troubleshooting)	453
Bluetooth®	455
5-14. Other function	
"Information" screen	463
MirrorLink™	464
USB photo	468
Speech command system	470

6 Interior features

6-1. Basic operation of the Remote Touch screen	
Remote Touch	474
10.3-inch display	477
6-2. Using the air conditioning system	
Automatic air conditioning system	479
Heated steering wheel/ seat heaters/ seat ventilators	491
6-3. Using the interior lights	
Interior lights list	493
• Interior lights	494
• Personal lights	494

6-4. Using the storage features

List of storage features	496
• Glove box	497
• Console box	497
• Cup holders/Bottle holders	498
Trunk features	500

6-5. Using the other interior features

Other interior features	503
• Sun visors	503
• Vanity mirrors	503
• Clock	504
• Power outlet	505
• Armrest	506
• Rear sunshade	506
• Assist grips	508
• Coat hooks	508
Garage door opener	509

7 Maintenance and care

7-1. Maintenance and care

Cleaning and protecting
the vehicle exterior 516

Cleaning and protecting
the vehicle interior 520

7-2. Maintenance

Maintenance
requirements 523

Scheduled maintenance 525

7-3. Do-it-yourself maintenance

Do-it-yourself service
precautions 537

Hood 539

Positioning a floor jack 540

Engine compartment 542

Tires 555

Tire inflation pressure 568

Wheels 570

Air conditioning filter 572

Electronic key battery 574

Checking and replacing
fuses 577

Light bulbs 581

8 When trouble arises

8-1. Essential information

Emergency flashers 590

If your vehicle has to be
stopped in an emergency 591

If the vehicle is trapped
in rising water 592

8-2. Steps to take in an emergency

If your vehicle needs
to be towed 593

If you think something
is wrong 599

Fuel pump shut off system 600

If a warning light turns on
or a warning buzzer
sounds 601

If a warning message
is displayed 607

If you have a flat tire (vehicles
with a spare tire) 632

If you have a flat tire (vehicles
with run-flat tires) 644

If the engine will not start 645

If the electronic key does
not operate properly 647

If the vehicle battery
is discharged 650

If your vehicle overheats 655

If the vehicle becomes
stuck 659

9 Vehicle specifications

9-1. Specifications

Maintenance data (fuel, oil level, etc.).....	662
Fuel information.....	677

9-2. Customization

Customizable features	679
-----------------------------	-----

9-3. Initialization

Items to initialize	688
---------------------------	-----

Index

What to do if... (Troubleshooting)	690
Alphabetical index.....	694

1

2

3

4

5

6

7

8

9

For vehicles with a navigation system, refer to the “Navigation System Owner’s Manual” for information regarding the equipment listed below.

- Navigation system
- Audio/video system

For your information

Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of color and equipment.

Noise from under vehicle after turning off the engine (for Korea)

Approximately five hours after the engine is turned off, you may hear sound coming from under the vehicle for several minutes. This is the sound of a fuel evaporation leakage check and, it does not indicate a malfunction.

Accessories, spare parts and modification of your Lexus

A wide variety of non-genuine spare parts and accessories for Lexus vehicles are currently available in the market. Using these spare parts and accessories which are not genuine Lexus products may adversely affect the safety of your vehicle, even though these parts may be approved by certain authorities in your country. Toyota Motor Corporation therefore cannot accept any liability or guarantee spare parts and accessories which are not genuine Lexus products, nor for replacement or installation involving such parts.

This vehicle should not be modified with non-genuine Lexus products. Modification with non-genuine Lexus products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

Installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Lexus Safety System +
- Cruise control system
- Anti-lock brake system
- Vehicle dynamics integrated management
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with your Lexus dealer for precautionary measures or special instructions regarding installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of RF-transmitters, is available on request at your Lexus dealer.

Vehicle data recordings

The vehicle is equipped with sophisticated computers that will record certain data, such as:

- Engine speed / Electric motor speed (traction motor speed)
- Accelerator status
- Brake status
- Vehicle speed
- Operation status of the driving assist systems
- Images from the cameras

Your vehicle is equipped with cameras. Contact your Lexus dealer for the location of recording cameras.

The recorded data varies according to the vehicle grade level and options with which it is equipped.

These computers do not record conversations or sounds, and only record images outside of the vehicle in certain situations.

● Data usage

Lexus may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Lexus will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

● Recorded image information can be erased by your Lexus dealer.

The image recording function can be disabled. However, if the function is disabled, data from when the system operates will not be available.

Event data recorder (except for Korea)

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an airbag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. However, data may not be recorded depending on the severity and type of a crash.

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

● Disclosure of the EDR data

Lexus will not disclose the data recorded in an EDR to a third party except when:

- An agreement from the vehicle's owner (or the lessee for a leased vehicle) is obtained
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a lawsuit

However, if necessary, Lexus may:

- Use the data for research on vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing information about the specific vehicle or vehicle owner

Event data recorder (for Korea)

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an airbag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. However, data may not be recorded depending on the severity and type of a crash.

The EDR in this vehicle is designed to record such data as:

- How various safety systems in your vehicle (e.g., the airbags, seat belts and ABS) were operating;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

The EDR can help provide a better understanding of the circumstances in which crashes and injuries occur.

NOTE: EDR data are recorded by your vehicle only if a nontrivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, personal data acquired during a defect investigation could be used to manage crash records. A person provided by the Minister of Land Infrastructure and Transport could extract and analyze EDR data for official purpose.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

● Disclosure of the EDR data

Lexus will not disclose the data recorded in an EDR to a third party except when:

- An agreement from the vehicle's owner (or the lessee for a leased vehicle) is obtained
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a lawsuit

However, if necessary, Lexus may:

- Use the data for research on vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing information about the specific vehicle or vehicle owner

Scrapping of your Lexus

The SRS airbag and seat belt pretensioner devices in your Lexus contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Lexus dealer before you scrap your vehicle.



WARNING

■ General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

■ General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Reading this manual



WARNING:

Explains something that, if not obeyed, could cause death or serious injury to people.



NOTICE:

Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.




... Indicates operating or working procedures. Follow the steps in numerical order.



Indicates the action (pushing, turning, etc.) used to operate switches and other devices.




Indicates the outcome of an operation (e.g. a lid opens).

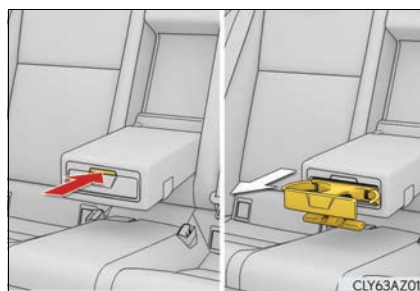

Indicates the component or position being explained.




Means "Do not", "Do not do this", or "Do not let this happen".

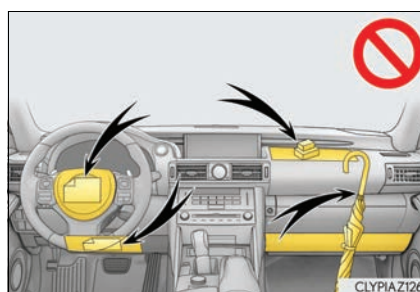

How to search


■ Searching by name

- Alphabetical index P. 694

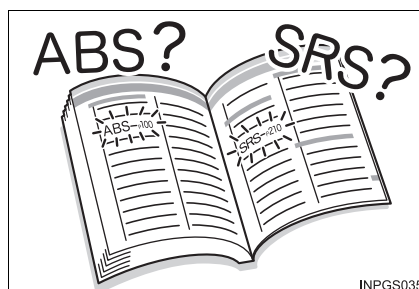

■ Searching by installation position

- Pictorial index P. 16

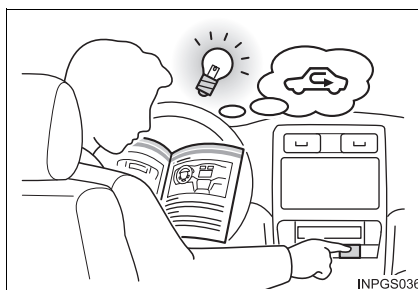


■ Searching by symptom or sound

- What to do if...
(Troubleshooting) P. 690




■ Searching by title

- Table of contents P. 2

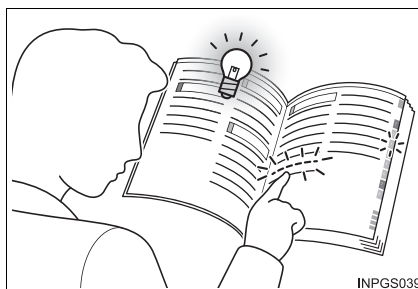

Pictorial index

■ Exterior

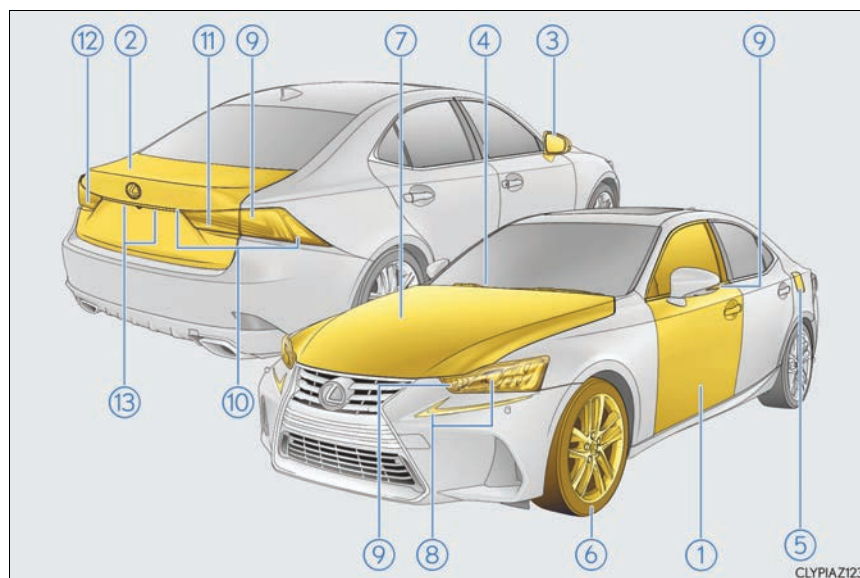

The shape of the headlights may differ depending on the grade, etc. (→P. 581)

- ① **Doors** **P. 154**
 - Locking/unlocking P. 154
 - Opening/closing the door glasses P. 195
 - Locking/unlocking by using the mechanical key P. 647
 - Warning lights/warning messages P. 602, 609
- ② **Trunk** **P. 161**
 - Opening from inside the cabin P. 161
 - Opening from outside P. 161
 - Opening by using the mechanical key P. 647
 - Warning lights/warning messages P. 602, 610
- ③ **Outside rear view mirrors** **P. 191**
 - Adjusting the mirror angle P. 191
 - Folding the mirrors P. 192
 - Driving position memory^{*1} P. 179
 - Defogging the mirrors^{*1} P. 486

- ④ **Windshield wipers** P. 247
 - Precautions against winter season P. 363
 - Precautions against car wash P. 518
- ⑤ **Fuel filler door** P. 255
 - Refueling method P. 255
 - Fuel type/fuel tank capacity P. 665
- ⑥ **Tires** P. 555
 - Tire size/inflation pressure P. 673, 675
 - Winter tires/tire chain P. 363
 - Checking/rotation/tire pressure warning system P. 555
 - Coping with flat tires P. 632, 644
- ⑦ **Hood** P. 539
 - Opening P. 539
 - Engine oil P. 666
 - Coping with overheat P. 655
 - Warning messages P. 609

Light bulbs of the exterior lights for driving
 (Replacing method: P. 581, Watts: P. 676)


- ⑧ **Headlights/front position lights/daytime running lights** P. 239
- ⑨ **Turn signal lights** P. 234
- ⑩ **Tail lights** P. 239
 - Stop lights**
 - Emergency brake signal P. 358
- ⑪ **Rear fog light** ^{*1, 3} P. 246
 - Back up light** ^{*1}
 - Shifting the shift lever to R P. 227
- ⑫ **Rear fog light** ^{*1, 2} P. 246
 - Back up light** ^{*1}
 - Shifting the shift lever to R P. 227
- ⑬ **License plate lights** P. 239

^{*1}: If equipped

^{*2}: Left-hand drive vehicles

^{*3}: Right-hand drive vehicles

■ Instrument panel (Left-hand drive vehicles)

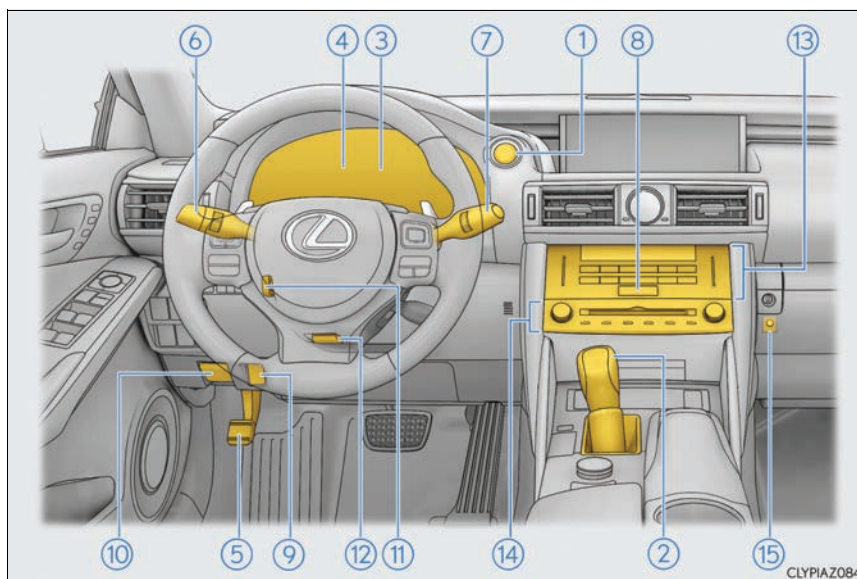


- ① **Engine switch** **P. 222**
 - Starting the engine/changing the modes P. 222
 - Emergency stop of the engine P. 591
 - When the engine will not start P. 645
 - Warning messages P. 627
- ② **Shift lever** **P. 227**
 - Changing the shift position P. 227
 - Precautions against towing P. 593
 - When the shift lever does not move P. 232
- ③ **Meters** **P. 119**
 - Reading the meters/adjusting the instrument panel light P. 119
 - Warning lights/indicator lights P. 114
 - When the warning lights come on P. 601

④	Multi-information display	P. 124
	Display	P. 124
	When the warning messages are displayed	P. 607
⑤	Parking brake	P. 236
	Applying/releasing	P. 236
	Precautions against winter season	P. 364
	Warning buzzer/message	P. 607
⑥	Turn signal lever	P. 234
	Headlight switch	P. 239
	Headlights/front position lights/tail lights/daytime running lights	P. 239
	Rear fog light* ¹	P. 246
⑦	Windshield wiper and washer switch	P. 247
	Usage	P. 247
	Adding washer fluid	P. 553
	Warning messages	P. 623
⑧	Emergency flasher switch	P. 590
⑨	Trunk opener	P. 161
⑩	Hood lock release lever	P. 539
⑪	Tilt and telescopic steering control switch * ¹	P. 187
	Adjustment	P. 187
	Driving position memory* ¹	P. 179
⑫	Tilt and telescopic steering lock release lever * ¹	P. 187
	Adjustment	P. 187
⑬	Air conditioning system	P. 479
	Usage	P. 479
	Rear window defogger	P. 486
⑭	Audio system * ²	P. 372
	Audio system	P. 372
	Hands-free system	P. 439
⑮	Trunk opener main switch	P. 162


*¹: If equipped

*²: For vehicles with a navigation system, refer to "Navigation System Owner's Manual".

■ Switches (Left-hand drive vehicles)

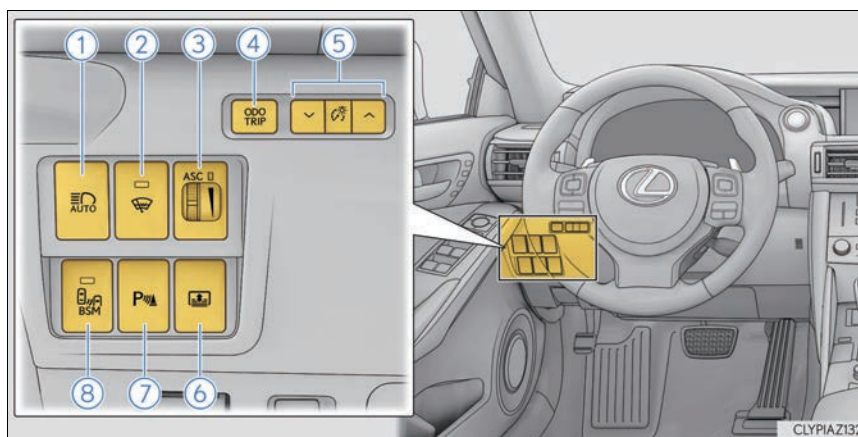


- ① Automatic High Beam switch* P. 242
- ② Windshield wiper de-icer switch* P. 486
- ③ ASC (Active Sound Control) switch* P. 237
- ④ Odometer/trip meter and trip meter reset button..... P.128
- ⑤ Instrument panel light control switches..... P. 123
- ⑥ Rear sunshade switch* P. 506
- ⑦ Lexus parking assist-sensor switch* P. 314
- ⑧ BSM (Blind Spot Monitor) main switch* P. 339

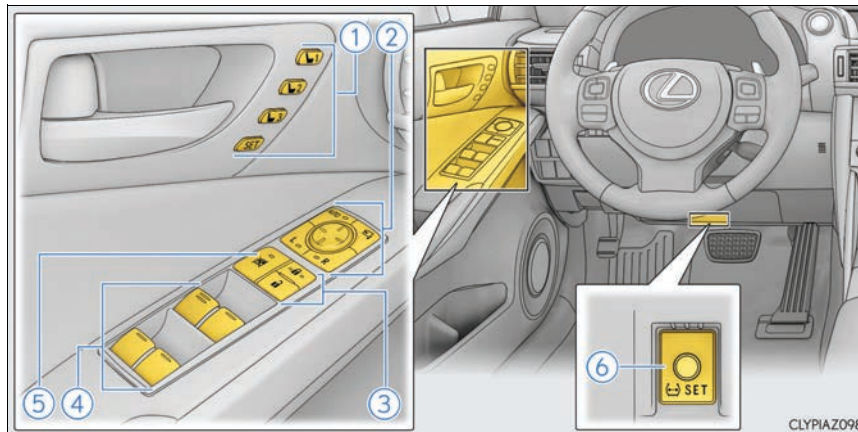


- ① Driving position memory switches* P. 179
- ② Outside rear view mirror switches..... P. 191
- ③ Door lock switches P. 157
- ④ Power window switches P. 195
- ⑤ Window lock switch P. 195
- ⑥ Tire pressure warning reset switch P. 558

*: If equipped

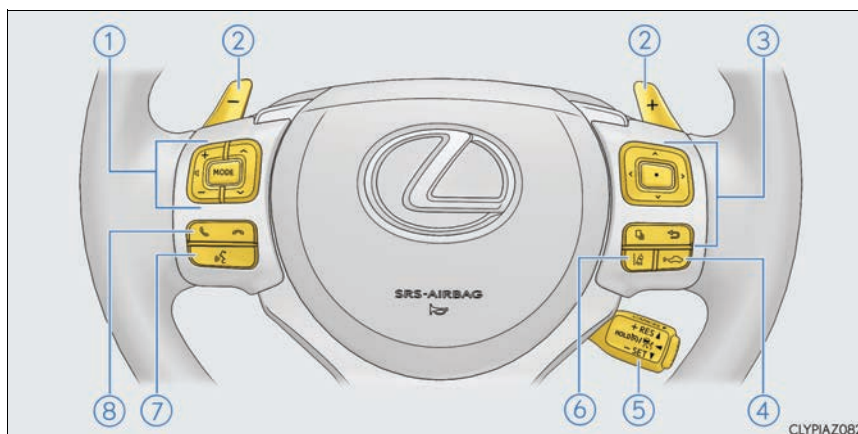

- ① Audio remote control switches^{*1} P. 378
- ② Paddle shift switches P. 229
- ③ Meter control switches P. 127
- ④ Vehicle-to-vehicle distance switch^{*2} P. 295
- ⑤ Cruise control switch
 - Cruise control^{*2} P. 301
 - Dynamic radar cruise control^{*2} P. 289
- ⑥ LDA (Lane Departure Alert with steering control) switch^{*2} P. 279
- ⑦ Talk switch^{*1} P. 447
- ⑧ Telephone switches^{*1} P. 447

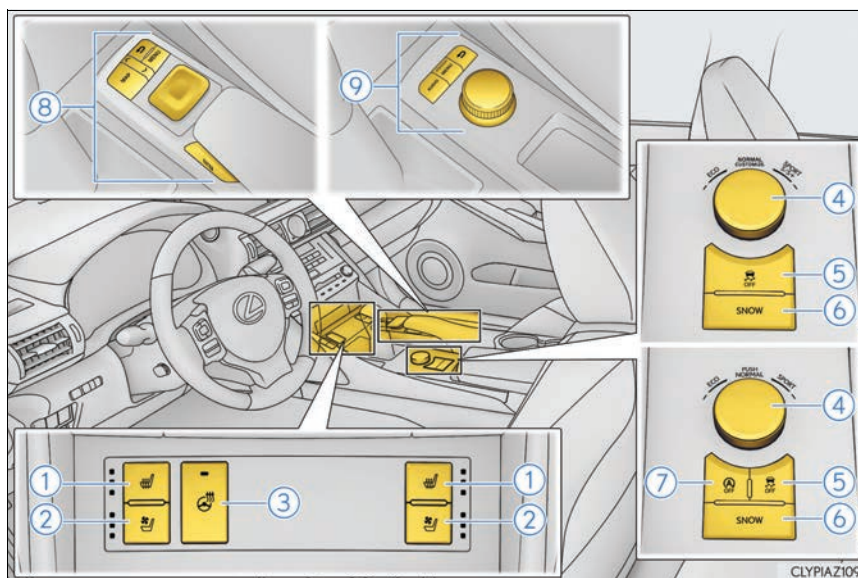


- ① Seat heater switches^{*2} P. 492
- ② Seat ventilator switches^{*2} P. 492
- ③ Heated steering wheel switch^{*2} P. 491
- ④ Driving mode select switch P. 353
- ⑤ VSC OFF switch..... P. 359
- ⑥ Snow mode switch^{*2} P. 228
- ⑦ Stop & Start cancel switch^{*2} P. 305
- ⑧ Remote Touch^{*2,3} P. 474
- ⑨ Lexus Display Audio controller^{*2} P. 374

^{*1}: For vehicles with a navigation system, refer to "Navigation System Owner's Manual".


^{*2}: If equipped

^{*3}: Refer to "Navigation System Owner's Manual".

■ Interior (Left-hand drive vehicles)

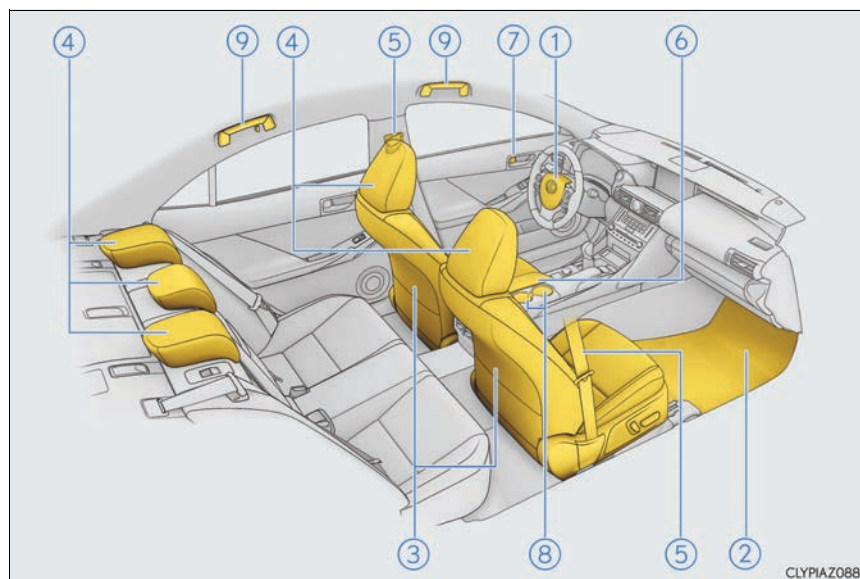

- ① SRS airbags..... P. 45
- ② Floor mats P. 36
- ③ Front seats P. 175
- ④ Head restraints..... P. 184
- ⑤ Seat belts P. 40
- ⑥ Console box P. 497
- ⑦ Inside lock buttons..... P. 157
- ⑧ Cup holders P. 498
- ⑨ Assist grips..... P. 508

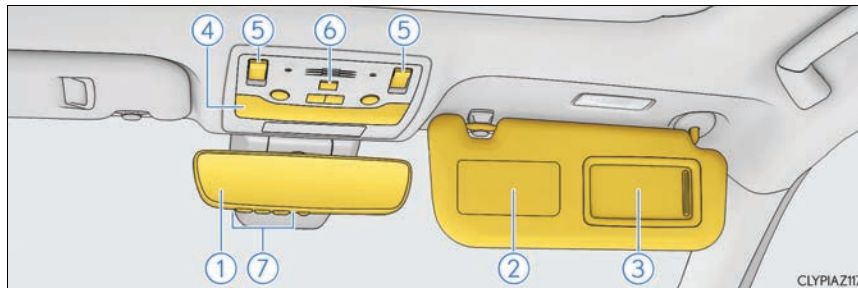

- ① Inside rear view mirror P. 189
- ② Sun visors ^{*1} P. 503
- ③ Vanity mirrors P. 503
- ④ Interior light P. 494
- Personal lights ^{*2} P. 494
- ⑤ Moon roof switches ^{*3} P. 199
- ⑥ Intrusion sensor and tilt sensor cancel switch ^{*3} P. 110
- ⑦ Garage door opener switches ^{*3} P. 509

^{*1}: Except for Taiwan: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P. 65)




For Taiwan: DO NOT carry baby, infant and children on the front passenger seat. Except for the front passenger seat, NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P. 67)



^{*2}: The illustration shows the front, but they are also equipped in the rear.

^{*3}: If equipped

■ Instrument panel (Right-hand drive vehicles)

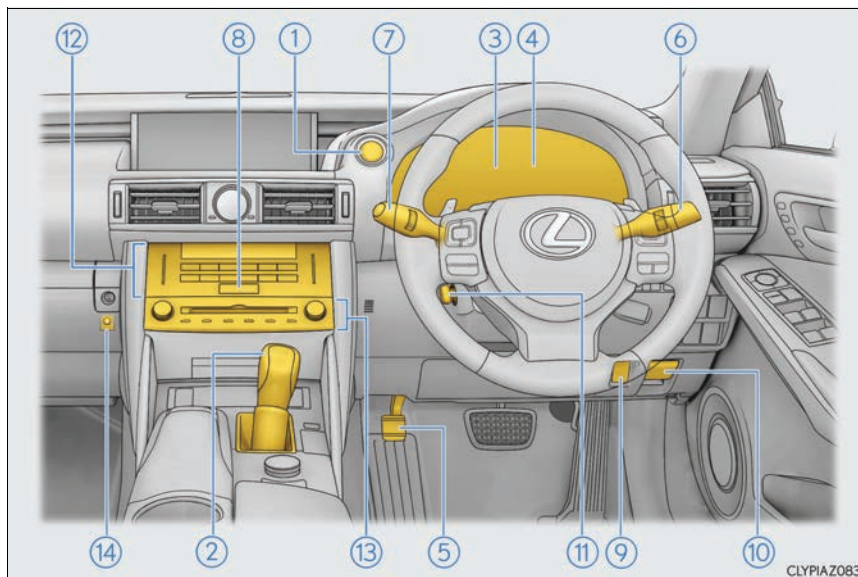


- ① **Engine switch**.....P. 222
 Starting the engine/changing the modes P. 222
 Emergency stop of the engine P. 591
 When the engine will not start P. 645
 Warning messages P. 627
- ② **Shift lever**.....P. 227
 Changing the shift position P. 227
 Precautions against towing P. 593
 When the shift lever does not move..... P. 232
- ③ **Meters**.....P. 119
 Reading the meters/adjusting the instrument panel light..... P. 119
 Warning lights/indicator lights..... P. 114
 When the warning lights come on P. 601

④	Multi-information display	P. 124
	Display	P. 124
	When the warning messages are displayed	P. 607
⑤	Parking brake	P. 236
	Applying/releasing	P. 236
	Precautions against winter season	P. 364
	Warning buzzer/message	P. 607
⑥	Turn signal lever	P. 234
	Headlight switch	P. 239
	Headlights/front position lights/tail lights/daytime running lights	P. 239
	Rear fog light ^{*1}	P. 246
⑦	Windshield wiper and washer switch	P. 247
	Usage	P. 247
	Adding washer fluid	P. 553
	Warning messages	P. 623
⑧	Emergency flasher switch	P. 590
⑨	Trunk opener	P. 161
⑩	Hood lock release lever	P. 539
⑪	Tilt and telescopic steering control switch	P. 187
	Adjustment	P. 187
	Driving position memory ^{*1}	P. 179
⑫	Air conditioning system	P. 479
	Usage	P. 479
	Rear window defogger	P. 486
⑬	Audio system^{*2}	P. 372
	Audio system	P. 372
	Hands-free system	P. 439
⑭	Trunk opener main switch	P. 162


^{*1}: If equipped

^{*2}: For vehicles with a navigation system, refer to "Navigation System Owner's Manual".

■ Switches (Right-hand drive vehicles)

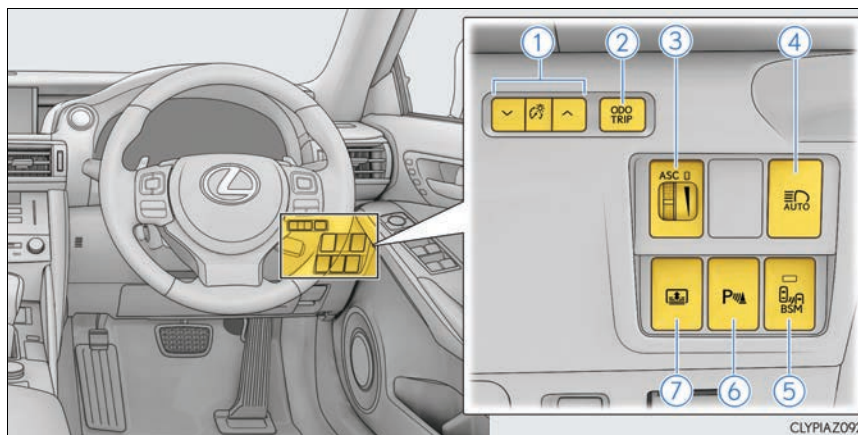


- ① Instrument panel light control switches..... P. 123
- ② Odometer/trip meter and trip meter reset button..... P. 128
- ③ ASC (Active Sound Control) switch* P. 237
- ④ Automatic High Beam switch* P. 242
- ⑤ BSM (Blind Spot Monitor) main switch* P. 339
- ⑥ Lexus parking assist-sensor switch* P. 314
- ⑦ Rear sunshade switch* P. 506

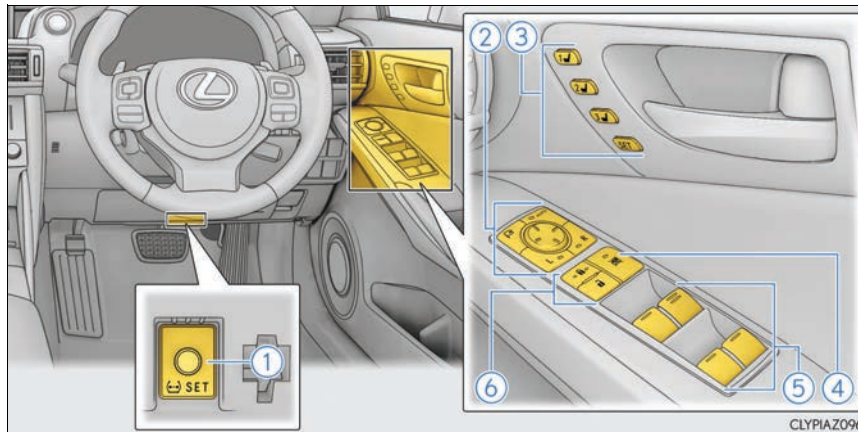


- ① Tire pressure warning reset switch P. 558
- ② Outside rear view mirror switches..... P. 191
- ③ Driving position memory switches* P. 179
- ④ Window lock switch P. 195
- ⑤ Power window switches..... P. 195
- ⑥ Door lock switches P. 157

*: If equipped

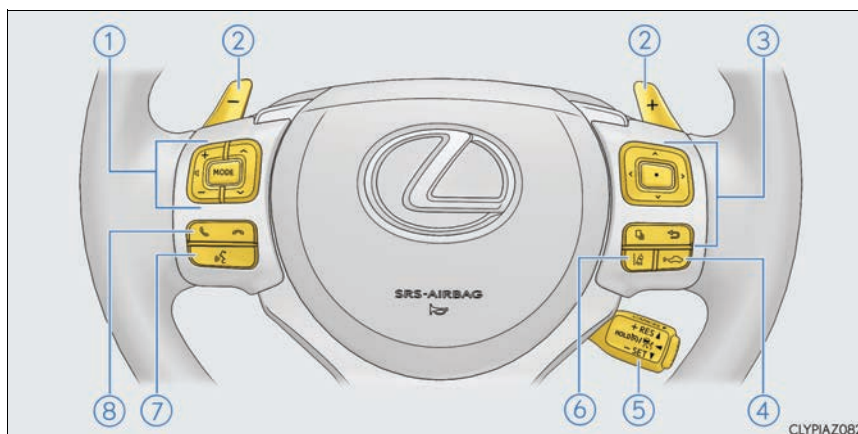

- ① Audio remote control switches^{*1} P. 378
- ② Paddle shift switches P. 229
- ③ Meter control switches P. 127
- ④ Vehicle-to-vehicle distance switch^{*2} P. 295
- ⑤ Cruise control switch
 - Cruise control^{*2} P. 301
 - Dynamic radar cruise control^{*2} P. 289
- ⑥ LDA (Lane Departure Alert with steering control) switch^{*2} P. 279
- ⑦ Talk switch^{*1} P. 447
- ⑧ Telephone switches^{*1} P. 447

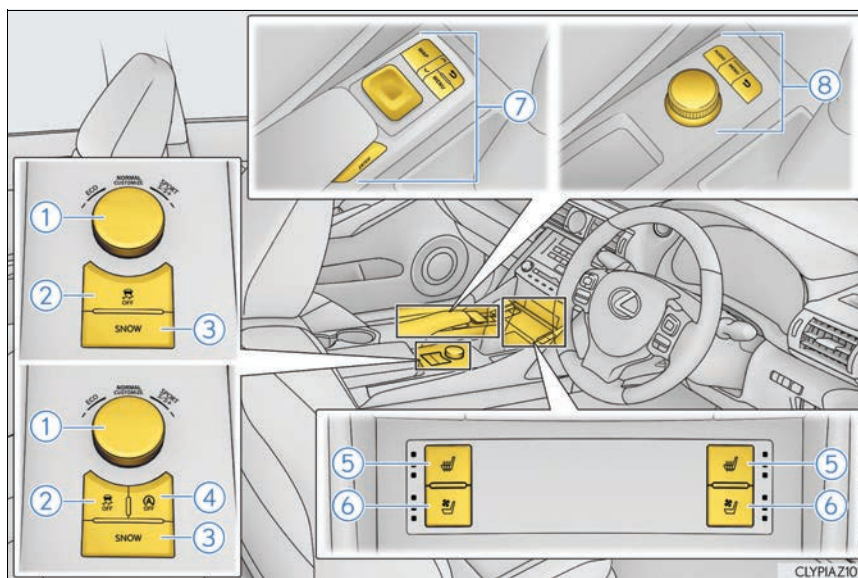


- ① Driving mode select switch P. 353
- ② VSC OFF switch.....P. 359
- ③ Snow mode switch.....P. 228
- ④ Stop & Start cancel switch^{*2} P. 305
- ⑤ Seat heater switches P. 492
- ⑥ Seat ventilator switches^{*2} P. 492
- ⑦ Remote Touch^{*2,3} P. 474
- ⑧ Lexus Display Audio controller^{*2} P. 374

^{*1}: For vehicles with a navigation system, refer to "Navigation System Owner's Manual".


^{*2}: If equipped

^{*3}: Refer to "Navigation System Owner's Manual".

■ Interior (Right-hand drive vehicles)

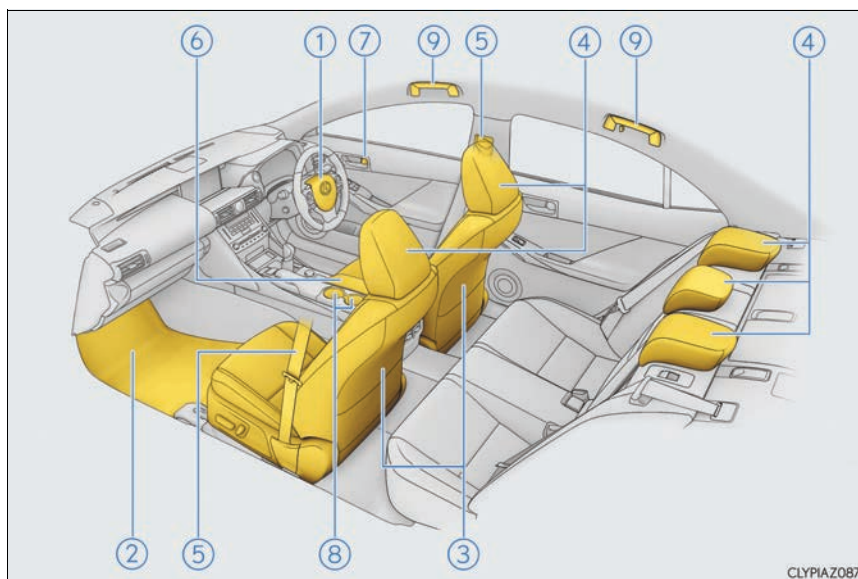

- ① SRS airbags..... P. 45
- ② Floor mats P. 36
- ③ Front seats P. 175
- ④ Head restraints..... P. 184
- ⑤ Seat belts P. 40
- ⑥ Console box P. 497
- ⑦ Inside lock buttons..... P. 157
- ⑧ Cup holders P. 498
- ⑨ Assist grips..... P. 508

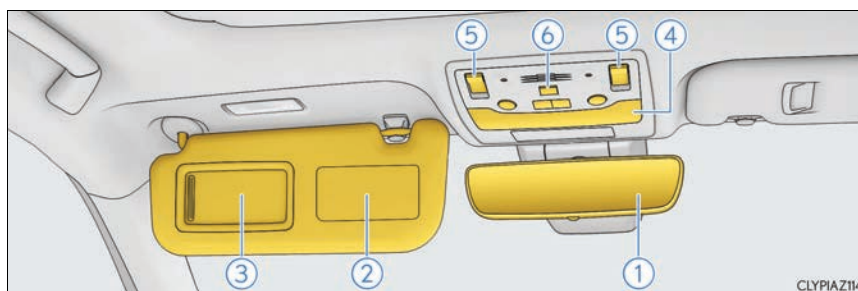

- ① Inside rear view mirror P. 189
- ② Sun visors ^{*1} P. 503
- ③ Vanity mirrors P. 503
- ④ Interior light P. 494
- Personal lights ^{*2} P. 494
- ⑤ Moon roof switches ^{*3} P. 199
- ⑥ Intrusion sensor and tilt sensor cancel switch ^{*3} P. 110

^{*1}: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P. 65)



^{*2}: The illustration shows the front, but they are also equipped in the rear.

^{*3}: If equipped

For safety and security**1****1-1. For safe use**

Before driving.....	36
For safe driving	38
Seat belts	40
SRS airbags	45
Pop Up Hood	55
Exhaust gas precautions	58

1-2. Child safety

Airbag manual on-off system.....	59
Riding with children	61
Child restraint systems (except for Korea)	62
Child restraint systems (for Korea)	93

1-3. Theft deterrent system


Engine immobilizer system.....	104
Double locking system	106
Alarm	107

Before driving

Floor mat


Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

- 1 Insert the retaining hooks (clips) into the floor mat eyelets.

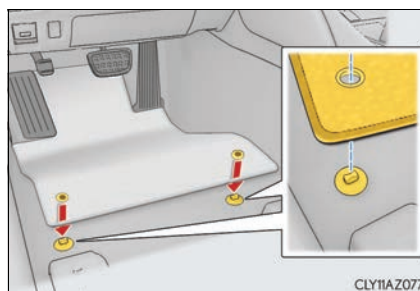

- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the $\triangle$ marks.

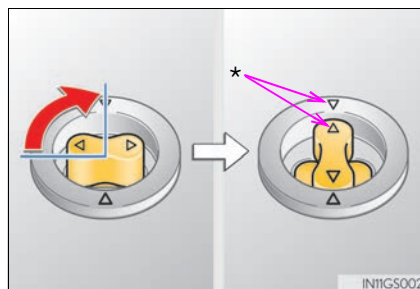

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

⚠ WARNING

Observe the following precautions.


Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle. This could lead to an accident, resulting in death or serious injury.

■ When installing the driver's floor mat

- Do not use floor mats designed for other models or different model year vehicles, even if they are Lexus Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

■ Before driving

- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- With the engine stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

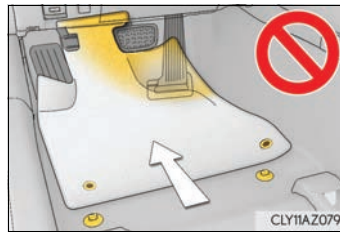


For safe driving

For safe driving, adjust the seat and mirror to an appropriate position before driving.

Correct driving posture

- ① Adjust the angle of the seatback so that you are sitting straight up and so that you do not have to lean forward to steer. (→P. 175)
- ② Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P. 175)
- ③ Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 184)
- ④ Wear the seat belt correctly. (→P. 40)

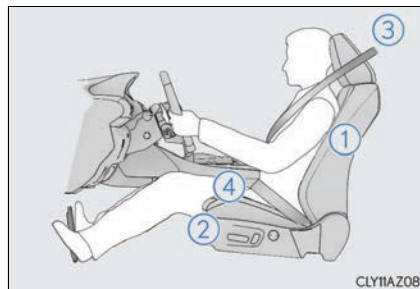

Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. (→P. 40)

Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 62)

Adjusting the mirrors

Make sure that you can see backward clearly by adjusting the inside and outside rear view mirrors properly. (→P. 189, 191)

WARNING

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Do not adjust the position of the driver's seat while driving.
Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback.
A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- Do not place anything under the front seats.
Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- Always observe the legal speed limit when driving on public roads.
- When driving over long distances, take regular breaks before you start to feel tired.
Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

Seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle.


Correct use of the seat belts

- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.



Fastening and releasing the seat belt


- ① To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- ② To release the seat belt, press the release button.

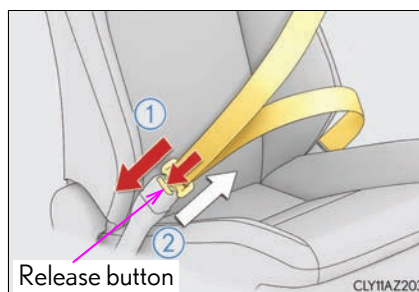

Adjusting the seat belt shoulder anchor height (front seats)

- ① Push the seat belt shoulder anchor down while pressing the release button.
- ② Push the seat belt shoulder anchor up.


Move the height adjuster up and down as needed until you hear a click.

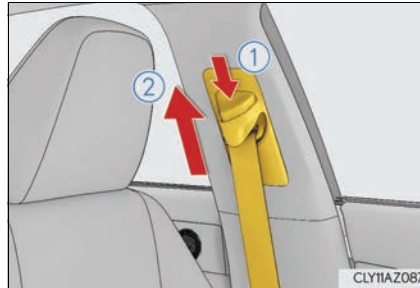**Seat belt pretensioners (front seats for all models and outboard rear seats of some models)**

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal collision.


The front seat belt pretensioners also activate when the vehicle is subjected to certain types of severe side collision.

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

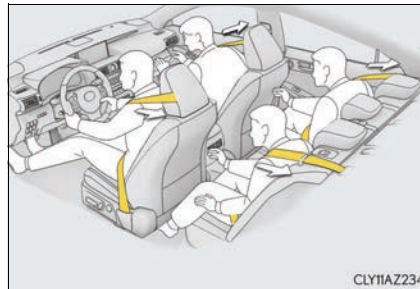

■ After the rear center seat belt has been used

Stow the buckle as shown.

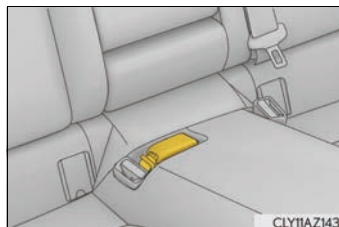**■ Emergency locking retractor (ELR)**

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

■ Child seat belt usage

The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 62)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage. (→P. 40)

■ Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

■ Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact your Lexus dealer for seat belt replacement or installation.

⚠ WARNING

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.
Failure to do so may cause death or serious injury.

■ Wearing a seat belt


- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Lexus recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

■ Pregnant women

Obtain medical advice and wear the seat belt in the proper way. (→P. 40)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

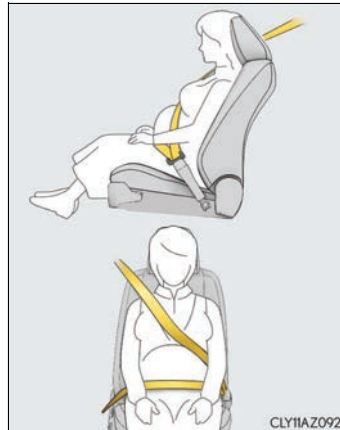

**WARNING****■ People suffering illness**

Obtain medical advice and wear the seat belt in the proper way. (→P. 40)

■ When children are in the vehicle

→P. 88

■ Seat belt pretensioners

If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at your Lexus dealer.

■ Adjustable shoulder anchor


Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident. (→P. 41)

■ Seat belt damage and wear

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted.
If the seat belt does not function correctly, immediately contact your Lexus dealer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Lexus dealer. Inappropriate handling may lead to incorrect operation.

SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

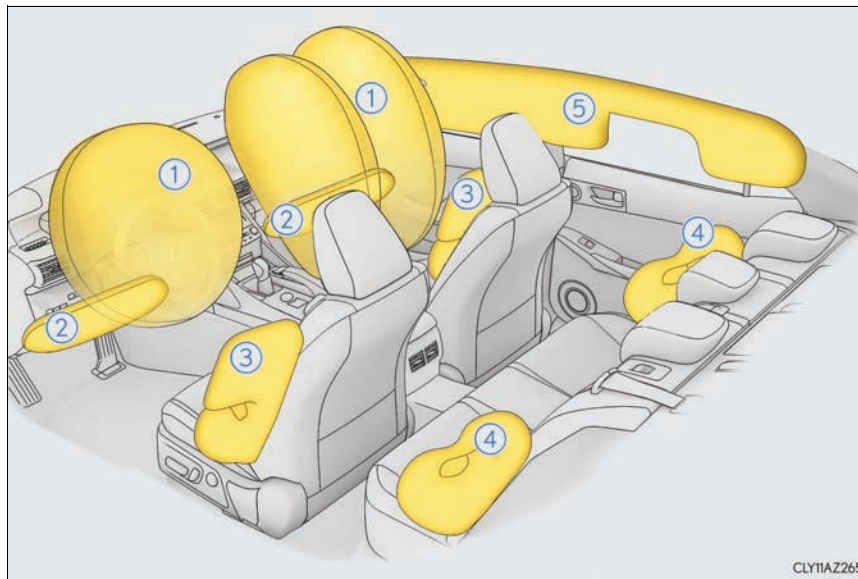


◆ SRS front airbags

- ① SRS driver airbag/front passenger airbag
Can help protect the head and chest of the driver and front passenger from impact with interior components
- ② SRS knee airbags
Can help provide driver and front passenger protection

◆ SRS side and curtain shield airbags

- ③ SRS front side airbags
Can help protect the torso of the front seat occupants
- ④ SRS rear side airbags (if equipped)
Can help protect the torso of occupants in the rear outer seats
- ⑤ SRS curtain shield airbags
Can help protect primarily the head of occupants in the outer seats

SRS airbag system components

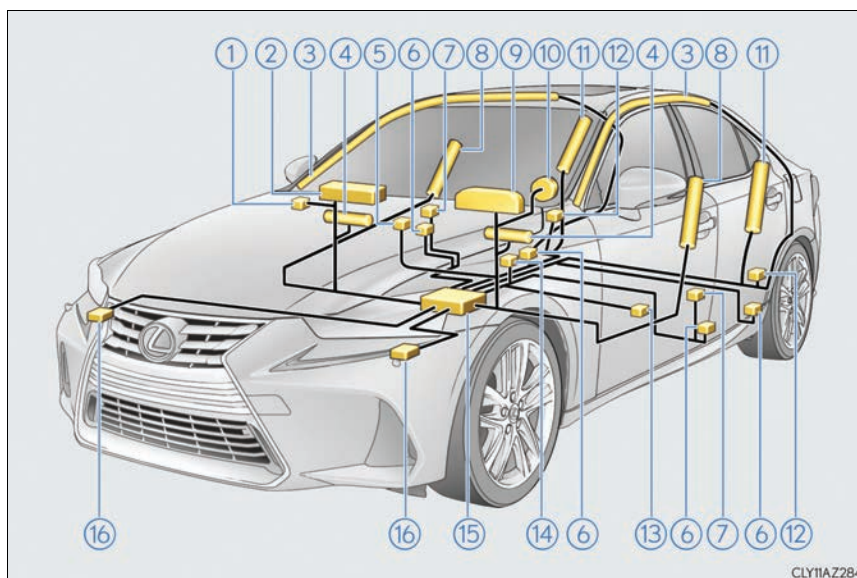

- | | |
|--|------------------------------------|
| ① Airbag manual on-off switch | ⑧ Front side airbags |
| ② Front passenger airbag | ⑨ SRS warning light |
| ③ Curtain shield airbags | ⑩ Driver airbag |
| ④ Knee airbags | ⑪ Rear side airbags |
| ⑤ "PASSENGER AIR BAG" indicator lights | ⑫ Side impact sensors (rear) |
| ⑥ Seat belt pretensioners and force limiters | ⑬ Driver's seat position sensor |
| ⑦ Side impact sensors (front) | ⑭ Driver's seat belt buckle switch |
| | ⑮ Airbag sensor assembly |
| | ⑯ Front impact sensors |

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

 WARNING**■ SRS airbag precautions**

Observe the following precautions regarding the SRS airbags.
Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly.
The SRS airbags are supplemental devices to be used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

Since the risk zone for the driver's airbag is the first 50 - 75 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:


- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the seat.
Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

WARNING

■ SRS airbag precautions

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P. 62)
- Do not sit on the edge of the seat or lean against the dashboard.

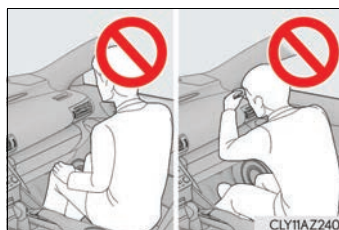

- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not allow the front seat occupants to hold items on their knees.



- Do not lean against the door, the roof side rail or the front, side and rear pillars.




⚠ WARNING**■ SRS airbag precautions**


- Do not allow anyone to kneel on the passenger seats toward the door or put their head or hands outside the vehicle.



- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel. These items can become projectiles when the SRS driver, front passenger and knee airbags deploy.

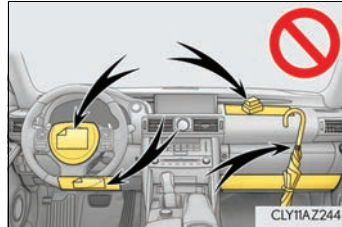

- Do not attach anything to areas such as a door, windshield glass, side door glass, front or rear pillar, roof side rail and assist grip.

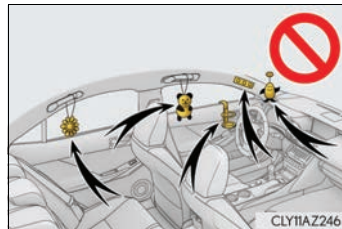

- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- If a vinyl cover is put on the area where the SRS knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the SRS airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.

**WARNING****■ SRS airbag precautions**

- Do not strike or apply significant levels of force to the area of the SRS airbag components.
Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by your Lexus dealer.

■ Modification and disposal of SRS airbag system components

Do not dispose of your vehicle or perform any of the following modifications without consulting your Lexus dealer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars or roof side rails
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows or winches
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as mobile two-way radios (RF-transmitter) and CD players

■ If the SRS airbags deploy (inflate)

- Slight abrasions, burns, bruising etc., may be sustained from SRS airbags, due to the extremely high speed deployment (inflation) by hot gases.
- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the seats, parts of the front and rear pillars, and roof side rails may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.
- All of the doors will be unlocked. (→P. 160)
- Fuel supply to the engine will be stopped. (→P. 600)

■ SRS airbag deployment conditions (SRS front airbags)

- The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20 - 30 km/h [12 - 18 mph] frontal collision with a fixed wall that does not move or deform).
However, this threshold velocity will be considerably higher in the following situations:
 - If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
 - If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle "underrides", or goes under, the bed of a truck
- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.


■ SRS airbag deployment conditions (SRS side and curtain shield airbags)

- The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 - 30 km/h [12 - 18 mph]).
- Both SRS curtain shield airbags may also deploy in the event of a severe frontal collision.

■ Conditions under which the SRS airbags may deploy (inflate), other than a collision


The SRS front airbags and SRS curtain shield airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.

- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

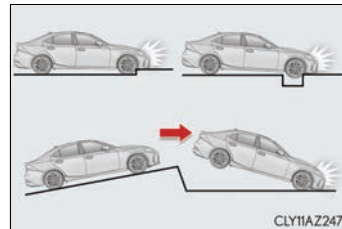**■ Types of collisions that may not deploy the SRS airbags (SRS front airbags)**

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.


- Collision from the side
- Collision from the rear
- Vehicle rollover

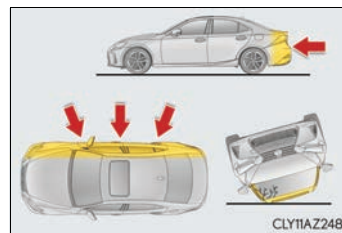

■ Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)


The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

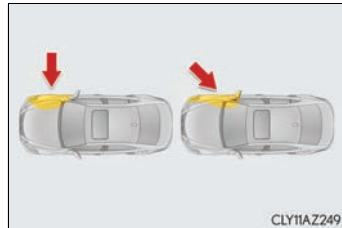


The SRS side airbags do not generally inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

- Collision from the front
- Collision from the rear
- Vehicle rollover

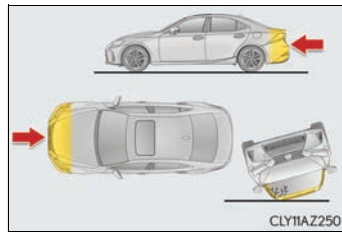

The SRS curtain shield airbags do not generally inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed side or low-speed frontal collision.


- Collision from the rear
- Vehicle rollover

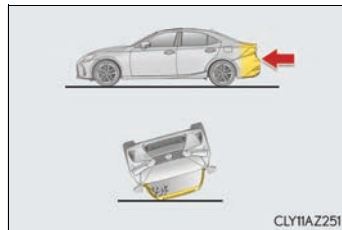


■ When to contact your Lexus dealer

In the following cases, the vehicle will require inspection and/or repair. Contact your Lexus dealer as soon as possible.


- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.

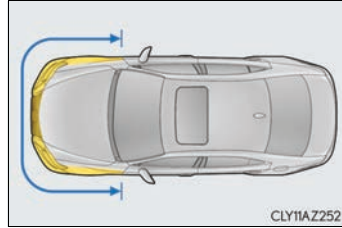


- A portion of a door or its surrounding area is damaged or deformed, or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate.

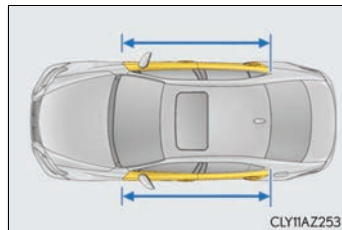


- The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.

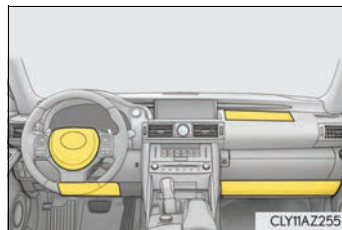

- The surface of the seats with the SRS side airbag is scratched, cracked, or otherwise damaged.

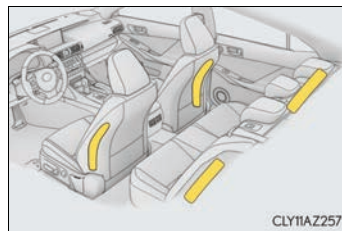

- The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the SRS curtain shield airbags inside is scratched, cracked, or otherwise damaged.

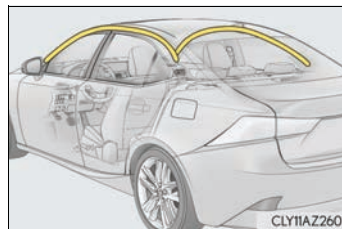


Pop Up Hood

In the event of a frontal collision with a body, such as a pedestrian, the Pop Up Hood system raises the rear portion of the hood to reduce the possibility of a serious impact to the pedestrian's head area by adding clearance to the engine compartment.

Pop Up Hood mechanism

When the sensors located at the back of the front bumper detect an impact with a body, such as a pedestrian, which meets or exceeds the threshold level while the vehicle is being driven within the operational speed range, the system becomes operational and raises the rear portion of the hood.

- ① Sensors
- ② Hood
- ③ Lifters

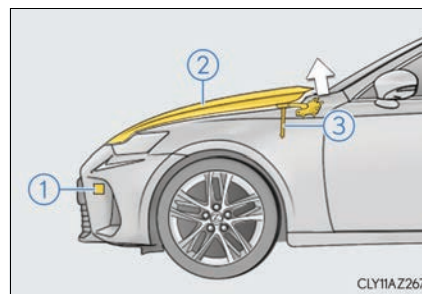

Pop Up Hood operational conditions

The Pop Up Hood will operate when the vehicle detects an impact such as the following:

- The front bumper detects a frontal impact equivalent to or greater than that of a pedestrian while the vehicle being driven within the operational speed range of approximately 25 to 55 km/h (16 to 34 mph). (The system is operated by an impact of threshold level or greater, even in the case of a minor collision that may not leave a trace on the front bumper. Also, depending on the impact conditions or vehicle speed, the system may be operated by a collision with a light or small object or a small animal.)
- In other situations the system may operate when an impact is applied to the lower part of the vehicle or front bumper, such as the following:
 - Colliding with a curb
 - Falling into a deep hole
 - Landing hard
 - Hitting the slope of a parking lot, an undulating road, a protruding object or falling object



WARNING

■ When the Pop Up Hood is operated

- Do not pull the hood lock release lever. Doing so after the Pop Up Hood has operated will further raise the hood and may cause an injury.
Do not drive with the hood raised, as doing so may block the driver's vision, possibly causing an accident.
Do not forcibly push down the hood. As the popped up hood cannot be lowered by hand, doing so may deform the hood or cause an injury.
If the Pop Up Hood has operated, have the vehicle inspected by your Lexus dealer. If the Pop Up Hood has operated, stop the vehicle in a safe place and contact your Lexus dealer.
- Do not touch the lifters immediately after the Pop Up Hood has operated, as the lifters may be hot and burn you.

■ Pop Up Hood precautions

- Before scrapping your vehicle, make sure to contact your Lexus dealer.
- The Pop Up Hood system cannot be reused once it has operated. Have it replaced by your Lexus dealer.

■ Conditions under which the Pop Up Hood may not operate properly

The Pop Up Hood may not operate properly under the following conditions:

- If a pedestrian collides with the right or left corner of the front bumper or the side of the vehicle. As such impacts may be difficult to detect, the system may not operate.
- If the vehicle speed is not detected correctly, such as if the vehicle is sliding sideways, the system may not operate properly.

■ Conditions under which the Pop Up Hood may not operate

The Pop Up Hood may not operate in the following situations:

- Colliding with a lying pedestrian
- A frontal impact applied to the front bumper while driving at speeds outside of the operational speed range
- A side impact or rear impact
- A vehicle rollover (In some accident situations, the Pop Up Hood may operate.)



NOTICE

■ Pop Up Hood precautions

- Make sure to close the hood before driving, as the system may not operate properly if the hood is not fully closed.
- Make sure that all 4 tires are of the specified size and inflated to the specified tire pressure (→P. 673, 675). If tires of a different size are used, the system may not operate properly.
- If something has hit the area around the front bumper, the sensors may be damaged even if the Pop Up Hood has not operated. Have the vehicle inspected by your Lexus dealer.
- Do not remove or repair the parts or wiring of the Pop Up Hood, as doing so may cause accidental operation or prevent the system from operating properly. If repair or replacement is necessary, contact your Lexus dealer.
- Do not remove such components as the front bumper, hood or suspension, or replace them with non-genuine parts, as doing so may prevent the system from operating properly.
- Do not install anything to the front bumper or hood, as doing so may prevent the sensors from detecting an impact correctly and prevent the system from operating properly.
- Do not close the hood with force or apply load to the lifters, as doing so may damage the lifters and prevent the system from operating properly.
- Do not modify the suspension, as changes made to the vehicle height may prevent the system from operating properly.

Exhaust gas precautions

Harmful substance to the human body is included in exhaust gases if inhaled.

WARNING

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.

Failure to do so may cause exhaust gases enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.

■ Important points while driving

- Keep the trunk lid closed.
- If you smell exhaust gases in the vehicle even when the trunk lid is closed, open the windows and have the vehicle inspected at your Lexus dealer as soon as possible.

■ When parking

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the engine.
- Do not leave the vehicle with the engine on for a long time.
If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the engine running in an area with snow build-up, or where it is snowing.
If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle.

■ Exhaust pipe

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Lexus dealer.

Airbag manual on-off system*


This system deactivates the front passenger airbag and front passenger knee airbag.

Only deactivate the airbags when using a child restraint system on the front passenger seat.

① "PASSENGER AIR BAG" indicator

The "ON" indicator light turns on when the airbag system is on (only when the engine switch is in IGNITION ON mode).

② Airbag manual on-off switch

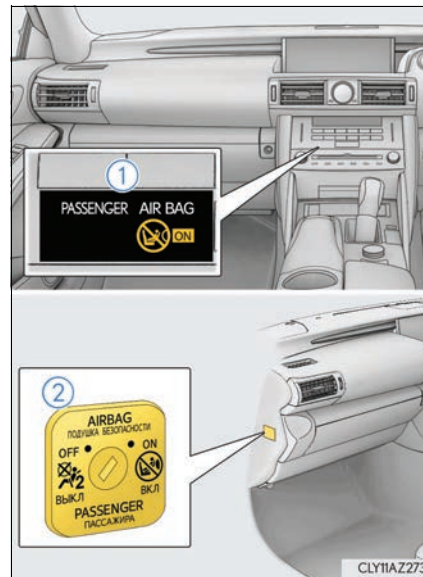

Deactivating the front seat passenger airbag and front passenger knee airbag

Insert the mechanical key into the cylinder and rotate to the "OFF" position.

The "OFF" indicator light turns on (only when the engine switch is in IGNITION ON mode).



*: If equipped

 "PASSENGER AIR BAG" indicator information

If any of the following problems occur, it is possible that there is a malfunction in the system. Have the vehicle inspected by your Lexus dealer.

- Neither "ON" nor "OFF" comes on.
- The indicator light does not change when the airbag manual on-off switch is switched to "ON" or "OFF".

**WARNING** **When installing a child restraint system**

For safety reasons, always install a child restraint system in a rear seat. In the event that the rear seat cannot be used, the front seat can be used as long as the airbag manual on-off system is set to off.

If the airbag manual on-off system is left on, the strong impact of the airbag deployment (inflation) may cause serious injury or even death.

 When a child restraint system is not installed on the front passenger seat

Ensure that the airbag manual on-off system is set to on.

If it is left off, the airbag may not deploy in the event of an accident, which may result in serious injury or even death.

Riding with children

Observe the following precautions when children are in the vehicle.
Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally.
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, trunk, seats etc.

WARNING

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Child restraint systems (except for Korea)

Before installing a child restraint system in the vehicle, there are precautions that need to be observed, different types of child restraint systems, as well as installation methods, etc., written in this manual.

Use a child restraint system when riding with a small child that cannot properly use a seat belt. For the child's safety, install the child restraint system to a rear seat. Be sure to follow the installation method that is in the operation manual enclosed with the restraint system.

Table of contents

Points to remember	P. 62
When using a child restraint system	P. 64
Child restraint system compatibility for each seating position	P. 69, 75, 81
Child restraint system installation method	P. 86
• Fixed with a seat belt	P. 87
• Fixed with an ISOFIX lower anchorage	P. 89
• Using a top tether anchorage	P. 91

Points to remember

- If child restraint system regulations exist in the country where you reside, please contact your Lexus dealer for the child restraint system installation.
- Use a child restraint system until the child becomes large enough to properly wear the vehicle's seat belt.
- Choose a child restraint system appropriate to the age and size of the child.
- Note that not all child restraint systems can fit in all vehicles. Before using or purchasing a child restraint system, check the compatibility of the child restraint system with seat positions. (→P. 69, 75, 81)

**WARNING****■ When a child is riding**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system which is correctly installed. For installation details, refer to the operation manual enclosed with the child restraint system. General installation instruction is provided in this manual.
- Lexus strongly urges the use of a proper child restraint system that conforms to the weight and size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Holding a child in your or someone else's arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield or between the holder and the interior of the vehicle.

■ Handling the child restraint system

If the child restraint system is not properly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving, or an accident.

- If the vehicle were to receive a strong impact from an accident, etc., it is possible that the child restraint system has damage that is not readily visible. In such cases, do not reuse the restraint system.
- Depending on the child restraint system, installation may be difficult or impossible. In those cases, check whether the child restraint system is suitable for installment in the vehicle. (→P. 69, 75, 81) Be sure to install and observe the usage rules after carefully reading the child restraint system fixing method in this manual, as well as the operation manual enclosed with the child restraint system.
- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the trunk.

When using a child restraint system

■ When installing a child restraint system to a front passenger seat (except for Taiwan)


For the safety of a child, install child restraint systems to a rear seats. When installing child restraint system to a front passenger seat is unavoidable, adjust the seat as follows and install the child restraint system.

- Move the seat fully rearward
- Move the seat height to the upper most position
- Adjust the seatback angle to the most upright position.

Vehicles without an airbag manual on-off switch: If there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

Vehicles with an airbag manual on-off switch: When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

- If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

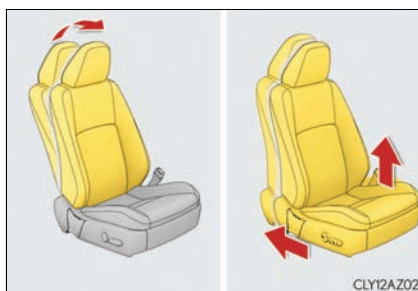

⚠ WARNING


■ When using a child restraint system (except for Taiwan)

Observe the following precautions.

Failure to do so may result in death or serious injury.



- Vehicles without an airbag manual on-off switch: Never use a rear-facing child restraint system on the front passenger seat.

The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

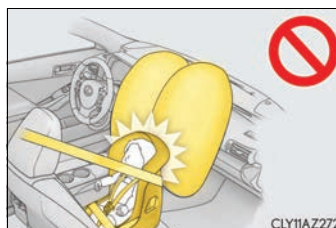

⚠ WARNING**■ When using a child restraint system (except for Taiwan)**

- Vehicles with an airbag manual on-off switch:
Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on. (→P. 59)
The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.
- There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat.
Details of the label(s) are shown in the illustration below.

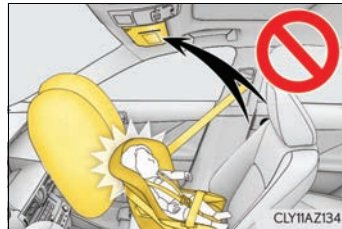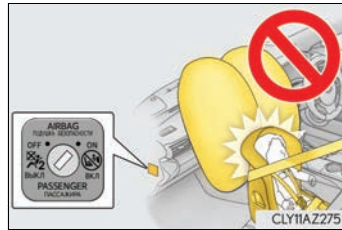


WARNING

■ When using a child restraint system (except for Taiwan)

- Vehicles without an airbag manual on-off switch:

Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible. Failing to do so may result in death or serious injury if the airbags deploy (inflate).

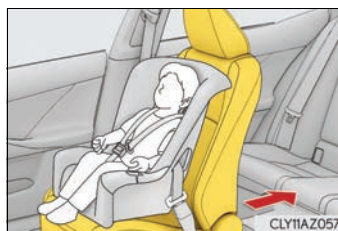

- Vehicles with an airbag manual on-off switch:

When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible. Failure to do so may result in death or serious injury if the airbags deploy (inflate).

■ When using a child restraint system (except for Taiwan)

- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars, or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.



- When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Use child restraint system suitable to the age and size of the child and install it to the rear seat.

- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat (left-hand drive vehicles) or the left-hand rear seat (right-hand drive vehicles).




- Adjust the front passenger seat so that it does not interfere with the child restraint system.

⚠ WARNING**■ When using a child restraint system (for Taiwan)**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a child restraint system to the front passenger seat. Details of the label(s) are shown in the illustration below.

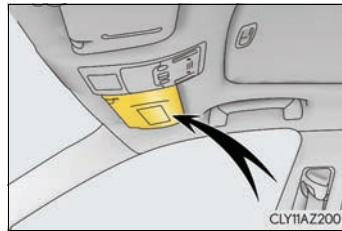


"9L" in the illustration is not related to the contents of the warning label.

WARNING

■ When using a child restraint system (for Taiwan)

- Never use a child restraint system on the front passenger seat.

The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

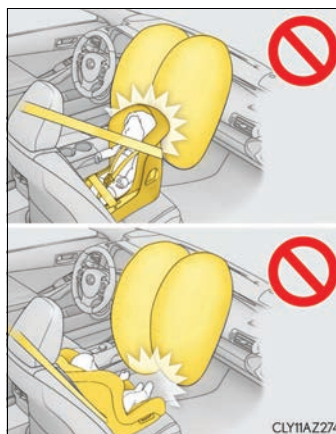

- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars, or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.



- When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Use child restraint system suitable to the age and size of the child and install it to the rear seat.
- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat.
- Adjust the front passenger seat so that it does not interfere with the child restraint system.



Child restraint system compatibility for each seating position (for Thailand, Malaysia and Argentina)

■ Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (→P. 71) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols.

Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

■ Before confirming the compatibility of each seating position with child restraint systems

1 Checking the child restraint system standards.

Use a child restraint system that conforms to UN(ECE) R44*¹.


The following approval mark is displayed on child restraint systems which are conformed.

Check for an approval mark attached to the child restraint system.

Example of the displayed regulation number

UN(ECE) R44 approval mark*²

The weight range of the child who is applicable for an UN(ECE) R44 approval mark is indicated.

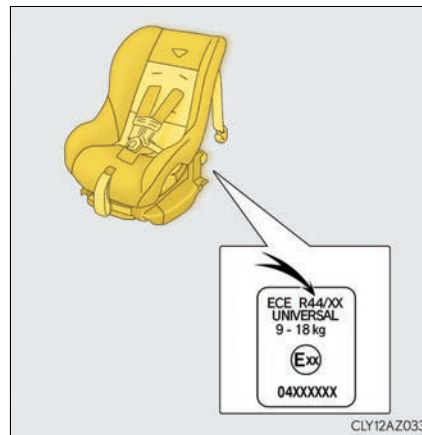

*1: UN(ECE) R44 is a U.N. regulations for child restraint systems.

*2: The displayed mark may differ depending on the product.

2 Checking the category of the child restraint system.

Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable.


Also, if there are any uncertainties, check the user's guide included with the child restraint system or contact the retailer of the child restraint system.

- “universal”
- “semi-universal”
- “restricted”
- “vehicle specific”



- Compatibility of each seating position with child restraint systems
- ▶ Left-hand drive vehicles

▶ Right-hand drive vehicles

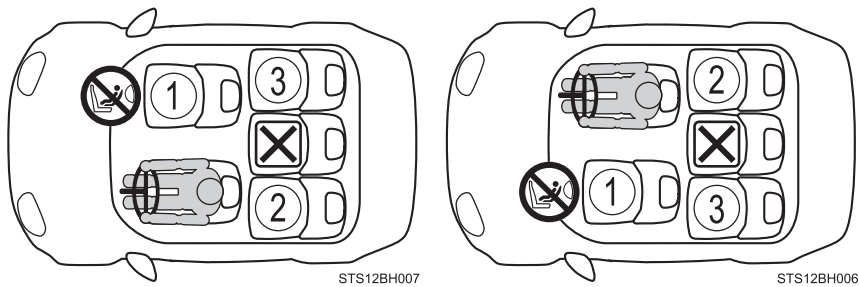

^{*1,2,3} ①	^{*4} U
^{*3} ②	U  
^{*3} ③	U  



Suitable for "universal" category child restraint system fixed with the seat belt.



Suitable for ISOFIX child restraint system.



Includes a top tether anchorage point.



Not suitable for child restraint system.



Never use a rear-facing child restraint system on the front passenger seat.

*1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

*2: Adjust the seatback angle to the most upright position.

When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.



*3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.

Otherwise, put the head restraint in the upper most position.

*4: Use only a front-facing child restraint system.

■ Detail information for child restraint system installation

Seating position			
Seat position number	①	②	③
Seating position suitable for universal belted (yes/no)	yes For- ward facing only	yes	yes
i-Size seating position (yes/no)	no	no	no
Seating position suitable for lateral fixture (L1/L2/no)	no	no	no
Suitable rearward facing fixture (R1/R2X/R2/R3/no)	no	R1, R2, R3	R1, R2, R3
Suitable forward facing fixture (F2X/F2/F3/no)	no	F2X, F2, F3	F2X, F2, F3
Suitable junior seat fixture (B2/B3/no)	no	no	no

ISOFIX child restraint systems are divided into different “fixture”. The child restraint system can be used in the seating positions for “fixture” mentioned in the table above. For kind of “fixture” relation, confirm the following table.


If your child restraint system has no kind of “fixture” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

Fixture	Description
F3	Full-height, forward-facing child restraint systems
F2	Reduced-height forward-facing child restraint systems
F2X	Reduced-height forward-facing child restraint systems
R3	Full-size, rearward-facing child restraint systems
R2	Reduced-size, rearward-facing child restraint systems
R2X	Reduced-size, rearward-facing child restraint systems
R1	Rearward-facing infant seat
L1	Left lateral-facing (carrycot) infant seat
L2	Right lateral-facing (carrycot) infant seat
B2	Junior seat
B3	Junior seat

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position.

Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.
- If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

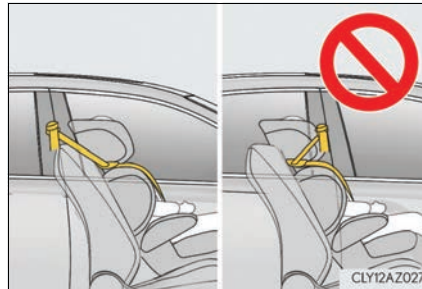

- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

Child restraint system compatibility for each seating position (for South Africa)

■ Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (→P. 77) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols.

Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

■ Before confirming the compatibility of each seating position with child restraint systems

1 Checking the child restraint system standards.

Use a child restraint system that conforms to UN(ECE) R44*¹.


The following approval mark is displayed on child restraint systems which are conformed.

Check for an approval mark attached to the child restraint system.

Example of the displayed regulation number

UN(ECE) R44 approval mark*²

The weight range of the child who is applicable for an UN(ECE) R44 approval mark is indicated.

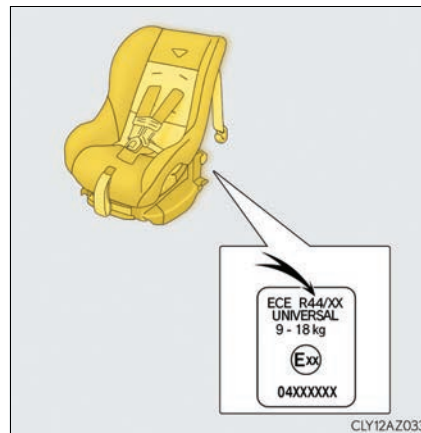

*1: UN(ECE) R44 is a U.N. regulations for child restraint systems.

*2: The displayed mark may differ depending on the product.

2 Checking the category of the child restraint system.


Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable.

Also, if there are any uncertainties, check the user's guide included with the child restraint system or contact the retailer of the child restraint system.

- “universal”
- “semi-universal”
- “restricted”
- “vehicle specific”



■ Compatibility of each seating position with child restraint systems

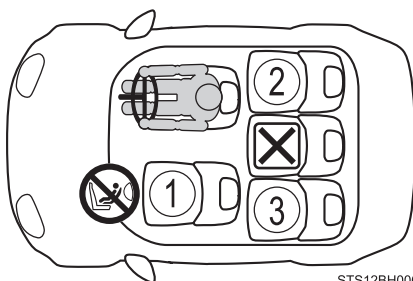

*1, 2, 3 ①	*4 U
*3 ②	U  
*3 ③	U  



Suitable for “universal” category child restraint system fixed with the seat belt.



Suitable for ISOFIX child restraint system.



Includes a top tether anchorage point.



Not suitable for child restraint system.



Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on.

*1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

*2: Adjust the seatback angle to the most upright position.

When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.



*3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.

Otherwise, put the head restraint in the upper most position.

*4: Use only a front-facing child restraint system when the airbag manual on-off switch is on.

■ Detail information for child restraint system installation

Seat position number	Seating position			
	①	②	③	
	Airbag manual on-off switch			
	ON			OFF
Seating position suitable for universal belted (yes/no)	yes For- ward facing only	yes	yes	yes
i-Size seating position (yes/no)	no	no	no	no
Seating position suitable for lateral fixture (L1/L2/no)	no	no	no	no
Suitable rearward facing fixture (R1/R2X/R2/R3/no)	no	no	R1,R2, R3	R1,R2, R3
Suitable forward facing fixture (F2X/F2/F3/no)	no	no	F2X, F2, F3	F2X, F2, F3
Suitable junior seat fixture (B2/B3/no)	no	no	no	no

ISOFIX child restraint systems are divided into different “fixture”. The child restraint system can be used in the seating positions for “fixture” mentioned in the table above. For kind of “fixture” relation, confirm the following table.

If your child restraint system has no kind of “fixture” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.


Fixture	Description
F3	Full-height, forward-facing child restraint systems
F2	Reduced-height forward-facing child restraint systems
F2X	Reduced-height forward-facing child restraint systems
R3	Full-size, rearward-facing child restraint systems
R2	Reduced-size, rearward-facing child restraint systems
R2X	Reduced-size, rearward-facing child restraint systems
R1	Rearward-facing infant seat

Fixture	Description
L1	Left lateral-facing (carrycot) infant seat
L2	Right lateral-facing (carrycot) infant seat
B2	Junior seat
B3	Junior seat

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position.

Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.
- If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

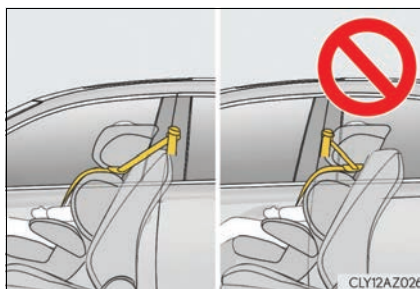

- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

Child restraint system compatibility for each seating position (for Taiwan)

■ Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (→P. 83) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols.

Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

■ Before confirming the compatibility of each seating position with child restraint systems

1 Checking the child restraint system standards.

Use a child restraint system that conforms to UN(ECE) R44*¹.


The following approval mark is displayed on child restraint systems which are conformed.

Check for an approval mark attached to the child restraint system.

Example of the displayed regulation number

UN(ECE) R44 approval mark*²

The weight range of the child who is applicable for an UN(ECE) R44 approval mark is indicated.

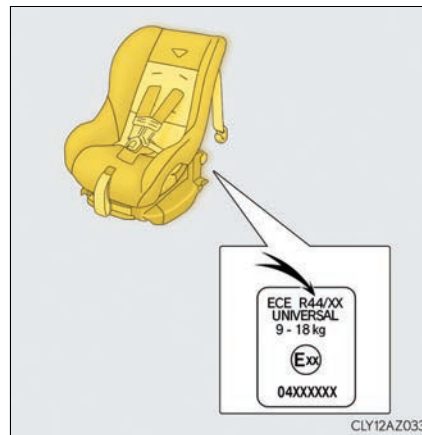

*1: UN(ECE) R44 is a U.N. regulations for child restraint systems.

*2: The displayed mark may differ depending on the product.

2 Checking the category of the child restraint system.


Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable.

Also, if there are any uncertainties, check the user's guide included with the child restraint system or contact the retailer of the child restraint system.

- “universal”
- “semi-universal”
- “restricted”
- “vehicle specific”



■ Compatibility of each seating position with child restraint systems

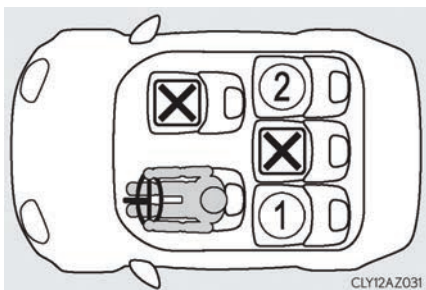	* ①	U ISO Anchor
	* ②	U ISO Anchor



Suitable for “universal” category child restraint system fixed with the seat belt.



Suitable for ISOFIX child restraint system.



Includes a top tether anchorage point.



Not suitable for child restraint system.

*: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

■ Detail information for child restraint system installation

Seating position		
Seat position number	①	②
Seating position suitable for universal belted (yes/no)	yes	yes
i-Size seating position (yes/no)	no	no
Seating position suitable for lateral fixture (L1/L2/no)	no	no
Suitable rearward facing fixture (R1/R2X/R2/R3/no)	R1, R2, R3	R1, R2, R3
Suitable forward facing fixture (F2X/F2/F3/no)	F2X, F2, F3	F2X, F2, F3
Suitable junior seat fixture (B2/B3/no)	no	no

ISOFIX child restraint systems are divided into different “fixture”. The child restraint system can be used in the seating positions for “fixture” mentioned in the table above. For kind of “fixture” relation, confirm the following table.

If your child restraint system has no kind of “fixture” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

Fixture	Description
F3	Full-height, forward-facing child restraint systems
F2	Reduced-height forward-facing child restraint systems
F2X	Reduced-height forward-facing child restraint systems
R3	Full-size, rearward-facing child restraint systems
R2	Reduced-size, rearward-facing child restraint systems
R2X	Reduced-size, rearward-facing child restraint systems
R1	Rearward-facing infant seat
L1	Left lateral-facing (carrycot) infant seat
L2	Right lateral-facing (carrycot) infant seat
B2	Junior seat
B3	Junior seat



When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position.

Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.

Child restraint system installation method

Confirm with the operation manual enclosed with the child restraint system about the installation of the child restraint system.

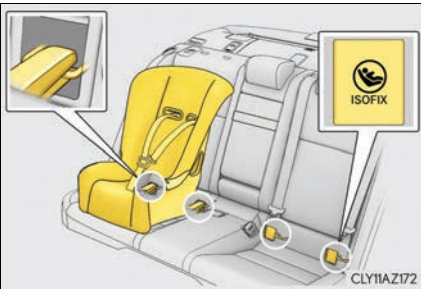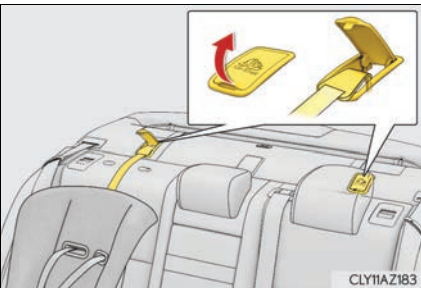
Installation method		Page
Seat belt attachment		P. 87
ISOFIX lower anchorage attachment		P. 89
Top tether anchorage attachment		P. 91

Child restraint system fixed with a seat belt

■ Installing child restraint system using a seat belt

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

If the child restraint system on hand is not within the “universal” category (or the necessary information is not in the table), refer to the “Vehicle List” provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child seat. (→P. 69, 75, 81)

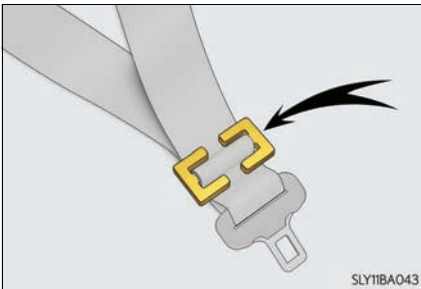- 1 If installing the child restraint system to the front passenger seat is unavoidable, refer to P. 64 for the front passenger seat adjustment.
- 2 Adjust the seatback angle to the most upright position.
When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.
- 3 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P. 184)
- 4 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted. Securely fix the seat belt to the child restraint system in accordance to the directions enclosed with the child restraint system.
 
- 5 If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.
 
- 6 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P. 64)

■ Removing a child restraint system installed with a seat belt

Press the buckle release button and fully retract the seat belt.

When releasing the buckle, the child restraint system may spring up due to the rebound of the seat cushion. Release the buckle while holding down the child restraint system.

Since the seat belt automatically reels itself, slowly return it to the stowing position.

■ When installing a child restraint system

You may need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from your Lexus dealer: Locking clip for child restraint system (Part No. 73119-22010)

WARNING

■ When installing a child restraint system

Observe the following precautions.


Failure to do so may result in death or serious injury.

- Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.
If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Follow all installation instructions provided by the child restraint system manufacturer.

Child restraint system fixed with an ISOFIX lower anchorage

■ ISOFIX lower anchorages (ISOFIX child restraint system)

Lower anchorages are provided for the outboard rear seats. (Marks displaying the location of the anchorages are attached to the seats.)

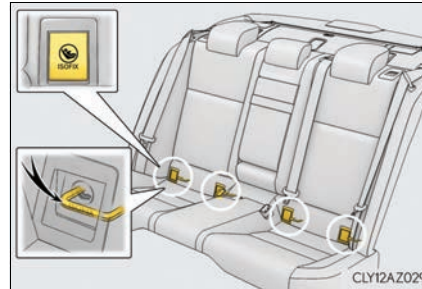

■ Installation with ISOFIX lower anchorage (ISOFIX child restraint system)

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

If the child restraint system on hand is not within the “universal” category (or the necessary information is not in the table), refer to the “Vehicle List” provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child seat.

(→P. 69, 75, 81)

- 1 Adjust the seatback angle to the most upright position.
When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.
- 2 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P. 184)

- 3 Remove the anchorage covers, and install the child restraint system to the seat.

The bars are installed behind the anchorage covers.



- 4 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P. 88)

⚠ WARNING

■ **When installing a child restraint system**

Observe the following precautions.
Failure to do so may result in death or serious injury.


- After securing a child restraint system, never adjust the seat.
- When using the lower anchorages, be sure that there are no foreign objects around the anchorages and that the seat belt is not caught behind the child restraint system.
- Follow all installation instructions provided by the child restraint system manufacturer.

Using a top tether anchorage

■ Top tether anchorages

Top tether anchorages are provided for the following seats.

Use top tether anchorages when fixing the top strap.

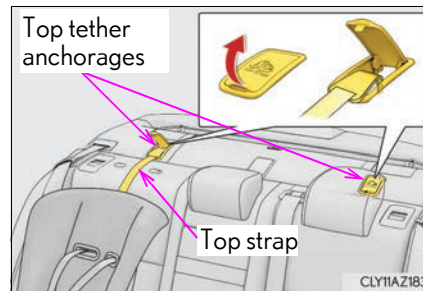

■ Fixing the top strap to the top tether anchorages

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.


- 1 Remove the head restraint if it interferes with your child restraint system. (→P. 184)

If the head restraint cannot be removed, raise it to the uppermost position.

- 2 Open the top tether anchorage cover, latch the hook onto the top tether anchorage and tighten the top strap.

Make sure the top strap is securely latched. (→P. 88)

When installing the child restraint system with the head restraint being raised, be sure to have the top strap pass underneath the head restraint.

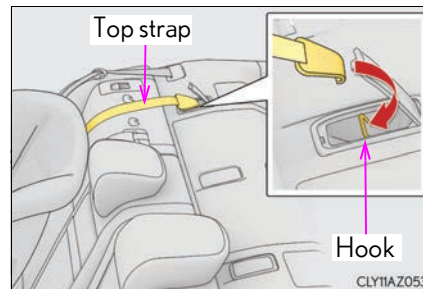

**WARNING****■ When installing a child restraint system**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Firmly attach the top strap and make sure that the belt is not twisted.
- Do not attach the top strap to anything other than the top tether anchorage.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the top tether anchorage has been fixed, do not lower the head restraint.

**NOTICE****■ Top tether anchorages**

When not in use, make certain to close the lid. If it remains open, the lid may be damaged.

Child restraint systems (for Korea)

Before installing a child restraint system in the vehicle, there are precautions that need to be observed, different types of child restraint systems, as well as installation methods, etc., written in this manual.

Use a child restraint system when riding with a small child that cannot properly use a seat belt. For the child's safety, install the child restraint system to a rear seat. Be sure to follow the installation method that is in the operation manual enclosed with the restraint system.

Table of contents

Points to remember	P. 93
Child restraint system	P. 95
When using a child restraint system	P. 96
Child restraint system installation method	
• Fixed with a seat belt.....	P. 98
• Fixed with an ISOFIX an ISOFIX rigid anchor	P. 100
• Using an anchor bracket (for top strap).....	P. 102

Points to remember

- If child restraint system regulations exist in the country where you reside, please contact your Lexus dealer for the child restraint system installation.
- Use a child restraint system until the child becomes large enough to properly wear the vehicle's seat belt.
- Choose a child restraint system that suits your vehicle and is appropriate to the age and size of the child.

**WARNING****■ When a child is riding**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system which is correctly installed. For installation details, refer to the operation manual enclosed with the child restraint system. General installation instruction is provided in this manual.
- Lexus strongly urges the use of a proper child restraint system that conforms to the weight and size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Holding a child in your or someone else's arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield or between the holder and the interior of the vehicle.

■ Handling the child restraint system



If the child restraint system is not properly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving, or an accident.

- If the vehicle were to receive a strong impact from an accident, etc., it is possible that the child restraint system has damage that is not readily visible. In such cases, do not reuse the restraint system.
- Make sure you have complied with all installation instructions provided with the child restraint system manufacturer and that the system is properly secured.
- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the trunk.

Child restraint system

■ Types of child restraint system installation methods

Confirm with the operation manual enclosed with the child restraint system about the installation of the child restraint system.

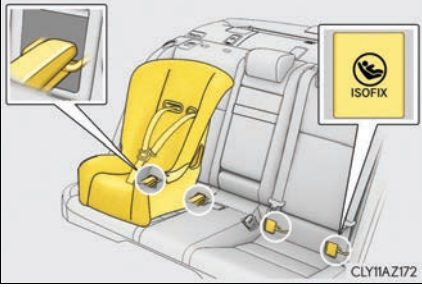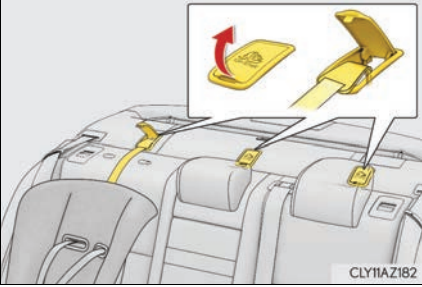
Installation method		Page
Seat belt attachment		P. 98
ISOFIX rigid anchor attachment		P. 100
Anchor brackets (for top strap) attachment		P. 102

When using a child restraint system

■ When installing a child restraint system to a front passenger seat

For the safety of a child, install child restraint systems to a rear seats. When installing child restraint system to a front passenger seat is unavoidable, adjust the seat as follows and install the child restraint system.

- Move the seat to the rearmost position
- Raise the seat to the highest position
- Raise the seatback as much as possible
- If the head restraint interferes with the installation of the child restraint system, and the head restraint can be removed, remove the head restraint

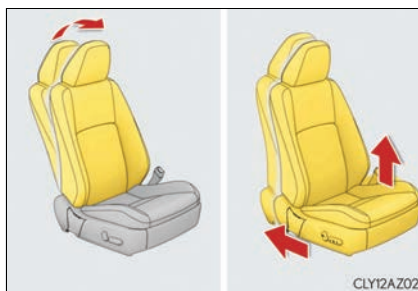

If the head restraint cannot be removed, raise it to the uppermost position.

⚠ WARNING

■ When using a child restraint system

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Never use a rear-facing child restraint system on the front passenger seat. The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.
- A forward-facing child restraint system may be installed on the front passenger seat only when it is unavoidable. A child restraint system that requires a top strap should not be used in the front passenger seat since there is no top strap anchor for the front passenger seat.
- Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible. Failing to do so may result in death or serious injury if the airbags deploy (inflate).



⚠ WARNING

■ **When using a child restraint system**

- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars, or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.
- When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Use child restraint system suitable to the age and size of the child and install it to the rear seat.
- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat.
- Adjust the front passenger seat so that it does not interfere with the child restraint system.



Child restraint system fixed with a seat belt

◆ Installing child restraint system using a seat belt

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

1 Adjust the seat

- ▶ When using the front passenger seat

If installing the child restraint system to the front passenger seat is unavoidable, refer to P. 65 for the front passenger seat adjustment.

- ▶ When using the rear seat

If there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.


2 Remove the head restraint if it interferes with your child restraint system. (→P. 184)

If the head restraint cannot be removed, raise it to the uppermost position.

3 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted. Securely fix the seat belt to the child restraint system in accordance to the directions enclosed with the child restraint system.



4 If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.

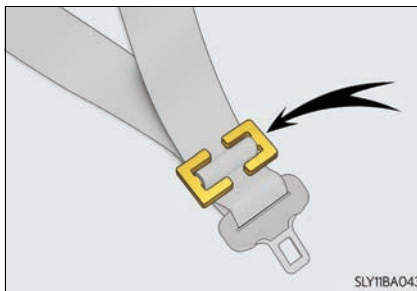

5 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P. 99)

◆ Removing a child restraint system installed with a seat belt

Press the buckle release button and fully retract the seat belt.

When releasing the buckle, the child restraint system may spring up due to the rebound of the seat cushion. Release the buckle while holding down the child restraint system.

Since the seat belt automatically reels itself, slowly return it to the stowing position.

■ When installing a child restraint system

You may need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from your Lexus dealer: Locking clip for child restraint system (Part No. 73119-22010)



WARNING

■ When installing a child restraint system

Observe the following precautions.


Failure to do so may result in death or serious injury.

- Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.
If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When securing some types of child restraint systems in rear seats, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.
- When installing a child restraint system in the rear center seat, adjust both seat cushions to the same position and align both seatbacks at the same angle. The seatbacks must be adjusted to the same angle. Otherwise, the child restraint system cannot be securely restrained and this may cause death or serious injuries in the event of sudden braking, sudden swerving or an accident.

Child restraint system fixed with an ISOFIX rigid anchor

■ ISOFIX rigid anchor (ISOFIX child restraint system)

Lower anchors are provided for the outboard rear seats. (Marks displaying the location of the anchorages are attached to the seats.)

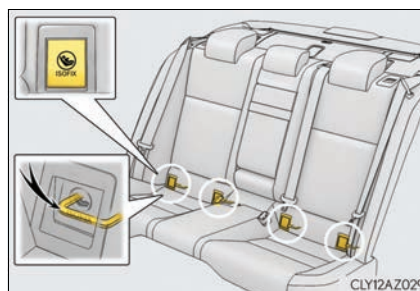

■ When installing in the rear outboard seats

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

1 Adjust the seat

If there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

2 Remove the head restraint if it interferes with your child restraint system. (→P. 184)

If the head restraint cannot be removed, raise it to the uppermost position.

3 Remove the anchorage covers, and install the child restraint system to the seat.

The bars are installed behind the anchorage covers.



- 4 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P. 99)

 WARNING

■ **When installing a child restraint system**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- When using the lower anchorages, be sure that there are no foreign objects around the anchorages and that the seat belt is not caught behind the child restraint system.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When securing some types of child restraint systems in rear seats, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.
- If the seat is adjusted, reconfirm the security of the child restraint system.

1


For safety and security

Using an anchor bracket (for top tether strap)

■ Anchor brackets (for top tether strap)

Anchor bracket are provided for the each rear seat.

Use top tether anchorages when fixing the top strap.

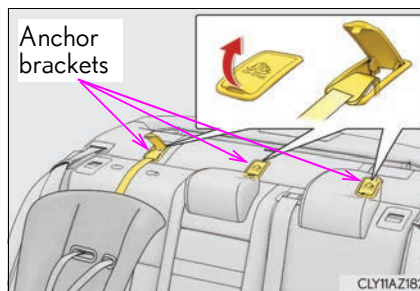

■ Fixing the top strap to the Anchor bracket

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.


- 1 Remove the head restraint if it interferes with your child restraint system. (→P. 184)

If the head restraint cannot be removed, raise it to the uppermost position.

- 2 Open the top tether anchorage cover, latch the hook onto the Anchor bracket and tighten the top strap.

Make sure the top strap is securely latched. (→P. 99)

When installing the child restraint system with the head restraint being raised, be sure to have the top strap pass underneath the head restraint.

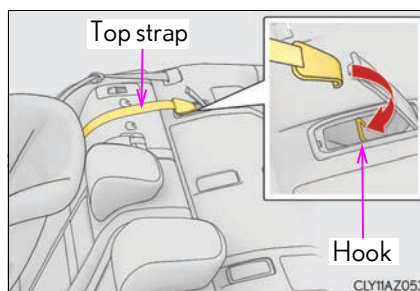

**WARNING****■ When installing a child restraint system**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Firmly attach the top strap and make sure that the belt is not twisted.
- Do not attach the top strap to anything other than the top tether anchorage of the seat the child restraint system is installed to.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the Anchor brackets has been fixed, do not lower the head restraint.

**NOTICE****■ Anchor brackets (for top strap)**

When not in use, make certain to close the lid. If it remains open, the lid may be damaged.

Engine immobilizer system


The vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

The indicator light flashes after the engine switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the engine switch has been turned to ACCESSORY or IGNITION ON mode to indicate that the system has been canceled.

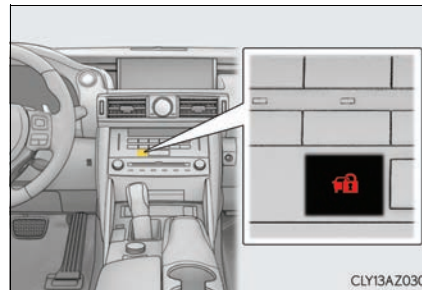

■ System maintenance

The vehicle has a maintenance-free type engine immobilizer system.

■ Conditions that may cause the system to malfunction

- If the grip portion of the key is in contact with a metallic object
- If the key is in close proximity to or touching a key registered to the security system (key with a built-in transponder chip) of another vehicle

■ Certifications for the engine immobilizer system

- For vehicles sold in Dominican Republic

FCC ID: NI4TMIMB-3

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Taiwan

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

- For vehicles sold in Korea



상호명/제조사

: Toyota Motor Corporation

기자재의 명칭(모델명)

: 미약전계강도 무선기기(TMIMB-3K2)

제조년월/제조국

: Shown on product./Japan

식별부호

: NI4-TMIMB-3K1

- For vehicles sold in Singapore

Complies with
IMDA Standards
DA101418



NOTICE


■ To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Double locking system*

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.

Vehicles employing this system have labels on the window glass of both front doors.

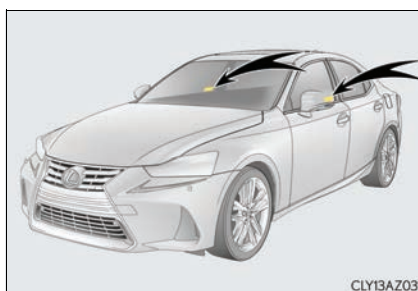

Setting the double locking system

Turn the engine switch off, have all the passengers exit the vehicle and ensure that all the doors are closed.

Using the entry function:

Touch the sensor area on the outside door handle twice within 5 seconds.

Using the wireless remote control:

Press  twice within 5 seconds.

Canceling the double locking system

Using the entry function: Hold the outside door handle.

Using the wireless remote control: Press  .

WARNING

■ Double locking system precaution

Never activate the double locking system when there are people in the vehicle because all the doors cannot be opened from inside the vehicle.

*: If equipped

Alarm

The alarm

The alarm uses light and sound to give an alert when an intrusion is detected.


The alarm is triggered in the following situations when the alarm is set:

- ▶ Except for Korea, South Africa, Malaysia, Taiwan and the Philippines
- A locked door is unlocked or opened in any way other than using the entry function, wireless remote control or mechanical key. (The doors will lock again automatically.)
- The trunk is opened in any way other than using the entry function or wireless remote control.
- The hood is opened.
- The intrusion sensor detects something moving inside the vehicle. (An intruder gets in the vehicle.) (if equipped)
- The tilt sensor detects a change of vehicle inclination. (if equipped)
- ▶ For Korea, South Africa, Malaysia, Taiwan and the Philippines
- A locked door or trunk is unlocked or opened in any way other than using the entry function or wireless remote control. (The doors will lock again automatically.)
- The hood is opened.
- The intrusion sensor detects something moving inside the vehicle. (An intruder gets in the vehicle.) (if equipped)
- The tilt sensor detects a change of vehicle inclination. (if equipped)

Setting the alarm system

Close the doors, trunk and hood, and lock all the doors using the entry function or wireless remote control. The system will be set automatically after 30 seconds.

Except for Korea, South Africa, Malaysia, Taiwan and the Philippines, the alarm can also be set using the mechanical key.

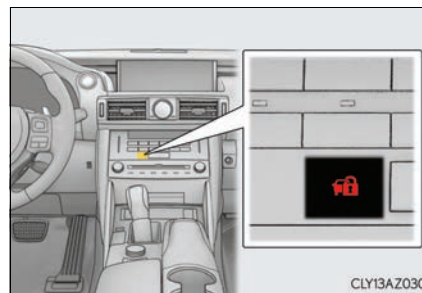

The indicator light changes from being on to flashing when the system is set.

Deactivating or stopping the alarm

Do one of the following to deactivate or stop the alarm:

- ▶ Except for Korea, South Africa, Malaysia, Taiwan and the Philippines
 - Unlock the doors.
 - Open the trunk using the entry function or wireless remote control.
 - Turn the engine switch to ACCESSORY or IGNITION ON mode, or start the engine. (The alarm will be deactivated or stopped after a few seconds.)
- ▶ For Korea, South Africa, Malaysia, Taiwan and the Philippines
 - Unlock the doors or open the trunk using the entry function or wireless remote control.
 - Start the engine. (The alarm will be deactivated or stopped after a few seconds.)

■ System maintenance

The vehicle has a maintenance-free type alarm system.

■ Items to check before locking the vehicle


To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:

- Nobody is in the vehicle.
- The windows and moon roof (if equipped) are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.


■ Triggering of the alarm

The alarm may be triggered in the following situations:
(Stopping the alarm deactivates the alarm system.)

- For Korea, South Africa, Malaysia, Taiwan and the Philippines:
The doors are unlocked using the mechanical key.

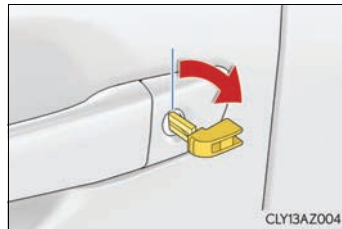


- The trunk is opened using the mechanical key.

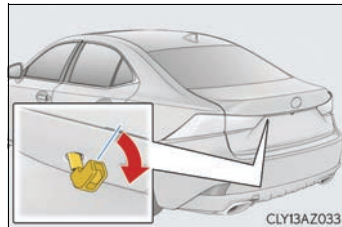

- A person inside the vehicle opens a door or the trunk or hood, or unlocks the vehicle.



- The battery is recharged or replaced when the vehicle is locked. (→P. 653)

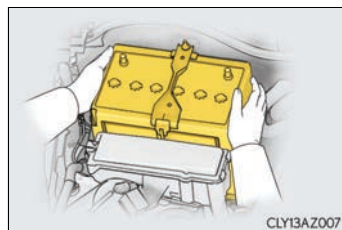

■ Alarm-operated door lock

In the following cases, depending on the situation, the door may automatically lock to prevent improper entry into the vehicle:

- When a person remaining in the vehicle unlocks the door and the alarm is activated.
- While the alarm is activated, a person remaining in the vehicle unlocks the door.
- When recharging or replacing the battery

**NOTICE**

■ **To ensure the system operates correctly**

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Intrusion sensor (if equipped) /Intrusion sensor and tilt sensor (if equipped)

- The intrusion sensor detects intruders or movement in the vehicle.
- The tilt sensor detects changes in vehicle inclination, such as when the vehicle is towed away.

This system is designed to deter and prevent vehicle theft but does not guarantee absolute security against all intrusions.

■ **Setting the intrusion sensor and tilt sensor**

The intrusion sensor and tilt sensor will be set automatically when the alarm is set. (→P. 107)


■ **Canceling the intrusion sensor and tilt sensor**

If you are leaving pets or other moving things inside the vehicle, make sure to disable the intrusion sensor and tilt sensor before setting the alarm, as they will respond to movement inside the vehicle.

- 1 Turn the engine switch off.
- 2 Press the intrusion sensor and tilt sensor cancel switch.

Press the switch again to re-enable the intrusion sensor and tilt sensor.

Each time the intrusion sensor is canceled/set, a message will be shown on the multi-information display in the instrument cluster.

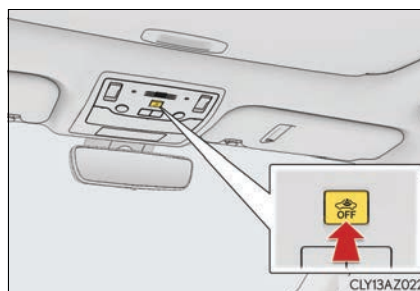



■ Canceling and automatic re-enabling of the intrusion sensor and tilt sensor

- The alarm will still be set even when the intrusion sensor and tilt sensor are canceled.
- After the intrusion sensor and tilt sensor are canceled, pressing the engine switch or unlocking the doors using the entry function or wireless remote control will re-enable the intrusion sensor and tilt sensor. (Except for Malaysia and South Africa, the mechanical key can also be used.)
- The intrusion sensor and tilt sensor will automatically be re-enabled when the alarm system is deactivated.

■ Intrusion sensor detection considerations

The sensor may trigger the alarm in the following situations:

- A window or the moon roof is open.
In this case, the sensor may detect the following:
 - Wind or the movement of objects such as leaves and insects inside the vehicle
 - Ultrasonic waves emitted from devices such as the intrusion sensors of other vehicles
 - The movement of people outside the vehicle
- Unstable items, such as dangling accessories or clothes hanging on the coat hooks, are in the vehicle.

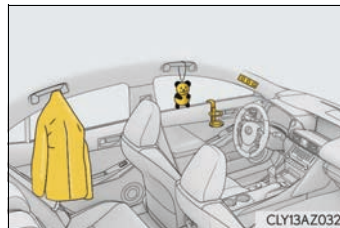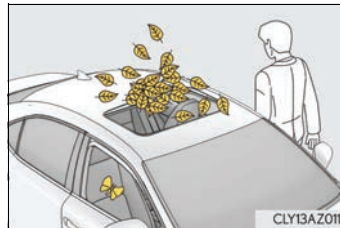

- Places with extreme vibrations or noises, or situations in which the vehicle is subject to repeated impacts or vibrations:
 - When parked in a parking garage
 - When the vehicle is transported on a ferry, trailer, train, etc.
 - When ice adhering to the vehicle is removed
 - When the vehicle is in an automatic or high-pressure car wash
 - When in a hail or lightning storm

■ Tilt sensor detection considerations

The sensor may trigger the alarm in the following situations:

- The vehicle is transported by a ferry, trailer, train, etc.
- The vehicle is parked in a parking garage.
- The vehicle is inside a car wash that moves the vehicle.
- Any of the tires loses air pressure.
- The vehicle is jacked up.
- An earthquake occurs or the road caves in.



NOTICE

■ To ensure the intrusion sensor functions correctly (if equipped)

- To ensure that the sensors operate properly, do not touch or cover them.



- Do not spray air fresheners or other products directly into the sensor holes.



- Installing accessories other than genuine Lexus parts or leaving objects between the driver's seat and front passenger's seat may reduce the detection performance.

Instrument cluster

2

2. Instrument cluster

Warning lights and indicators.....	114
Gauges and meters	119
Multi-information display	124
Fuel consumption information	141

Warning lights and indicators

The warning lights and indicators on the instrument cluster and center panel inform the driver of the status of the vehicle's various systems.

For the purpose of explanation, the following illustrations display all warning lights and indicators illuminated.

- Except F SPORT models



- F SPORT models



Warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle systems.

^{*1} 	Brake system warning light (→P. 601)	^{*1} 	Slip indicator (→P. 602)
^{*1} 	Charging system warning light (→P. 601) (if equipped)	^{*1,2} 	Stop & Start cancel indicator (→P. 602) (if equipped)
^{*1} 	Malfunction indicator lamp (→P. 601)		Open door warning light (→P. 602)
^{*1} 	SRS warning light (→P. 601)		Low fuel level warning light (→P. 603)
^{*1} 	ABS warning light (→P. 601)		Driver's and front passenger's seat belt reminder light (→P. 603)
	Parking brake warning light (→P. 601)	^{*3} 	Rear passengers' seat belt reminder lights (→P. 603) (if equipped)
^{*1} 	Electric power steering system warning light (→P. 602)	^{*1} 	Master warning light (→P. 603)
	LDA (Lane Departure Alert) indicator (→P. 602) (if equipped)	^{*1} 	Tire pressure warning light (→P. 603)
^{*1} 	PCS warning light (→P. 602) (if equipped)		

^{*1}: These lights turn on when the engine switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or turn off. Have the vehicle inspected by your Lexus dealer.

^{*2}: The light flashes to indicate a malfunction.

^{*3}: This light illuminates on the center panel.

Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.

	Turn signal indicator (→P. 234)		^{*2} LDA (Lane Departure Alert) indicator (→P. 279)
		(if equipped)	
	Tail light indicator (→P. 239)		Lexus parking assist-sensor indicator (→P. 314)
		(if equipped)	
	Headlight high beam indicator (→P. 240)		^{*1,2} Slip indicator (→P. 358)
	Automatic High Beam indicator (→P. 242)		^{*1} VSC OFF indicator (→P. 360)
(if equipped)			
	Rear fog light indicator (→P. 246)		^{*1,3} PCS warning light (→P. 270)
(if equipped)		(if equipped)	
	Cruise control indicator (→P. 289, 301)		^{*4,5} BSM (Blind Spot Monitor) outside rear view mirror indicators (→P. 339)
		(if equipped)	
	Dynamic radar cruise control indicator (→P. 289)		^{*6} Security indicator (→P. 104, 107)
(if equipped)			
	Cruise control "SET" indicator (→P. 289, 301)		^{*7} Low outside temperature indicator (→P. 119)
	LDA (Lane Departure Alert) indicator (→P. 279)		^{*1} Eco Driving Indicator Light (→P. 139)
(if equipped)			
	LDA (Lane Departure Alert) indicator (→P. 279)		^{*8} Eco drive mode indicator (→P. 353)
(if equipped)			

^{*9} 	Eco drive mode indicator (→P. 353)	^{*9} 	"SPORT" indicator (→P. 353)
^{*1} 	Stop & Start indicator (→P. 305)	^{*9} 	"SPORT S" indicator (→P. 353)
^{*1,3} 	Stop & Start cancel indicator (→P. 307)	^{*9} 	"SPORT S+" indicator (→P. 353)
^{*8} 	"SPORT" indicator (→P. 353)	^{*9} 	"CUSTOMIZE" indicator (→P. 353)
^{*8} 	"SPORT S" indicator (→P. 353)	[*] 	Snow mode indicator (→P. 228)
^{*8} 	"SPORT S+" indicator (→P. 353)	^{*1,6} 	"PASSENGER AIR BAG" indicator (→P. 59)
^{*8} 	"Customize" indicator (→P. 353)		

2

Instrument cluster

^{*1}: These lights turn on when the engine switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or turn off. Have the vehicle inspected by your Lexus dealer.

^{*2}: The light flashes to indicate that the system is operating.

^{*3}: The light comes on when the system is turned off.

*4: In order to confirm operation, the BSM outside rear view mirror indicators illuminate in the following situations:

- When the engine switch is turned to IGNITION ON mode while the BSM main switch is set to ON.
- When the BSM main switch is set to ON while the engine switch is in IGNITION ON mode.

If the system is functioning correctly, the BSM outside rear view mirror indicators will turn off after a few seconds.

If the BSM outside rear view mirror indicators do not illuminate or do not turn off, there may be a malfunction in the system.

If this occurs, have the vehicle inspected by your Lexus dealer.

*5: This light illuminates on the outside rear view mirrors.

*6: This light illuminates on the center panel.

*7: When the outside temperature is approximately 3°C (37°F) or lower, the indicator will flash for approximately 10 seconds, then stay on.

*8: Except F SPORT models

*9: F SPORT models




WARNING

■ **If a safety system warning light does not come on**

Should a safety system light such as the ABS and SRS warning light not come on when you start the engine, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Lexus dealer immediately if this occurs.

Gauges and meters


◆ Except F SPORT models

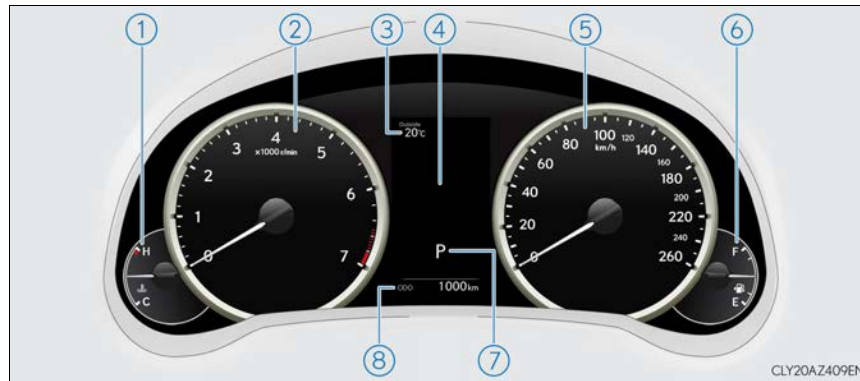


◆ F SPORT models

When the main meter is moved to the right, some of the meter displays and the gauge layout will change.

- Main meter in center position

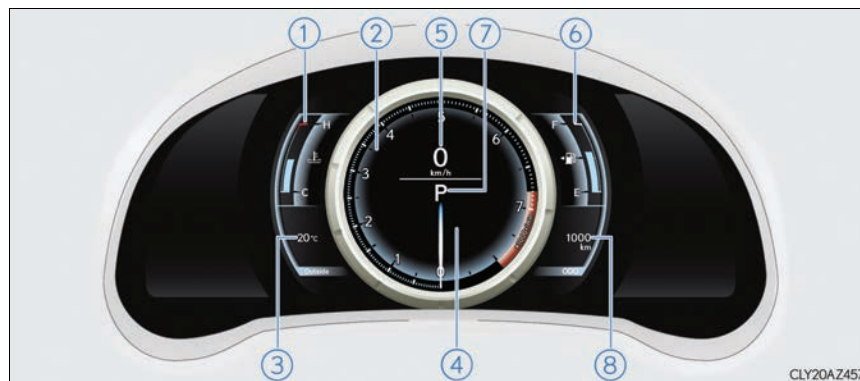

- Main meter moved to the right

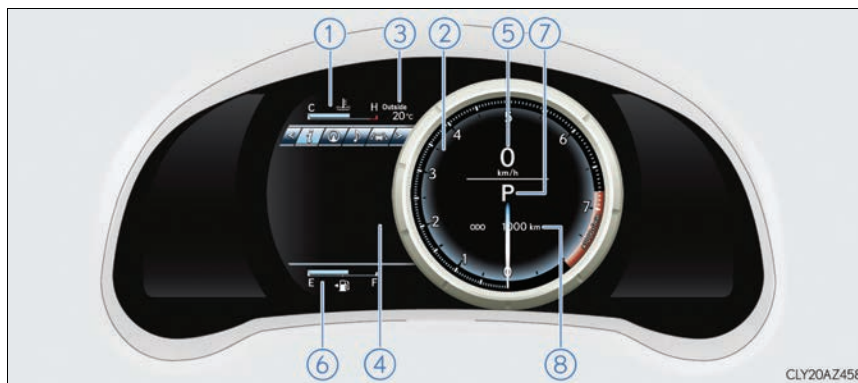

- ① Engine coolant temperature gauge
Displays the engine coolant temperature
- ② Tachometer
Displays the engine speed in revolutions per minute
F SPORT models: When sport mode is selected for the driving mode, the periphery of the tachometer will change color and the scale of the tachometer will be emphasized.
- ③ Outside temperature
Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F). Low outside temperature indicator comes on when the ambient temperature is 3°C (37°F) or lower.
- ④ Multi-information display
Presents the driver with a variety of vehicle data (→P. 124)
Displays warning messages in case of a malfunction (→P. 607)
- ⑤ Speedometer
- ⑥ Fuel gauge
- ⑦ Shift position and gear position (→P. 227)
- ⑧ Odometer and trip meter display (→P. 138)

■ Speed indicator (F SPORT models)

- ▶ Except GCC countries^{*1}, Jordan and Lebanon

When the vehicle reaches a set speed, indicators will be displayed on both sides of the displayed speed unit.

- The indicators will be displayed in yellow (corresponding to a speed set by a user) or red (fixed at 120 km/h [75 mph]^{*2} or 200 km/h [125 mph]^{*3})^{*4}.
- The desired vehicle speed at which the speed indicator will begin to be displayed can be set in  of the multi-information display. (→P. 134)
- The default setting of the indicator is off. This setting can be changed in  of the multi-information display.(→P. 134)
- ▶ GCC countries^{*1}, Jordan and Lebanon

Both sides of the displayed speed unit will turn yellow when the vehicle speed reaches 120 km/h (75 mph).

^{*1}: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar and Kuwait

^{*2}: For Taiwan, Philippine, Korea, Brunei and Indonesia

^{*3}: Except for Taiwan, Philippine, Korea, Brunei and Indonesia

^{*4}: Always observe the legal speed limit when driving on public roads.

■ Rev indicator (F SPORT models)

When the engine speed reaches a set speed, a ring-shaped indicator will be displayed on the tachometer.

The desired engine speed at which the Rev indicator will begin to be displayed can be set on  of the multi-information display. (→P. 134)



2

Instrument cluster



■ Rev peak (F SPORT models)

The engine speed reaches or exceeds 5000 r/min, an afterimage of the tachometer will be displayed at the highest engine speed for approximately 0.5 seconds.

**Changing the display****■ Main meter (F SPORT models)**


Moves between center and right-side positions.



Instrument panel light control

The brightness of the instrument panel lights can be adjusted.

- ① Darker
- ② Brighter

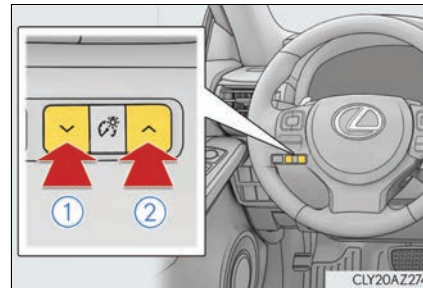

2

Instrument cluster

■ The meters and display illuminate when

The engine switch is in IGNITION ON mode.

■ Instrument panel brightness adjustment

The instrument panel brightness levels when the tail lights are on and off can be adjusted individually. However, when the surroundings are bright (daytime, etc.), turning on the tail lights will not change the instrument panel brightness.

■ Outside temperature display

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.
 - When stopped, or driving at low speeds (less than 20 km/h [12 mph])
 - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When “—” or “E” is displayed, the system may be malfunctioning. Take your vehicle to your Lexus dealer.

■ Pop-up display

- In some situations, such as when a switch operation is performed, a pop-up display will be temporarily displayed on the multi-information display or the odometer/trip meter screen (F SPORT models).
- Some pop-up displays can be set on/off. (→P. 134)

■ Customization

The meter display can be customized on the multi-information display. (→P. 134)



NOTICE

■ To prevent damage to the engine and its components


- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 655)

Multi-information display

Summary of functions

The multi-information display presents the driver with a variety of driving-related data, such as the current outside temperature. The multi-information display can also be used to change the display settings and other settings.

◆ Except F SPORT models

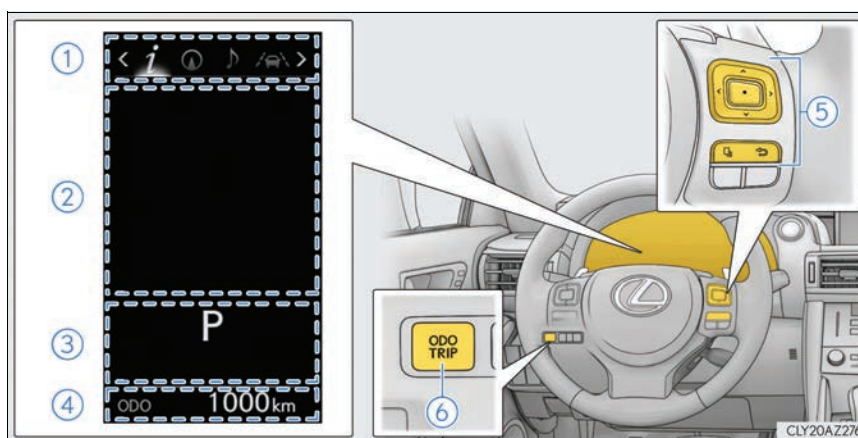

① Menu icon display area

Displays the following items.

When a menu icon is not selected, the outside temperature is displayed.

- Menu icons (→P. 129)
- Outside temperature (→P. 119)

② Content display area

A variety of information can be displayed by selecting a menu icon. Additionally, warning or advice pop-up displays will be displayed in some situations.

- Menu icon content (→P. 129)
- Warning message (→P. 607)

③ Indicator/shift position display area

Displays the following items:

- Indicators (→P. 114)
- Shift position display (→P. 227)

④ Odometer/trip meter display area (→P. 138)

Displays the following items:


- Odometer/trip meter
-  Distance until next engine oil change (if equipped)
-  Stop & Start system operation time (current) (if equipped)

⑤ Meter control switches (→P. 127)


⑥ Odometer/trip meter and trip meter reset button (→P. 128)

◆ F SPORT models

- Main meter in center position

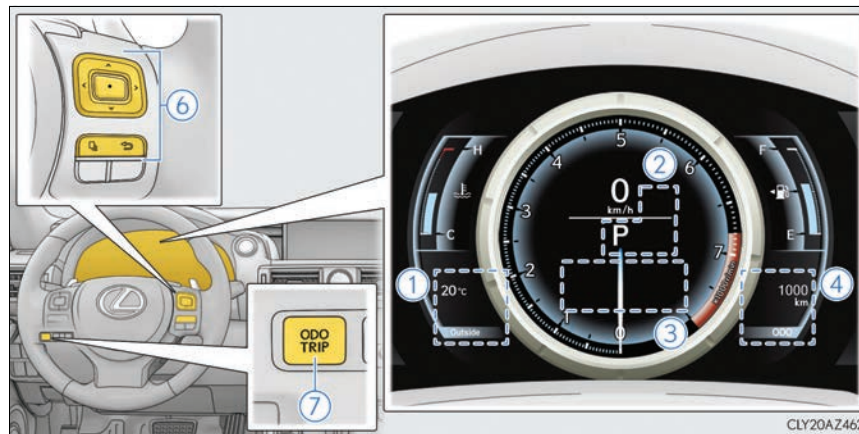

- Main meter moved to the right

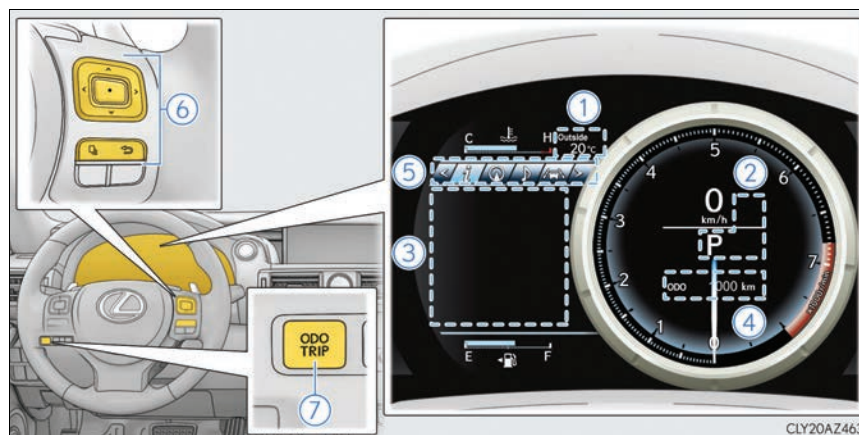

- ① Outside temperature (→P. 119)
- ② Indicator/shift position display area
 - Displays the following items:
 - Indicators (→P. 114)
 - Shift position display (→P. 227)
- ③ Content display area
 - Main meter in center position:
 - Displays various drive information on the main meter. Additionally, warning or advice pop-up displays will be displayed in some situations.
 - Drive information (→P. 130)
 - Warning message (→P. 607)
 - Main meter moved to the right:
 - A variety of information can be displayed by selecting a menu icon. Additionally, warning or advice pop-up displays will be displayed in some situations.
 - Menu icon content (→P. 129)
 - Warning message (→P. 607)
- ④ Odometer/trip meter display area (→P. 138)
 - Displays the following items:
 - Odometer/trip meter
 -  Distance until next engine oil change (if equipped)
 -  Stop & Start system operation time (current) (if equipped)
- ⑤ Menu icons (→P. 129)
- ⑥ Meter control switches (→P. 127)
- ⑦ Odometer/trip meter and trip meter reset button (→P. 128)

Using the multi-information display

◆ Using the content display area

The content display area is operated using the meter control switches.

- ① < > : Select menu icons

^ v : Change displayed content, scroll up/down the screen and move the cursor

- ② Press: Enter/Set

Press and hold: Reset

- ③ Return to the previous screen

Pressing and holding the switch will display the first screen of the selected menu icon.

- ▶ Except F SPORT models


- ④ Press: Display the top screen

Press and hold: Register current screen as the top screen

- ▶ F SPORT models

- ④ Move the main meter

When the main meter moves to the right, the menu icons will be displayed on the left side.

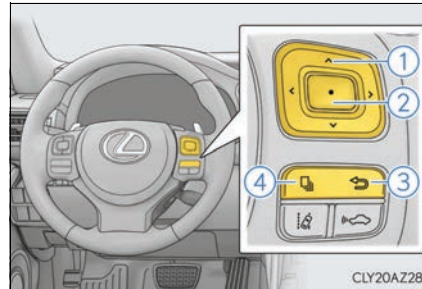

2

Instrument cluster

■ Registering a top screen (except F SPORT models)

The displayed top screen can be changed to a registered screen of your choice.

To register a screen as the top screen, display the desired screen and press and hold .

- A message asking to confirm if registration is desired will be displayed. If the selected screen cannot be registered, a registration failure message will be displayed.
- When no screen has been registered, the drive information screen will be displayed.

■ Resetting drive information

To reset the average fuel economy (after reset)/average vehicle speed (after reset)/elapsed time (after reset) that are displayed on **i**, display the desired item and press and hold .

If both of the displayed items are resettable, a message will be displayed asking which item(s) to reset.

◆ Using the odometer/trip meter display area


Items in this area are operated using the odometer/trip meter and trip meter reset button.

Press: Change displayed item

Each time the button is pressed, the displayed item will be changed.

Press and hold: Reset

Display the desired trip meter and press and hold the button to reset the trip meter.

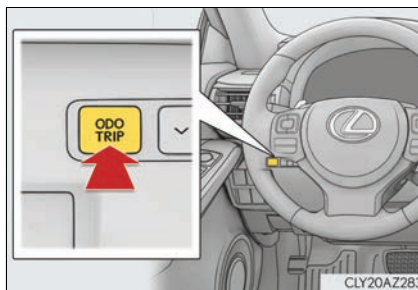

Menu icons

Select a menu icon to display its content.



Drive information (→P. 130)

Select to display various drive data.



Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (heading-up display)



Audio system-linked display

Select to enable selection of an audio source or track on the meter using the meter control switches.



Driving assist system information (if equipped)

Select to display the operational status of the following systems:

- Cruise control (→P. 301)
- Dynamic radar cruise control (→P. 289)
- LDA (Lane Departure Alert with steering control) (→P. 279)



Stop & Start system information (if equipped) (→P. 133, 305)

Select to display the operational status of the Stop & Start system.



Warning message display (→P. 607)

Select to display warning messages and measures to be taken if a malfunction is detected.



Settings display (→P. 134)

Select to change the meter display settings and other settings.

Drive information

F SPORT models: Some drive information items can only be displayed when the main meter is in the center position or when it is moved to the right.

■ Drive information 1/Drive information 2/Drive information 3

Displays drive information such as the following.

F SPORT models (when the main meter is in the center position): Each item is displayed separately.

- Drive information 1
 - Current fuel consumption
 - Average fuel economy (after reset)
- Drive information 2
 - Distance (driving range)
 - Average vehicle speed (after reset)
- Drive information 3
 - Average fuel economy (after refuel)
 - Elapsed time (after start)

Displayed items (listed below) can be changed on . (→P. 134)

Item		Content
Current fuel consumption		Displays instantaneous current fuel consumption
Average fuel economy	After reset	Displays average fuel consumption since display reset ^{*1, 2}
	After start	Displays average fuel consumption since engine start ^{*2}
	After refuel	Displays average fuel consumption since refuel ^{*2, 3}
Average vehicle speed	After reset	Displays average vehicle speed since display reset ^{*1}
	After start	Displays average vehicle speed since engine start
Elapsed time	After reset	Displays elapsed time since display reset ^{*1}
	After start	Displays elapsed time since engine start
Distance	Driving range	Displays driving range with remaining fuel ^{*3, 4}
	After start	Displays drive distance since vehicle start
Other	Blank	No item

*1: Resetting: →P. 128

*2: Use the displayed fuel consumption as a reference.

*3: When only a small amount of fuel is added to the tank, the display may not be updated.

When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.

*4: This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.

■ Eco Driving Indicator

→P. 139

■ Boost gauge/engine oil temperature gauge/engine oil pressure gauge (if equipped) *

① Boost gauge

Displays the boost pressure. The display will change color if the specified pressure is exceeded.

② Engine oil temperature gauge


Displays the engine oil temperature. The display will flash if the engine oil temperature exceeds 140 °C (284 °F).

③ Engine oil pressure gauge

Displays the engine oil pressure. A buzzer will sound and warning message will be displayed if the engine oil pressure becomes low. (→P. 607)

This display is intended for use as a guideline. Depending on factors such as the road surface condition, temperature and vehicle speed, the display may not show the actual condition of the vehicle.


*: For F SPORT models, this item is not available when the main meter is in the center position.

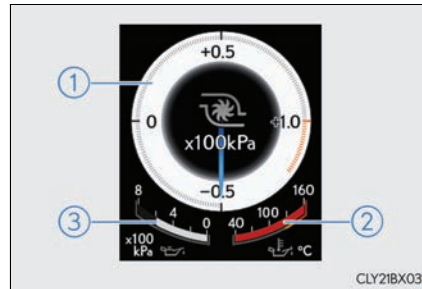

■ G-force (if equipped) *

Displays lateral G-forces on the vehicle.

- ① Acceleration G-force on the vehicle
- ② Current G-force value (analyzed value of front/rear and left/right G-forces)
- ③ Record of the maximum G-forces

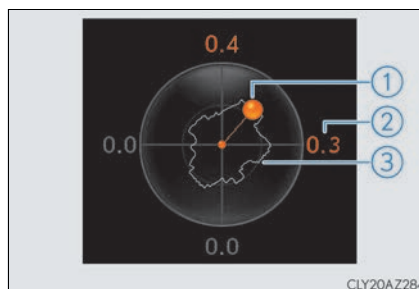

This display is intended for use as a guideline. Depending on factors such as the road surface condition, temperature and vehicle speed, the display may not show the actual condition of the vehicle.

● Resetting the record of maximum G-forces

Press and hold  to reset the record.

● Peak hold function

If lateral G-forces of 0.5 G or greater are generated, the G-force value display will turn amber and be held for 2 seconds.

*: For F SPORT models, this item is not available when the main meter is in the center position.

■ Tire pressure (if equipped)

→P. 557

■ Vehicle sway warning (if equipped)*

Detects the sway of the vehicle within a lane, which is often associated with a decrease in the driver's attention level, and displays the decrease in attention using a bar display.

The shorter the bar length, the more the driver may need to rest.

This display is a part of the LDA (Lane Departure Alert with steering control) system. The display is enabled when the operating conditions of the vehicle sway warning are met. (→P. 279)

*: For F SPORT models, this item is not available when the main meter is in the center position.

■ Gear positions

Displays the current gear position when the shift lever is in D or M.

■ Blank (No items)

Displays no drive information contents.

Stop & Start system information (A) (if equipped)

■ Stop & Start system operation time (current)/status notification

Displays the current amount of time the engine has been stopped due to the operation of the Stop & Start system. Also shows the status of the Stop & Start system with a pop-up display. (→P. 311)

■ Stop & Start system total operation time/amount of fuel saved

Press  or  on the steering wheel to display the following items:

● Stop & Start system operation time (after start/after reset)

Displays the accumulated total of the following:

- Stop & Start system operation time since engine start
- Stop & Start system operation time since display was reset

● Amount of fuel saved (after start/after reset)

Displays the accumulated total of the following:

- Amount of fuel saved since engine start
- Amount of fuel saved since display was reset

Use the displayed amount of saved fuel for reference only.

■ Stop & Start system settings

Press  on the steering wheel to display the Stop & Start system settings screen.

On this screen, the following operations can be performed:

● Stop & Start

The length of time the Stop & Start system will operate when the "A/C" switch of the air conditioning system is on can be set to 2 different levels. This setting can also be changed on .

● Reset

Select to reset the Stop & Start system operation time/amount of fuel saved display.

To reset, move the cursor to "Reset", and then press and hold .

Settings display (⚙️)

◆ Changing settings

Use the meter control switches on the steering wheel to change settings.

- 1 Press < or > to select ⚙️.
- 2 Operate the switches to select a desired item.
- 3 Change the setting by referring to the message displayed on the screen.

◆ Setting items

-  LDA (Lane Departure Alert with steering control) (if equipped) (→P.279)

The following LDA system settings can be changed:

Item	Settings	Details
Steering assist	On	Select to enable/disable steering wheel assistance.
	Off	
Alert		Select to set a vibrator or buzzer as the notification method used to warn the driver.
		
Sensitivity	High	Select to set the warning sensitivity.
	Standard	
Sway warning	On	Select to enable/disable the vehicle sway warning.
	Off	
Sway sensitivity	High	Select to set the vehicle sway warning sensitivity.
	Standard	
	Low	

■ PCS (Pre-collision system) (if equipped) (→P. 266)

The following pre-collision system settings can be changed:

Item	Settings	Details
PCS	On	Select to enable/disable the pre-collision system.
	Off	
Warning sensitivity		Select to change the warning timing.
		
		

■ Speed indicator (F SPORT models [except GCC countries^{*1}, Jordan and Lebanon]) (→P. 121)

The following speed indicator settings can be changed:

Item	Settings	Details
Speed Indicator	On	Select to enable/disable the speed indicator.
	Off	
Speed Setting	Type A ^{*2} : 50 km/h to 120 km/h (30 mph to 75 mph) ^{*4} Type B ^{*3} : 50 km/h to 200 km/h (30 mph to 125 mph) ^{*4}	Select to set the desired vehicle speed at which the speed indicator will begin to be displayed.

^{*1}: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar and Kuwait

^{*2}: For Taiwan, Philippine, Korea, Brunei and Indonesia

^{*3}: Except for Taiwan, Philippine, Korea, Brunei and Indonesia

^{*4}: Always observe the legal speed limit when driving on public roads.

■ Vehicle settings

Item	Settings	Details
 Stop & Start system (if equipped) (→P. 305)		
 Stop & Start system operation time	Extended	Select to set the length of time the Stop & Start system will operate when the “A/C” switch of the air conditioning system is on.
	Standard	
Oil maintenance (if equipped)		
Engine oil maintenance data reset		Select to reset the engine oil maintenance information (message indicating maintenance is required and distance until the next oil change) after engine oil maintenance is performed. (→P. 546)

■ Meter settings

Item	Settings	Details
Language		Select to change the language displayed.
Units		Select to change the units of measure displayed.
 (Eco Driving Indicator Light)	On	Select to enable/disable the Eco Driving Indicator Light. (→P. 139)
	Off	
 Switch settings (except F SPORT models)		Select to display how to change the top screen.
Drive information 1		Select to select up to 2 items that will be displayed on each Drive information screen (Drive information 1 screen, Drive information 2 screen, and Drive information 3 screen) respectively. (Selectable items: →P. 130)
Drive information 2		
Drive information 3		

Item	Settings	Details
Pop-up display	Intersection guidance (if equipped)	Select to enable/disable the pop-up display.
	Incoming calls	
	 Duration (if equipped)	
	 Status (if equipped)	
	Brightness adjustment	
Color (except F SPORT models)	2 available colors	Select to set the color of the cursor on the multi-information display.
Needle (F SPORT models)	3 available colors	Select to set the tachometer needle color.
Rev indicator (F SPORT models)	On	Select to enable/disable the Rev indicator. (→P. 121)
	Off	
	Rev setting	Select to set the desired engine speed at which the Rev indicator will begin to be displayed. Selectable engine speed range: IS350: 2000 r/min to 6800 r/min IS300: 2000 r/min to 6100 r/min
Rev peak (F SPORT models)	On	Select to enable/disable the Rev peak. (→P. 122)
	Off	
Default setting		Select to reset the meter display settings to the default setting.

Odometer/trip meter display area

◆ Display items

■ Odometer

Displays the total distance the vehicle has been driven.

■ Trip meter A/trip meter B

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

To reset, display the desired trip meter and press and hold the odometer/trip meter and trip meter reset button.

■ Distance until next engine oil change (if equipped)

Displays the distance the vehicle can be driven until an oil change is necessary.

◆ Pop-up display

In some situations the following will be temporarily displayed:

■ Stop & Start system operation time (current) (if equipped)

This display will be displayed when the engine is stopped due to the operation of the Stop & Start system.


■ Distance until next engine oil change (if equipped)

Displays the distance until the next engine oil change. This display will be displayed in the following situations:

- When the engine switch is turned to IGNITION ON mode.
- When a warning message indicating that oil maintenance should be performed soon or is required is displayed.

■ Eco Driving Indicator

- ① Eco Driving Indicator Light
During Eco-friendly acceleration (Eco driving), the Eco Driving Indicator Light will turn on. When the acceleration exceeds the Zone of Eco driving, or when the vehicle is stopped, the light turns off.
- ② Eco Driving Indicator Zone Display
Suggests the Zone of Eco driving with current Eco driving ratio based on acceleration.
- ③ Eco driving ratio based on acceleration
If the acceleration exceeds the Zone of Eco driving, the right side of the Eco Driving Indicator Zone Display will illuminate.
- ④ Zone of Eco driving

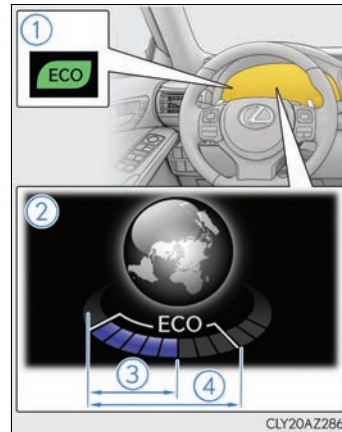

Eco Driving Indicator will not operate under the following conditions:

- The shift lever is in any position other than D.
- A paddle shift switch is operated.
- Neither normal mode nor Eco drive mode is selected. (→P. 353)
- The vehicle speed is approximately 130 km/h (80 mph) or higher.

■ Background color of the indicator/shift position display area (except F SPORT models)

The background color of the indicator/shift position display area is changed according to the driving mode as follows (→P. 353):

- Eco drive mode: Blue
- Sport mode: Red

■ G-force display (if equipped)

The G-force values may not be zero even when the vehicle is parked, such as when it is parked on an incline.

■ Suspension of the settings display

- Some settings cannot be changed while driving. When changing settings, park the vehicle in a safe place.
- If a warning message is displayed, operation of the settings display will be suspended.

■ Tire pressure (if equipped)

- It may take a few minutes to display the tire inflation pressure after the engine switch is turned to IGNITION ON mode. It may also take a few minutes to display the tire inflation pressure after inflation pressure has been adjusted.
- “---” may be displayed if the tire position information cannot be determined due to unfavorable radio wave conditions.
- Tire inflation pressure changes with temperature. The displayed values may also be different from the values measured using a tire pressure gauge.

■ Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

■ Customization

Some functions can be customized. (→P. 134, 679)

⚠ WARNING**■ Caution for use while driving**

- When operating the multi-information display while driving, pay extra attention to the safety of the area around the vehicle.
- Do not look continuously at the multi-information display while driving as you may fail to see pedestrians, objects on the road, etc. ahead of the vehicle.

■ The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

■ Cautions during setting up the display

As the engine needs to be running during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

⚠ NOTICE**■ While setting up the display**


To prevent battery discharge, ensure that the engine is running while setting up the display features.

Fuel consumption information

Fuel consumption information can be displayed on the audio system.

Vehicles with a navigation system (10.3-inch display): The fuel consumption information can be displayed and operated on the side display.

- ① Audio system screen
- ② "MENU" button
- ③ Lexus Display Audio controller
- ④ Remote Touch knob
- ⑤ "ENTER" button
- *1: Vehicles with a Lexus Display Audio system
- *2: Vehicles with a navigation system

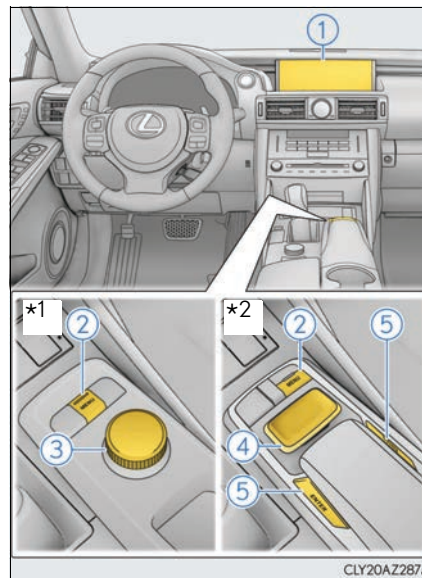

2

Instrument cluster


Trip information

- Lexus Display Audio screen

Press the "MENU" button on the Lexus Display Audio controller, then select "Info" on the "MENU" screen, and then select "Fuel Consumption".

If the "Trip Information" screen does not appear, move the controller to the right and select "Trip Information".

- ① Fuel consumption in the past 15 minutes
- ② Current fuel consumption
- ③ Average vehicle speed since the engine was started.
- ④ Elapsed time since the engine was started.
- ⑤ Cruising range (→P. 144)

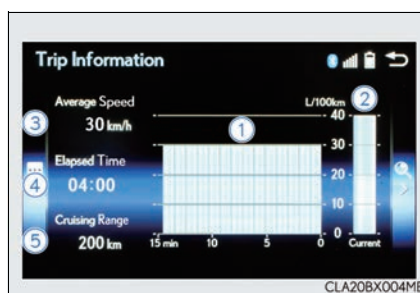


- Navigation system screen

Type A: Press the "MENU" button on the Remote Touch, then select  on the "Menu" screen, and then select "Fuel Consumption".

Type B: Press the "MENU" button on the Remote Touch, then select  on the "Menu" screen.

If the "Past Record" screen is displayed, select "Trip Information".

- ① Resetting the consumption data
- ② Fuel consumption in the past 15 minutes
- ③ Current fuel consumption
- ④ Average vehicle speed since the engine was started.
- ⑤ Elapsed time since the engine was started.
- ⑥ Cruising range (→P. 144)

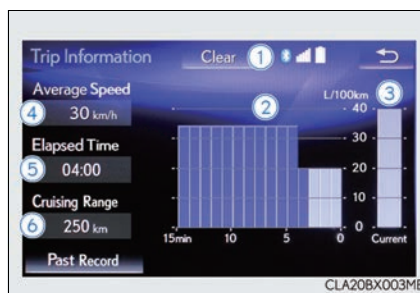

Average fuel consumption for the past 15 minutes is divided by color into past averages and averages attained since the engine switch was last turned to IGNITION ON mode. Use the displayed average fuel consumption as a reference.

The image is an example only.

Past record

► Lexus Display Audio screen

Press the "MENU" button on the Lexus Display Audio controller, then select "Info" on the "MENU" screen, and then select "Fuel Consumption".

If the "Past Record" screen does not appear, move the controller to the right and select "Past Record".

- ① Previous fuel consumption record
- ② Current fuel consumption
- ③ Best recorded fuel consumption




► Navigation system screen

Type A: Press the "MENU" button on the Remote Touch, then select  on the "Menu" screen, and then select "Fuel Consumption".

Type B: Press the "MENU" button on the Remote Touch, then select  on the "Menu" screen.

If the "Trip Information" screen is displayed, select "Past Record".

- ① Resetting the past record data
- ② Best recorded fuel consumption
- ③ Average fuel consumption
- ④ Previous fuel consumption record
- ⑤ Updating the average fuel consumption data

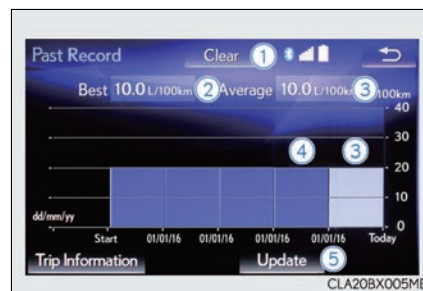

The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last updated. Use the displayed average fuel consumption as a reference.

The image is an example only.

■ Updating the past record data

- ▶ Vehicles with a Lexus Display Audio system

Update the average fuel consumption by moving the controller to the left and select "Update" to measure the current fuel consumption again.

- ▶ Vehicles with a navigation system

Update the average fuel consumption by selecting "Update" to measure the current fuel consumption again.

■ Resetting the data

- ▶ Vehicles with a Lexus Display Audio system

The fuel consumption data can be deleted by moving the controller to the left and select "Clear".

- ▶ Vehicles with a navigation system

The fuel consumption data can be deleted by selecting "Clear".

■ Cruising range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

This distance is computed based on your average fuel consumption.

As a result, the actual distance that can be driven may differ from that displayed.

Using the side display (vehicles with a navigation system [10.3-inch display])

Vehicle information can be displayed on the side display (→P. 477), then select “<” or “>” to select the desired screen.

► Fuel consumption

Displays the average fuel consumption for the past 10 minutes in 1 minute intervals, as well as the cruising range.



► Past record

Displays the average fuel consumption and highest fuel consumption.



► Trip information

Displays the cruising range, average fuel consumption and the amount of time elapsed since the engine was started.



The image is an example only, and may vary slightly from actual conditions.

Operation of each component

3


3-1. Key information	
Keys	148
3-2. Opening, closing and locking the doors and trunk	
Doors	154
Trunk	161
Smart entry & start system	166
3-3. Adjusting the seats	
Front seats	175
Rear seats	177
Driving position memory	179
Head restraints	184
3-4. Adjusting the steering wheel and mirrors	
Steering wheel	187
Inside rear view mirror	189
Outside rear view mirrors	191
3-5. Opening, closing the windows and moon roof	
Power windows	195
Moon roof	199

Keys

The keys


The following keys are provided with the vehicle.

- ① Electronic keys
 - Operating the smart entry & start system (→P. 166)
 - Operating the wireless remote control function
 - ② Mechanical keys
 - ③ Key number plate
 - ④ Card key (electronic key) (if equipped)
- Operating the smart entry & start system (→P. 166)

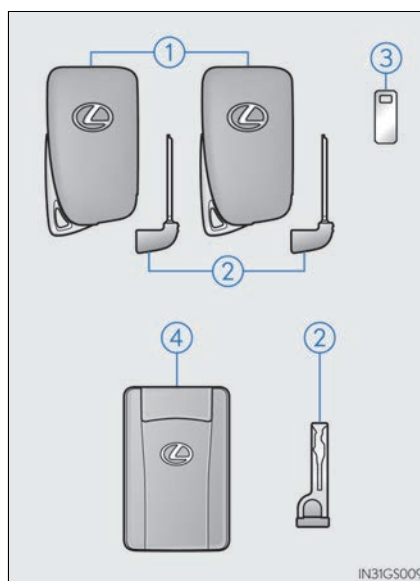

Wireless remote control

- ① Locks the doors (→P. 154)
- ② Closes the windows and moon roof (except for Korea)* (→P. 154)
- ③ Unlocks the doors (→P. 154)
- ④ Opens the windows and moon roof (except for Korea)* (→P. 154)
- ⑤ Opens the trunk (→P. 161)
- ⑥ Sounds the alarm (if equipped) (→P. 150)

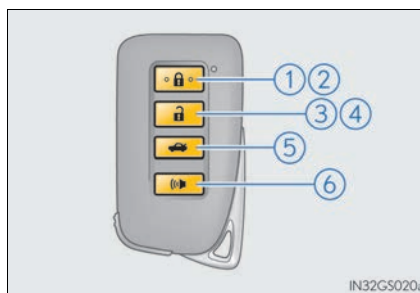


*: These settings must be customized at your Lexus dealer.

Using the mechanical key

To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P. 647)

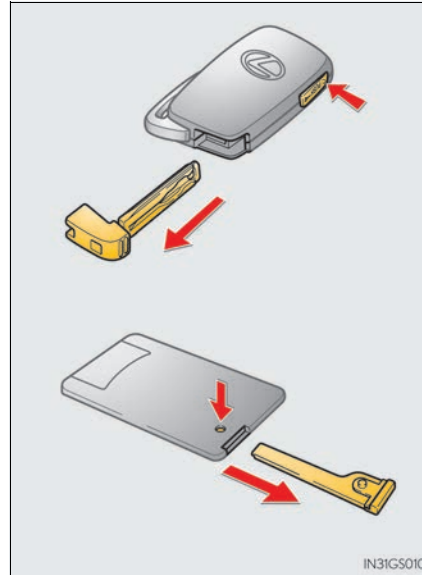

3

Operation of each component

■ Panic mode (if equipped)


When  is pressed for longer than about one second, an alarm will sound intermittently and the vehicle lights will flash to deter any person from trying to break into or damage your vehicle.

To stop the alarm, press any button on the electronic key.




■ Card key (if equipped)

- The card key is not waterproof.
- The mechanical key that is stored inside the card key should be used only if a problem arises, such as when the card key does not operate properly.
- If it is difficult to take out the mechanical key, push down the lock release button using a pen tip etc. If it is still difficult to pull it out, use a coin etc.
- To store the mechanical key in the card key, insert it while pressing the lock release button.

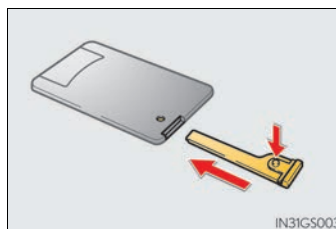

- If the battery cover is not installed and the battery falls out or if the battery was removed because the key got wet, reinstall the battery with the positive terminal facing the Lexus emblem.

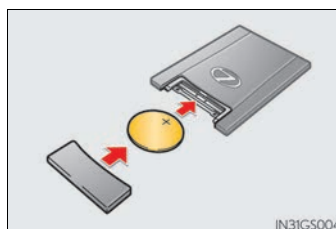

■ When required to leave the vehicle's key with a parking attendant

Set the luggage security system (→P. 162) on and lock the glove box (→P. 497) as circumstances demand.

Remove the mechanical key for your own use and provide the attendant with the electronic key only.

■ If you lose your mechanical keys

New genuine mechanical keys can be made by your Lexus dealer using another mechanical key and the key number stamped on your key number plate. Keep the plate in a safe place such as your wallet, not in the vehicle.

■ When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

■ Electronic key battery depletion

- The standard battery life is 1 to 2 years. (The card key battery life is about a year and a half.)
- If the battery becomes low, an alarm will sound in the cabin when the engine is stopped. (→P. 629)
- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary. (→P. 574)
 - The smart entry & start system or the wireless remote control does not operate.
 - The detection area becomes smaller.
 - The LED indicator on the key surface does not turn on.
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
 - TVs
 - Personal computers
 - Cellular phones, cordless phones and battery chargers
 - Recharging cellular phones or cordless phones
 - Table lamps
 - Induction cookers

■ Replacing the battery

→P. 574

■ Confirmation of the registered key number

The number of keys already registered to the vehicle can be confirmed. Ask your Lexus dealer for details.

■ If a wrong key is used

The key cylinder rotates freely to isolate inside mechanism.



NOTICE

■ To prevent key damage

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for long periods of time.
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the electronic key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers, or medical electrical equipment, such as low-frequency therapy equipment.

■ Carrying the electronic key on your person

Carry the electronic key 10 cm (3.9 in.) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

■ In case of a smart entry & start system malfunction or other key-related problems

Take your vehicle with all the electronic keys provided with your vehicle, including the card key, to your Lexus dealer.



NOTICE

■ When an electronic key is lost

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit your Lexus dealer immediately with all remaining electronic keys and the card key that were provided with your vehicle.

■ Handling the card key

- Do not apply excess force when inserting the mechanical key into the card key. Doing so may damage the card key.
- If the battery or card key terminals get wet, the battery may corrode.
If the key is dropped into water, or if drinking water etc. is spilled on the key, immediately remove the battery cover and wipe the battery and terminals. (To remove the battery cover, lightly grasp and pull it.) If the battery is corroded, have your Lexus dealer replace the battery.
- Do not crush the battery cover or use a screwdriver to remove the battery cover. Forcibly removing the battery cover may bend or damage the key.
- If the battery cover is frequently removed, the battery cover may become loose.
- When installing the battery, make sure to check the direction of the battery.
Installing the battery in the wrong direction may cause the battery to deplete rapidly.
- The surface of the card key may be damaged, or its coating may peel off in the following situations:
 - The card key is carried together with hard objects, such as coins and keys.
 - The card key is scraped with a sharp object, such as the tip of a mechanical pencil.
 - The surface of the card key is wiped with thinner or benzene.

Doors

Unlocking and locking the doors from the outside

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.

◆ Smart entry & start system

Carry the electronic key to enable this function.


- ① Grip the either front door handle to unlock the doors.

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

- ② Touch the lock sensor (indentation on the upper part of the front door handle) to lock the doors.

Check that the door is securely locked.

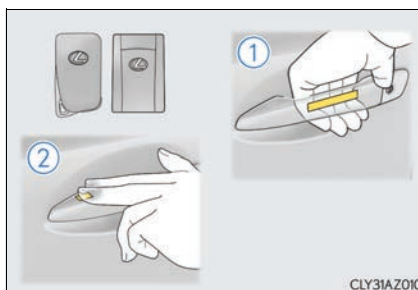

CLY31AZ010

◆ Wireless remote control

- ① Locks all the doors

Except for Korea: Press and hold to close the windows and moon roof.*


Check that the door is securely locked.

- ② Unlocks all the doors

Some models: Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.

Except for Korea: Press and hold to open the windows and moon roof.*

*: These settings must be customized at your Lexus dealer.

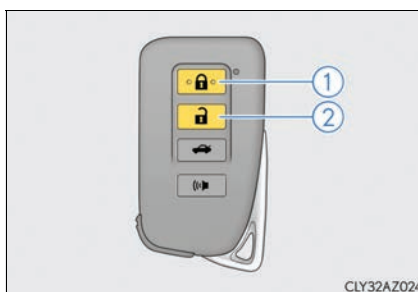

CLY32AZ024

■ Operation signals

The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)

Except for Malaysia: A buzzer sounds to indicate that the doors have been locked/unlocked. (Locked: once, Unlocked: twice)

Except for Korea: A buzzer sounds to indicate that the windows and moon roof are operating.

■ Security feature


If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

■ Welcome light illumination control

The front position, tail and license plate lights automatically turn on at night when the doors are unlocked using the entry function or wireless remote control if the light switch is in the "AUTO" position.

■ When the door cannot be locked by the lock sensor on the upper part of the door handle

If the door will not lock even when the topside sensor area is touched, try touching both the topside and underside sensor areas at the same time.

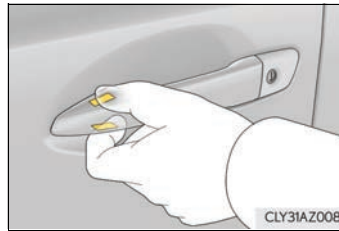

■ Door lock buzzer

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously for 5 seconds. Fully close the door to stop the buzzer, and lock the vehicle once more.

■ Setting the alarm (if equipped)

Locking the doors will set the alarm system. (→P. 107)

■ If the smart entry & start system or the wireless remote control does not operate properly

Use the mechanical key to lock and unlock the doors. (→P. 647)

Replace the key battery with a new one if it is depleted. (→P. 574)

**WARNING**

Observe the following precautions.

Failing to do so may result in death or serious injury.

■ **When using the wireless remote control and operating the power window or moon roof**

Operate the power window or moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window or moon roof. Also, do not allow children to operate the wireless remote control. It is possible for children and other passengers to get caught in the power window or moon roof.


■ **Jam protection function**

- Never try jamming any part of your body to activate the jam protection function intentionally.
- The jam protection function may not work if something gets caught just before the window or moon roof fully closes.

Unlocking and locking the doors from the inside

◆ Door lock switches

- ① Locks all the doors
- ② Unlocks all the doors

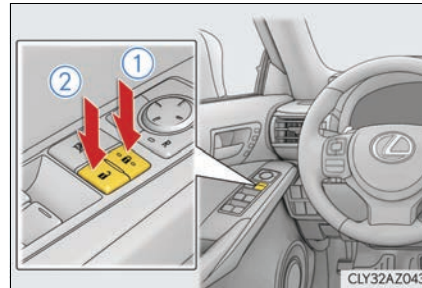


◆ Inside lock buttons

- ① Locks the door
- ② Unlocks the door

Except for Korea: The driver's door can be opened by pulling the inside handle even if the lock button is in the lock position.

For Korea: The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

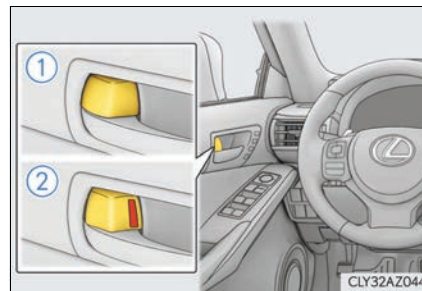

3

Operation of each component

Locking the doors from the outside without a key

► For the front doors

- 1 Move the inside lock button to the lock position.
- 2 Except for Korea: Close the door while pulling the door handle.
For Korea: Close the door.

The door cannot be locked if the engine switch is in ACCESSORY or IGNITION ON mode, or the electronic key is left inside the vehicle. However, the key may not be detected correctly and the door may be locked.

► For the rear doors

- 1 Move the inside lock button to the lock position.
- 2 Close the door.


The door cannot be locked if the engine switch is in ACCESSORY or IGNITION ON mode, or the electronic key is left inside the vehicle. However, the key may not be detected correctly and the door may be locked.

Rear door child-protector lock

The door cannot be opened from inside the vehicle when the lock is set.

- ① Unlock
- ② Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

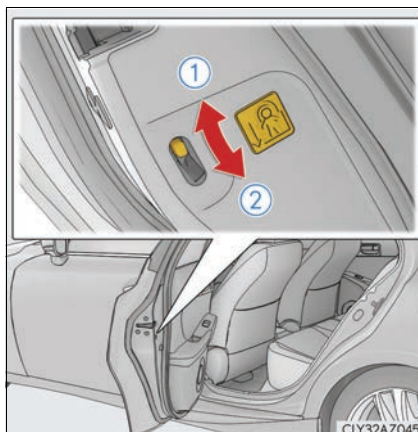

Automatic door locking and unlocking systems

The following functions can be set or canceled:

For instructions on customizing, refer to P. 679.

Function	Operation
Speed linked door locking function	All the doors are locked when the vehicle speed is approximately 20 km/h (12 mph) or higher.
Shift position linked door locking function	Shifting the shift lever out of P locks all the doors.
Shift position linked door unlocking function	All doors are automatically unlocked when shifting the shift lever to P.
Driver's door linked door unlocking function	All doors are automatically unlocked when driver's door is opened.

■ Switching the door unlock function

It is possible to set which doors the entry function unlocks using the wireless remote control.

- 1 Turn the engine switch off.
- 2 Cancel the intrusion sensor and tilt sensor of the alarm system to prevent unintended triggering of the alarm while changing the settings. (if equipped) (→P. 110)
- 3 When the indicator light on the key surface is not on, press and hold  ,  or  for approximately 5 seconds while pressing and holding .

The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step 3.)

Multi-information display	Unlocking function	Beep
 (Left-hand drive vehicles)	Holding the driver's door handle unlocks only the driver's door.	Exterior: Beeps 3 times Interior: Pings once
 (Right-hand drive vehicles)	Holding the front passenger's door handle unlocks all the doors.	
	Holding either front door handle unlocks all the doors.	Exterior: Beeps twice Interior: Pings once

For vehicles with an alarm: To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed. (If a door is not opened within 30 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set.) In a case that the alarm is triggered, immediately stop the alarm. (→P. 108)

■ Impact detection door lock release system

In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

■ Using the mechanical key

The doors can also be locked and unlocked with the mechanical key. (→P. 647)

■ Conditions affecting the operation of the smart entry & start system or wireless remote control

→P. 168

■ Customization

Settings (e.g. unlocking function using a key) can be changed.
(Customizable features: →P. 679)

**WARNING****■ To prevent an accident**

Observe the following precautions while driving the vehicle.
Failure to do so may result in a door opening and an occupant being thrown out of the vehicle, resulting in death or serious injury.


- Ensure that all doors are properly closed.
- Do not pull the inside handle of the doors while driving.
Be especially careful with the driver's door (except for Korea) or front doors (for Korea), as the door(s) may be opened even if the inside lock buttons are in locked position.
- Set the rear door child-protector locks when children are seated in the rear seats.

Trunk

The trunk can be opened using the trunk opener, entry function or wireless remote control.

Opening the trunk from inside the vehicle

Press the opener switch.

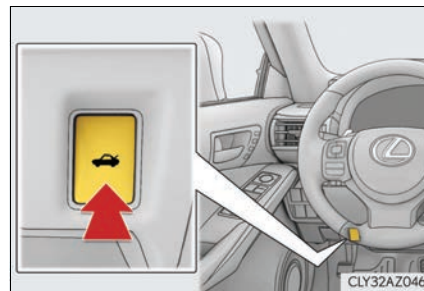


Opening the trunk from outside the vehicle

◆ Smart entry & start system

While carrying the electronic key, press the button on the trunk lid.

When all the doors are unlocked with the power door lock system, the trunk can be opened without carrying the electronic key.

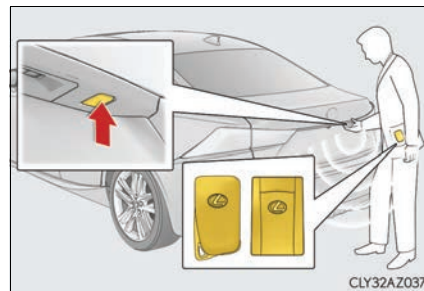


◆ Wireless remote control

Press and hold the switch.



When closing the trunk


Using the trunk grip, lower the trunk without applying force to the side and push the trunk down from the outside to close it.

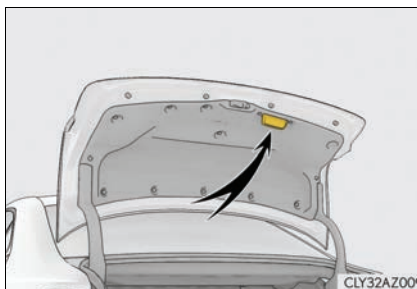

Luggage security system

To protect luggage stored in the trunk against theft, the luggage security system can be set to on.


- 1 Move the luggage security system levers to the lock position.

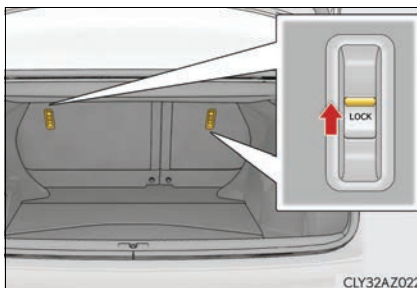

- 2 To disable the trunk opener, turn the main switch in the glove box off

- ① On
- ② Off

When the main switch is off, the trunk lid cannot be opened even with the wireless remote control or entry function.

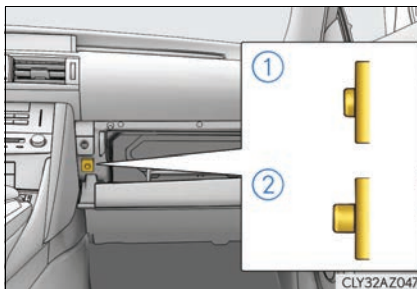

■ Trunk light

The trunk light turns on when the trunk is opened.


■ Function to prevent the trunk being locked with the electronic key inside

- When all doors are locked, closing the trunk lid with the electronic key left inside the trunk will sound an alarm.
In this case, the trunk lid can be opened pressing the trunk release button on the trunk lid.
- If the spare electronic key is put in the trunk with all the doors locked, the key confinement prevention function is activated so the trunk can be opened. In order to prevent theft, take all electronic keys with you when leaving the vehicle.
- If the electronic key is put in the trunk with all the doors locked, the key may not be detected depending on the location of the key and the surrounding radio wave conditions. In this case, the key confinement prevention function cannot be activated, causing the doors to lock when the trunk is closed. Make sure to check where the key is before closing the trunk.
- The key confinement prevention function cannot be activated if any one of the doors is unlocked. In this case, open the trunk using the trunk opener.

■ Internal trunk release lever (if equipped)

The trunk lid can be opened by pulling the glow-in-the-dark lever located on the inside of the trunk lid to the side.

The lever will continue to glow for some time after the trunk lid is closed.

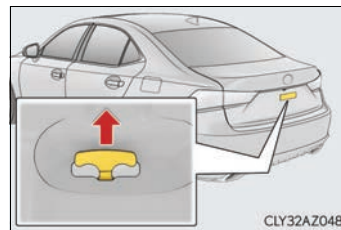

■ Using the mechanical key

The trunk can be also opened using the mechanical key. (→P. 647)

■ If the smart entry & start system or the wireless remote control does not operate properly

Use the mechanical key to unlock the trunk. (→P. 647)

Replace the key battery with a new one if it is depleted. (→P. 574)

■ When leaving a key to the vehicle with a parking attendant

→P. 150

■ Customization

The trunk unlocking operation can be changed. (Customizable features: →P. 679)

**WARNING**

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ Before driving

- Make sure that the trunk lid is fully closed. If the trunk lid is not fully closed, it may open unexpectedly while driving and hit near-by objects or luggage in the trunk may be thrown out, causing an accident.
- Do not allow children to play in the trunk.
If a child is accidentally locked in the trunk, they could suffer from heat exhaustion, suffocation or other injuries.
- Do not allow a child to open or close the trunk lid.
Doing so may cause the trunk lid to open unexpectedly, or cause the child's hands, head, or neck to be caught by the closing trunk lid.

■ Important points while driving

Never let anyone sit in the trunk. In the event of sudden braking or a collision, they are susceptible to death or serious injury.

⚠ WARNING

■ Using the trunk

Observe the following precautions.

Failure to do so may cause parts of the body to be caught, resulting in serious injury.

- Remove any heavy loads, such as snow and ice, from the trunk lid before opening it. Failure to do so may cause the trunk lid to suddenly shut again after it is opened.
- When opening or closing the trunk lid, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the trunk is about to open or close.
- Use caution when opening or closing the trunk lid in windy weather as it may move abruptly in strong wind.
- The trunk lid may suddenly shut if it is not opened fully. It is more difficult to open or close the trunk lid on an incline than on a level surface, so beware of the trunk lid unexpectedly opening or closing by itself. Make sure that the trunk lid is fully open and secure before using the trunk.
- When closing the trunk lid, take extra care to prevent your fingers etc. from being caught.
- When closing the trunk lid, make sure to press it lightly on its outer surface. If the trunk handle is used to fully close the trunk lid, it may result in hands or arms being caught.
- Do not attach any accessories other than genuine Lexus parts to the trunk lid. Such additional weight on the trunk lid may cause the lid to suddenly shut again after it is opened.



3

Operation of each component


Smart entry & start system

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket. The driver should always carry the electronic key.

- Locks and unlocks the doors (→P. 154)
- Opens the trunk (→P. 161)
- Starts the engine (→P. 222)

■ Antenna location

- ① Antennas outside the cabin
- ② Antennas inside the cabin
- ③ Antenna inside the trunk
- ④ Antenna outside the trunk

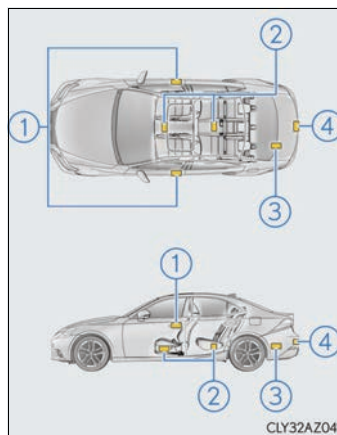

■ Effective range (areas within which the electronic key is detected)



When locking or unlocking the doors

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of an outside door handle. (Only the doors detecting the key can be operated.)




When opening the trunk

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of the trunk release button.



When starting the engine or changing engine switch modes

The system can be operated when the electronic key is inside the vehicle.

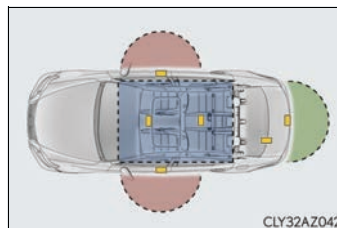

■ Alarms and warning messages

A combination of exterior and interior alarms as well as warning messages shown on the multi-information display are used to prevent theft of the vehicle and accidents resulting from erroneous operation. Take appropriate measures in response to any warning message on the multi-information display. (→P. 607)

When only an alarm sounds, circumstances and correction procedures are as follows.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 5 seconds	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
	The trunk was closed while the electronic key was still inside the trunk and all the doors were locked.	Retrieve the electronic key from the trunk and close the trunk lid.
Interior alarm pings repeatedly	The engine switch was turned to ACCESSORY mode while the driver's door was open (The driver's door was opened when the engine switch was in ACCESSORY mode).	Turn the engine switch off and close the driver's door.
	The engine switch was turned off while the driver's door was open.	Close the driver's door.

■ If a warning message is displayed indicating that there is a malfunction in the smart entry & start system

→P. 607

■ Battery-saving function

The battery-saving function will be activated in order to prevent the electronic key battery and the battery from being discharged while the vehicle is not in operation for a long time.


- In the following situations, the smart entry & start system may take some time to unlock the doors.
 - The electronic key has been left within approximately 2 m (6 ft.) of the outside of the vehicle for 10 minutes or longer.
 - The smart entry & start system has not been used for 5 days or longer.
- If the smart entry & start system has not been used for 14 days or longer, the doors cannot be unlocked at any door except the driver's door. In this case, hold of the driver's door handle, or use the wireless remote control or mechanical key, to unlock the doors.

■ Electronic Key Battery-Saving Function

When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press  twice while pressing and holding . Confirm that the electronic key indicator flashes 4 times.

While the battery-saving mode is set, the smart entry & start system cannot be used. To cancel the function, press any of the electronic key buttons.

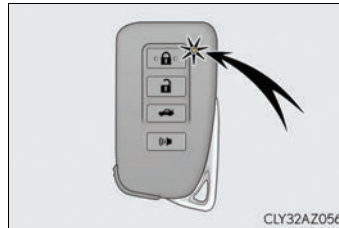

■ Conditions affecting operation

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and engine immobilizer system from operating properly. (Ways of coping: →P. 647)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- When the electronic key is in contact with, or is covered by the following metallic objects
 - Cards to which aluminum foil is attached
 - Cigarette boxes that have aluminum foil inside
 - Metallic wallets or bags
 - Coins
 - Hand warmers made of metal
 - Media such as CDs and DVDs
- When other wireless keys (that emit radio waves) are being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
 - Another vehicle's electronic key or a wireless key that emits radio waves
 - Personal computers or personal digital assistants (PDAs)
 - Digital audio players
 - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window

■ Note for the entry function

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
 - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
 - The electronic key is near the ground or in a high place, or too close to the rear bumper center when the trunk is opened.
 - The electronic key is on the instrument panel, rear package tray or floor, or in the door pockets or glove box when the engine is started or engine switch modes are changed.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the doors will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
- Even if the electronic key is not inside the vehicle, it may be possible to start the engine if the electronic key is near the window.
- The doors may unlock or lock if a large amount of water splashes on the door handle, such as in the rain or in a car wash, when the electronic key is within the effective range. (The doors will automatically be locked after approximately 30 seconds if the doors are not opened and closed.)
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- Touching the door lock or unlock sensor while wearing gloves may prevent lock or unlock operation.
- When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition signals will be given.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In this case, follow the following correction procedures to wash the vehicle:
 - Place the electronic key in a location 2 m (6 ft.) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
 - Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P. 168)
- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again, or use the lock sensor on the lower part of the door handle.
- A sudden handle operation or a handle operation immediately after entering the effective range may prevent the doors from being unlocked. Touch the door unlock sensor and check that the doors are unlocked before pulling the door handle again.
- Unlocking the vehicle may take more time if another electronic key is within the effective range.

■ When the vehicle is not driven for extended periods

- To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- The smart entry & start system can be deactivated in advance. (→P. 679)

■ To operate the system properly

- Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention function may not operate.)

- Do not leave the electronic key inside the luggage compartment.
The key confinement prevention function may not operate, depending on the location of the key (close to a spare tire [if equipped], the inside edge of the luggage compartment), conditions (inside a metal bag, close to metallic objects) and the radio waves in the surrounding area. (→P. 163)

■ If the smart entry & start system does not operate properly

- Locking and unlocking the doors and opening the trunk: Use the mechanical key. (→P. 647)
- Starting the engine: →P. 648

■ Customization

Settings (e. g. smart entry & start system) can be changed.
(Customizable features: →P. 679)

■ If the smart entry & start system has been deactivated in a customized setting

- Locking and unlocking the doors and opening the trunk:
Use the wireless remote control or mechanical key. (→P. 154, 161, 647)
- Starting the engine and changing engine switch modes: →P. 648
- Stopping the engine: →P. 222

■ Certification for the smart entry & start system

- For vehicles sold in Dominican Republic

FCC ID: NI4TMLF12-1

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: NI4TMLF12-6

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID:HYQ23AAB
FCC ID:HYQ14FBA
FCC ID:HYQ14CBB
FCC ID:HYQ14CCB

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► For vehicles sold in Taiwan

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

► For vehicles sold in Korea

 


상호명/제조사 : TOKAI RIKI CO., LTD.
 가자재의 명칭(모델명) : 특정소출력무선기기(데이터전송용 무선기기) (BG1EK)
 제조년월/제조국 : Shown on product./Japan
 식별부호 : KCC-CRM-TRJ-BG1EK



상호명/제조사 : DENSO CORPORATION
 가자재의 명칭(모델명) : 데이터전송용 무선기기(14CEB)
 제조년월/제조국 : See product. / Japan
 식별부호 : KCC-CRM-DKR-14CEB

► For vehicles sold in Singapore



- For vehicles sold in Aruba and Curacao

FCC ID:HYQ23AAB
FCC ID:HYQ14FBA
FCC ID:HYQ14CBB
FCC ID:HYQ14CCB

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Argentina

DENSO
14CCB

CNC COMISIÓN NACIONAL
DE COMUNICACIONES

ID: H-21523

**WARNING****■ Caution regarding interference with electronic devices**

- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas.
(→P. 166)


The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask your Lexus dealer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.

- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.
Radio waves could have unexpected effects on the operation of such medical devices.

Ask your Lexus dealer for details on disabling the entry function.

Front seats

Adjustment procedure

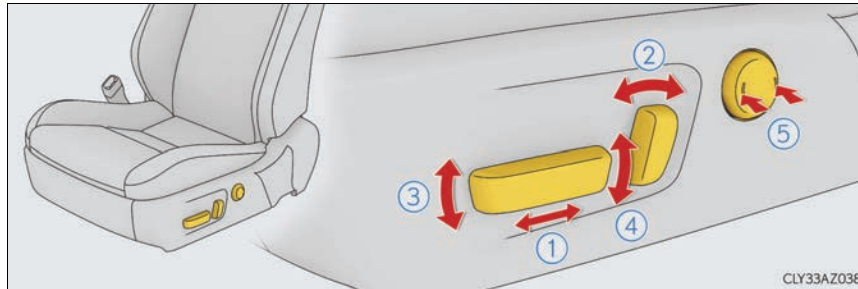

- | | |
|---|---|
| ① Seat position adjustment | ④ Seat cushion (rear) angle adjustment |
| ② Seatback angle adjustment | ⑤ Lumbar support adjustment (if equipped) |
| ③ Seat cushion (front) angle adjustment | |

■ Power easy access system (if equipped)

The driver's seat and steering wheel move in accordance with engine switch mode and the driver's seat belt condition. (→P. 179)

■ When adjusting the seat

- Take care when adjusting the seat so that the head restraint does not touch the ceiling.
- When folding down a rear seatback, if it interferes with a front seatback, adjust the front seat position so that the seats no longer interfere with each other. However, if adjusting the front seat position causes the correct driving posture to not be maintained, return the rear seatback to its original position. (→P. 177)

**WARNING****■ When adjusting the seat position**

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury. Fingers or hands may become jammed in the seat mechanism.
- Make sure to leave enough space around the feet so they do not get stuck.

■ Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.


Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

Rear seats

The rear seatbacks can be folded down.


Folding down the rear seatbacks

- 1 Check that the luggage security system lever in the trunk is in the unlock position.

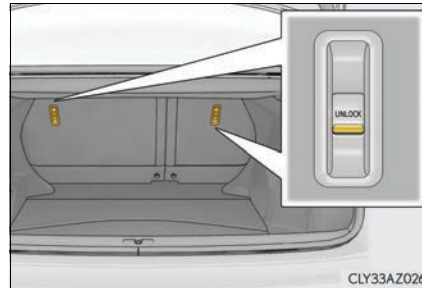

- 2 Pull the seatback lock release lever and fold the seatback down.

To return the rear seatbacks to their original position, lift them up until they lock.

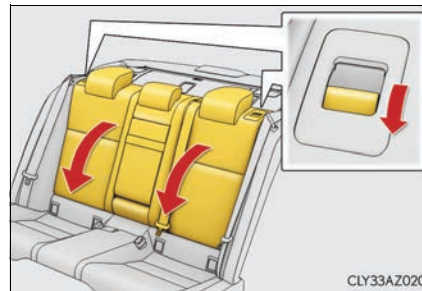

Luggage security system

→P. 162

3

Operation of each component

⚠ WARNING


Observe the following precautions. Failure to do so may result in death or serious injury.

■ When folding the rear seatbacks down

- Do not fold the seatbacks down while driving.
- Stop the vehicle on level ground, set the parking brake and shift the shift lever to P.
- Do not allow anyone to sit on a folded seatback or in the trunk while driving.
- Do not allow children to enter the trunk.

■ After returning the rear seatback to the upright position

- Make sure that the seatback is securely locked in position by lightly pushing it back and forth.
If the seatback is not securely locked, the red marking will be visible on the seatback lock release knob. Make sure that the red marking is not visible.

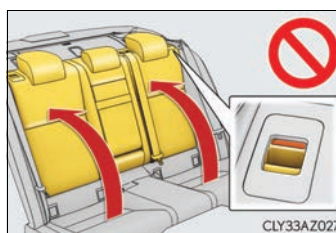

- Check that the seat belts are not twisted or caught in the seatback.

Driving position memory*


This feature automatically adjusts the driver's seat, steering wheel and outside rear view mirrors to make entering and exiting the vehicle easier or to suit your preferences.

Power easy access system

The seat and steering wheel are automatically adjusted to allow the driver to enter and exit the vehicle easily.

When all of the following have been performed, the driver's seat and steering wheel are automatically adjusted to a position that allows driver to enter and exit the vehicle easily.

- The shift lever has been shifted to P.
- The engine switch has been turned off.
- The driver's seat belt has been unfastened.

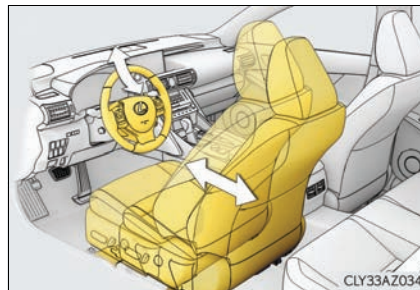

When any of the following has been performed, the driver's seat and steering wheel automatically return to their original positions.

- The engine switch has been turned to ACCESSORY mode or IGNITION ON mode.
- The driver's seat belt has been fastened.

■ Operation of the power easy access system

When exiting the vehicle, the power easy access system may not operate if the seat is already close to the rearmost position, etc.

■ Customization

The seat movement amount settings of the power easy access system can be customized. (Customizable features: →P. 679)

3

Operation of each component

*: If equipped

Driving position memory


Your preferred driving position (the position of the driver's seat, steering wheel and outside rear view mirrors) can be recorded and recalled by pressing a button.

Three different driving positions can be recorded into memory.

■ Recording procedure


- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.
- 3 Adjust the driver's seat, steering wheel, and outside rear view mirrors to the desired positions.
- 4 While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1", "2" or "3" until the buzzer sounds.

If the selected button has already been preset, the previously recorded position will be overwritten.

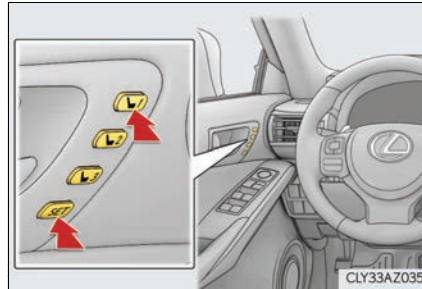

■ Recall procedure

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.
- 3 Press one of the buttons for the driving position you want to recall until the buzzer sounds.

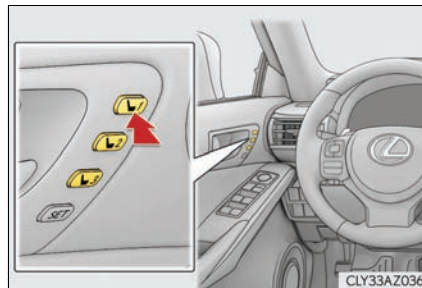

■ To stop the position recall operation part-way through

Perform any of the following operations:

- Press the "SET" button.
- Press button "1", "2" or "3".
- Operate any of the seat adjustment switches (only cancels seat position recall).
- Operate the tilt and telescopic steering control switch (only cancels steering wheel position recall).

■ Seat positions that can be memorized (→P. 175)

The adjusted positions other than the position adjusted by lumbar support switch can be memorized.

■ Operating the driving position memory after turning the engine switch off

Recorded seat positions can be activated up to 180 seconds after the driver's door is opened and another 60 seconds after it is closed again. Recorded steering wheel position can be activated by pressing the engine switch.

■ In order to correctly use the driving position memory function

If a seat position is already in the furthest possible position and the seat is operated in the same direction, the recorded position may be slightly different when it is recalled.

Memory recall function

Each electronic key (including a card key) can be registered to recall your preferred driving position.


■ Registering procedure

Record your driving position to button “1”, “2” or “3” before performing the following:

Carry only the key you want to register, and then close the driver’s door. If 2 or more keys are in the vehicle, the driving position cannot be recorded properly.

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.
- 3 Recall the driving position that you want to record.
- 4 While pressing the recalled button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds.

If the button could not be registered, the buzzer sounds continuously for approximately 3 seconds.

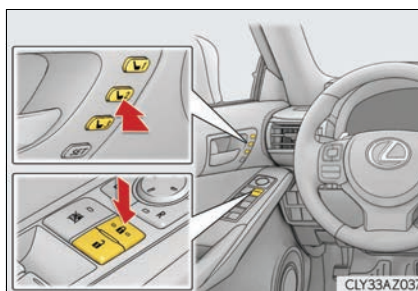

■ Recall procedure

- 1 Make sure that the doors are locked before recalling the driving position. Carry the electronic key that has been registered to the driving position, and then unlock and open the driver’s door using the smart entry & start system or wireless remote control.

The driving position will move to the recorded position (not including the steering wheel). However, the seat will move to a position slightly behind the recorded position in order to make entering the vehicle easier.

If the driving position is in a position that has already been recorded, the seat and outside rear view mirrors will not move.

- 2 Turn the engine switch to ACCESSORY mode or IGNITION ON mode, or fasten a seat belt.

The seat and steering wheel will move to the recorded position.

■ Cancellation procedure

Carry only the key you want to cancel and then close the driver's door. If 2 or more keys are in the vehicle, the driving position cannot be canceled properly.

- 1 Turn the engine switch to IGNITION ON mode.
- 2 While pressing the "SET" button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds twice.

If the button could not be canceled, the buzzer sounds continuously for approximately 3 seconds.

■ Recalling the driving position using the memory recall function

- Different driving positions can be registered for each electronic key. Therefore, the driving position that is recalled may be different depending on the key being carried.
- If a door other than the driver's door is unlocked with the smart entry & start system, the driving position cannot be recalled. In this case, press the driving position button which has been set.

■ Customization

The unlock door settings of the memory recall function can be customized.
(Customizable features: →P. 679)



WARNING

■ Seat adjustment caution


Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.

Head restraints

Head restraints are provided for all seats.


Front seats

- ① Up
Pull the head restraints up.
- ② Down
Push the head restraint down while pressing the lock release button.

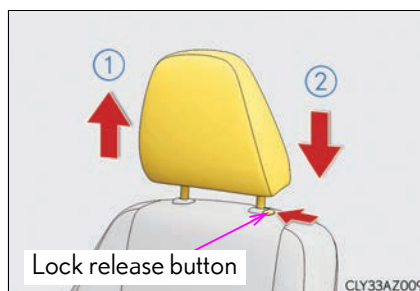

Rear seats

- ① Up
Pull the head restraints up.
- ② Down
Push the head restraint down while pressing the lock release button.

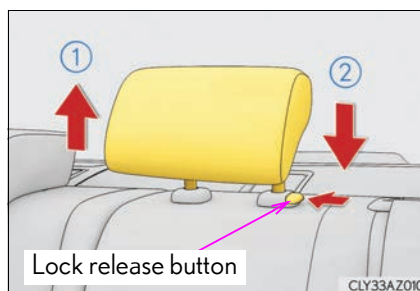

■ Removing the head restraints

Pull the head restraint up while pressing the lock release button.


If the head restraint touches the ceiling, making the removal difficult, change the seat height or angle.



■ Installing the head restraints


► Front seats

Align the head restraint with the installation holes and push it down to the lock position. Press and hold the lock release button when lowering the head restraint.

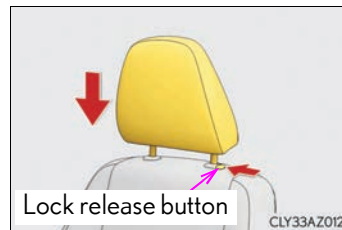


► Rear seats

Align the head restraint with the installation holes and push it down to the lowest lock position while pressing the lock release button.

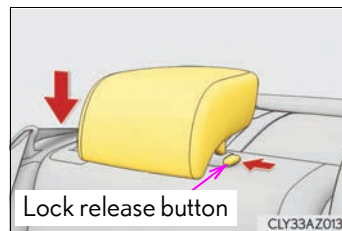

■ Adjusting the height of the head restraints

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

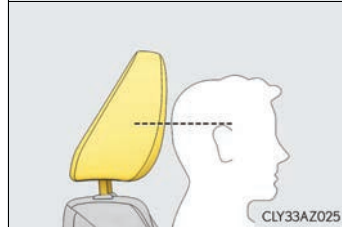**■ Adjusting the rear seat head restraint**

Always raise the head restraint one level from the stowed position when using.

⚠ WARNING**■ Head restraint precautions**

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.


Steering wheel

Adjustment procedure

► Power type


Operating the switch moves the steering wheel in the following directions:

- ① Up
- ② Down
- ③ Toward the driver
- ④ Away from the driver

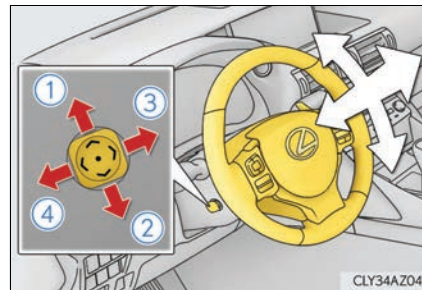


► Manual type

- 1 Hold the steering wheel and push the lever down.

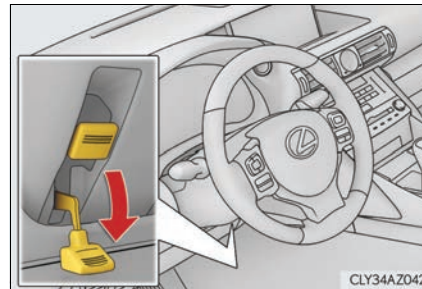

- 2 Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

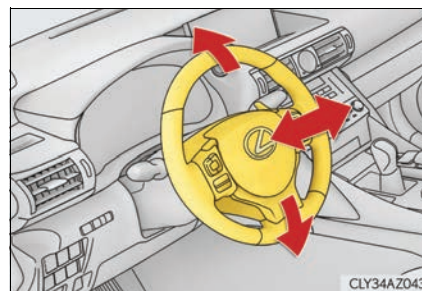


3

Operation of each component

Horn

To sound the horn, press on or close to the  mark.

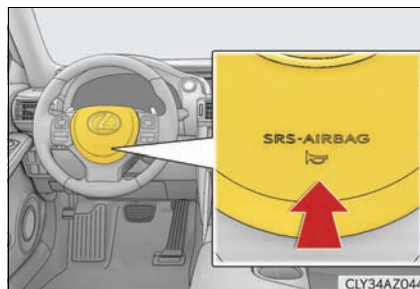

■ The steering wheel can be adjusted when (power type)

The engine switch is in ACCESSORY or IGNITION ON mode*.

*: If the driver's seat belt is fastened, the steering wheel can be adjusted regardless of engine switch mode.

■ Automatic adjustment of the steering position (if equipped)

A desired steering position can be entered to memory and recalled automatically by the driving position memory system. (→P. 179)

■ Power easy access system (if equipped)

The steering wheel and driver's seat move in accordance with engine switch mode and the driver's seat belt condition. (→P. 179)

⚠ WARNING

■ Caution while driving

Do not adjust the steering wheel while driving.
Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

■ After adjusting the steering wheel (manual type)

Make sure that the steering wheel is securely locked.
Otherwise, the steering wheel may move suddenly, possibly causing an accident, and resulting in death or serious injury. Also, the horn may not sound if the steering wheel is not securely locked.


Inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

Adjusting the height of rear view mirror

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

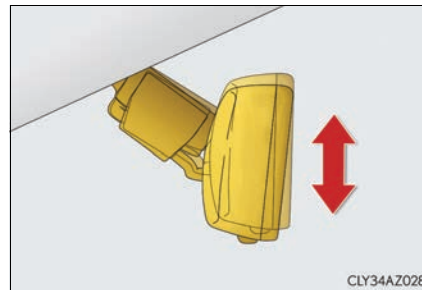


Anti-glare function

◆ Manual anti-glare inside rear view mirror

Reflected light from the headlights of vehicles behind can be reduced by operating the lever.

- ① Normal position
- ② Anti-glare position

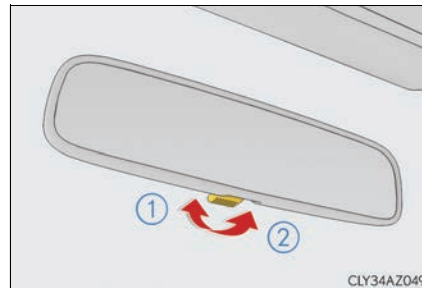


3

Operation of each component


◆ Auto anti-glare inside rear view mirror

Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

► Type A

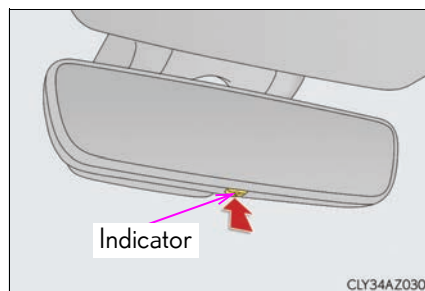

► Type B

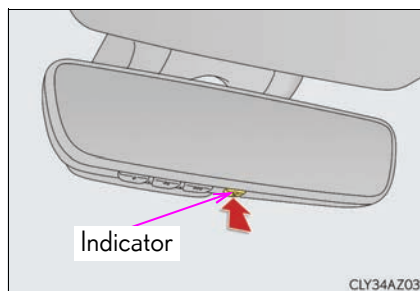

Changing automatic anti-glare function mode


ON/OFF

When the automatic anti-glare function is in ON mode, the indicator illuminates. The function will set to ON mode each time the engine switch is turned to IGNITION ON mode.

Pressing the button turns the function to OFF mode. (The indicator also turns off.)

■ To prevent sensor error (vehicles with auto anti-glare inside rear view mirror)

To ensure that the sensors operate properly, do not touch or cover them.

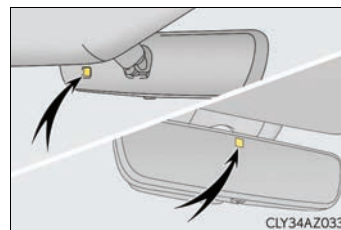

⚠ WARNING

Do not adjust the position of the mirror while driving. Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.


Outside rear view mirrors

Adjustment procedure

- 1** To select a mirror to adjust, press the switch.


- ① Left
- ② Right

Pressing the same switch again will put the switch in neutral.

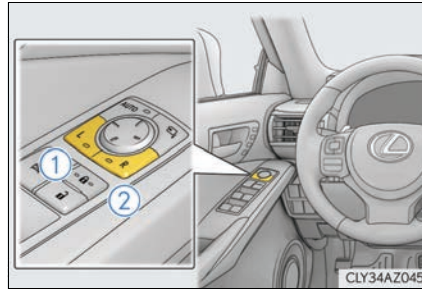

- 2** To adjust the mirror, press the switch.

- ① Up
- ② Right
- ③ Down
- ④ Left

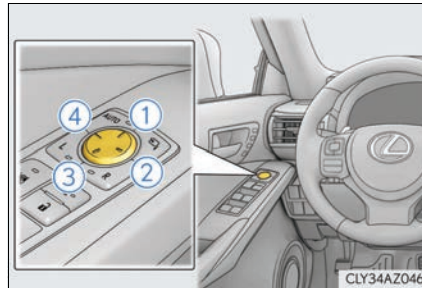


3

Operation of each component

Automatically folding and extending the mirrors**■ Using the switch**

Press the switch to fold the mirrors.

Press it again to extend them to the original position.

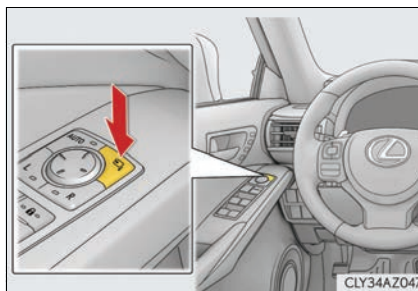
**■ Setting automatic mode (if equipped)**

Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

Press the "AUTO" switch to set automatic mode.

The indicator will come on.

Pressing the switch once more will return to manual mode.

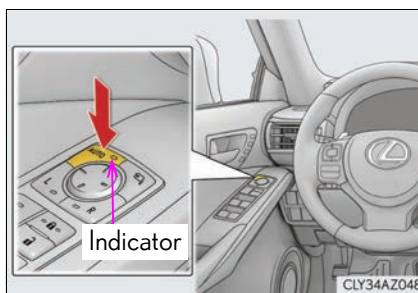

Linked mirror function when reversing (if equipped)

When either "L" or "R" of the mirror select switch is selected, the outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground.

To disable this function, select neither "L" nor "R".

■ Adjusting the mirror angle when the vehicle is reversing

With the shift lever in R, adjust the mirror angle at a desired position.

The adjusted angle will be memorized and the mirror will automatically tilt to the memorized angle whenever the shift lever is shifted to R from next time.

The memorized downward tilt position of the mirror is linked to the normal position (angle adjusted with the shift lever in other than R). Therefore, if the normal position is changed after adjustment, the tilt position will also change.

When the normal position is changed, readjust the angle in reversing.

3

Operation of each component

■ Mirror angle can be adjusted when

The engine switch is in ACCESSORY or IGNITION ON mode.

■ When disconnecting and reconnecting battery terminals

The automatic folding/extending mirror function will return to off as default. To turn the function on, press the switch again to select on.

■ When the mirrors are fogged up (if equipped)

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. (→P. 486)

■ Automatic adjustment of the mirror angle (if equipped)

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory. (→P. 179)

■ Auto anti-glare function (if equipped)

When the anti-glare inside rear view mirror is set to automatic mode, the outside rear view mirrors will activate in conjunction with the anti-glare inside rear view mirror to reduce reflected light. (→P. 190)

■ Using automatic mode in cold weather (if equipped)

When automatic mode is used in cold weather, the door mirror could freeze up and automatic stowing and return may not be possible. In this case, remove any ice and snow from the door mirror, then either operate the mirror using manual mode or move the mirror by hand.

■ Customization

The automatic mirror folding and extending operation can be changed.
(Customizable features: →P. 679)

**WARNING****■ Important points while driving**

Observe the following precautions while driving.

Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

■ When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

■ When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

Power windows


Opening and closing procedures

The power windows can be opened and closed using the switches.

Operating the switch moves the windows as follows:

- ① Closing
- ② One-touch closing*
- ③ Opening
- ④ One-touch opening*

*: To stop the window partway, operate the switch in the opposite direction.

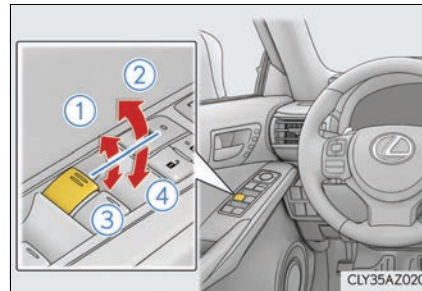


Window lock switch

Press the switch to lock the passenger window switches.

The indicator will come on.

Use this switch to prevent children from accidentally opening or closing a passenger window.

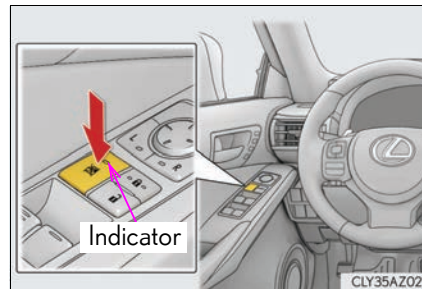

3

Operation of each component

■ The power windows can be operated when

The engine switch is in IGNITION ON mode.

■ Operating the power windows after turning the engine off

The power windows can be operated for approximately 45 seconds after the engine switch is turned to ACCESSORY mode or turned off. They cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object becomes jammed between the window and the window frame while the window is closing, window movement is stopped and the window is opened slightly.

■ Catch protection function

If an object becomes caught between the door and window while the window is opening, window movement is stopped.

■ When the window cannot be opened or closed

When the jam protection function or catch protection function operates unusually and the door window cannot be opened or closed, perform the following operations with the power window switch of that door.

- Stop the vehicle. With the engine switch in IGNITION ON mode, within 4 seconds of the jam protection function or catch protection function activating, continuously operate the power window switch in the one-touch closing direction or one-touch opening direction so that the door window can be opened and closed.
- If the door window cannot be opened and closed even when performing the above operations, perform the following procedure for function initialization.
 - 1 Turn the engine switch to IGNITION ON mode.
 - 2 Pull and hold the power window switch in the one-touch closing direction and completely close the door window.
 - 3 Release the power window switch for a moment, resume pulling the switch in the one-touch closing direction, and hold it there for approximately 6 seconds or more.
 - 4 Press and hold the power window switch in the one-touch opening direction. After the door window is completely opened, continue holding the switch for an additional 1 second or more.
 - 5 Release the power window switch for a moment, resume pushing the switch in the one-touch opening direction, and hold it there for approximately 4 seconds or more.
 - 6 Pull and hold the power window switch in the one-touch closing direction again. After the door window is completely closed, continue holding the switch for a further 1 second or more.

If you release the switch while the window is moving, start again from the beginning.

If the window reverses and cannot be fully closed or opened, have the vehicle inspected by your Lexus dealer.

■ Door lock linked window operation

- The power windows can be opened and closed using the mechanical key.* (→P. 647)
- Except for Korea: The power windows can be opened and closed using the wireless remote control.* (→P. 154)

*: These settings must be customized at your Lexus dealer.

■ When the battery is disconnected

The window lock switch is disabled. If necessary, press the window lock switch after reconnecting the battery.

■ Power windows open warning buzzer

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the engine switch is turned off and the driver's door is opened with the power windows open.

■ Customization

Settings (e.g. linked door lock operation) can be changed.
(Customizable features: →P. 679)

 WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ Closing the windows

- The driver is responsible for all the power window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power windows. It is possible for children and other passengers to have body parts caught in the power window. Also, when riding with a child, it is recommended to use the window lock switch. (→P. 195)
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- When using the wireless remote control or mechanical key and operating the power windows, operate the power window after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window. Also do not let a child operate window by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the power window.
- When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

■ Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets jammed just before the window is fully closed. Be careful not to get any part of your body jammed in the window.

■ Catch protection function

- Never use any part of your body or clothing to intentionally activate the catch protection function.
- The catch protection function may not work if something gets caught just before the window is fully opened. Be careful not to get any part of your body or clothing caught in the window.


Moon roof*

Use the overhead switches to open and close the moon roof and tilt it up and down.

Opening and closing


- ① Opens the moon roof*
The moon roof stops slightly before the fully open position to reduce wind noise. Press the switch again to fully open the moon roof.
- ② Closes the moon roof*

*: Lightly press either way of the moon roof switch to stop the moon roof part-way.

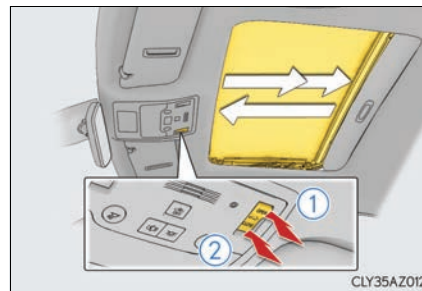

Tilting up and down

- ① Tilts the moon roof up*
 - ② Tilts the moon roof down*
- *: Lightly press either way of the moon roof switch to stop the moon roof part-way.

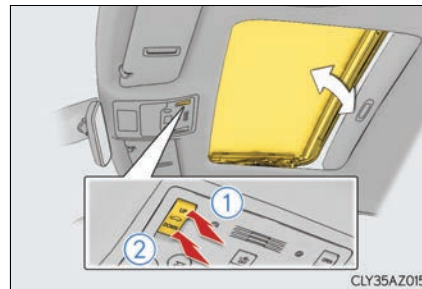

3

Operation of each component

*: If equipped

■ The moon roof can be operated when

The engine switch is in IGNITION ON mode.

■ Operating the moon roof after turning the engine off

The moon roof can be operated for approximately 45 seconds after the engine switch is turned to ACCESSORY mode or turned off. It cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object is detected between the moon roof and the frame while the moon roof is closing or tilting down, travel is stopped and the moon roof opens slightly.

■ Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

■ Door lock linked moon roof operation

- The moon roof can be opened and closed using the mechanical key. * (→P. 647)
- Except for Korea: The moon roof can be opened and closed using the wireless remote control. * (→P. 154)

*: These settings must be customized at your Lexus dealer.

■ When the moon roof does not close normally

Perform the following procedure:

- If the moon roof closes but then re-opens slightly

- 1 Stop the vehicle.
- 2 Press and hold the "CLOSE" switch.*1
The moon roof will close, reopen and pause for approximately 10 seconds.*2 Then it will close again, tilt up and pause for approximately 1 second. Finally, it will tilt down, open and close.
- 3 Check to make sure that the moon roof is completely closed and then release the switch.

- If the moon roof tilts down but then tilts back up

- 1 Stop the vehicle.
- 2 Press and hold the "UP" switch*1 until the moon roof moves into the tilt up position and stops.
- 3 Release the "UP" switch once and then press and hold the "UP" switch again.*1
The moon roof will pause for approximately 10 seconds in the tilt up position.*2 Then it will adjust slightly and pause for approximately 1 second. Finally, it will tilt down, open and close.
- 4 Check to make sure that the moon roof is completely closed and then release the switch.

*1: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

*2: If the switch is released after the above mentioned 10 second pause, automatic operation will be disabled. In that case, press and hold the "CLOSE" or "UP" switch, and the moon roof will tilt up and pause for approximately 1 second. Then it will tilt down, open and close. Check to make sure that the moon roof is completely closed and then release the switch.

If the moon roof does not fully close even after performing the above procedure correctly, have the vehicle inspected by your Lexus dealer.

■ Moon roof open warning buzzer

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the engine switch is turned off and the driver's door is opened with the moon roof open.

■ Customization

Settings (e.g. linked door lock operation) can be changed.
(Customizable features: →P. 679)

WARNING

Observe the following precautions.
Failure to do so may cause death or serious injury.

■ Opening the moon roof

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

■ Closing the moon roof

- The driver is responsible for moon roof opening and closing operations.
In order to prevent accidental operation, especially by a child, do not let a child operate the moon roof. It is possible for children and other passengers to have body parts caught in the moon roof.
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the moon roof is being operated.
- When using the wireless remote control or mechanical key and operating the moon roof, operate the moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the moon roof. Also, do not let a child operate moon roof by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the moon roof.
- When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

■ Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the moon roof fully closes.

Driving

4

4-1. Before driving	4-5. Using the driving support systems
Driving the vehicle.....204	Lexus Safety System + ... 259
Cargo and luggage..... 213	PCS (Pre-Collision System) 266
Trailer towing (for South Africa with a towing package)..... 214	LDA (Lane Departure Alert with steering control) 279
Trailer towing (vehicles without a towing package)..... 221	Dynamic radar cruise control 289
4-2. Driving procedures	Cruise control 301
Engine (ignition) switch 222	Stop & Start system..... 305
Automatic transmission..... 227	• Hill-start assist control 308
Turn signal lever 234	Lexus parking assist-sensor..... 314
Parking brake 236	Lexus parking assist monitor 323
ASC (Active Sound Control) 237	BSM (Blind Spot Monitor)..... 339
4-3. Operating the lights and wipers	• BSM function..... 345
Headlight switch..... 239	• RCTA function..... 348
Automatic High Beam..... 242	Driving mode select switch 353
Fog light switch 246	Driving assist systems 357
Windshield wipers and washer 247	4-6. Driving tips
4-4. Refueling	Winter driving tips..... 363
Opening the fuel tank cap..... 255	Eco-friendly driving tips..... 367

Driving the vehicle

The following procedures should be observed to ensure safe driving:

Starting the engine

→P. 222

Driving

- 1 With the brake pedal depressed, shift the shift lever to D. (→P. 227)
- 2 Release the parking brake. (→P. 236)
- 3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

Stopping

- 1 With the shift lever in D, depress the brake pedal.
Vehicles with a Stop & Start system: If the Stop & Start system is enabled, depressing the brake pedal will stop the engine.
- 2 If necessary, set the parking brake.
If the vehicle is to be stopped for an extended period of time, shift the shift lever to P or N. (→P. 227)

Parking the vehicle

- 1 With the shift lever in D, depress the brake pedal.
- 2 Set the parking brake (→P. 236), and shift the shift lever to P (→P. 227).
If parking on a hill, block the wheels as needed.
- 3 Press the engine switch to stop the engine.
- 4 Lock the door, making sure that you have the electronic key on your person.

Starting off on a steep uphill

- 1 Make sure that the parking brake is set and shift the shift lever to D.
- 2 Gently depress the accelerator pedal.
- 3 Release the parking brake.

■ When starting off on an uphill

The hill-start assist control will activate. (→P. 357)

■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

■ Engine speed while driving

In the following conditions, the engine speed may become high while driving. This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be driving uphill or downhill
- When the accelerator pedal is released
- When the brake pedal is depressed while sport mode is selected

■ Restraining the engine output (Brake Override System)

- When the accelerator and brake pedals are depressed at the same time, the engine output may be restrained.
- A warning message is displayed on the multi-information display while the system is operating. (→P. 622)

■ Restraining sudden start (Drive-Start Control)

- When the following unusual operation is performed, the engine output may be restrained.
 - When the shift lever is shifted from R to D, D to R, N to R, P to D, or P to R (D includes M) with the accelerator pedal depressed, a warning message appears on the multi-information display. (→P. 612)
 - When the accelerator pedal is depressed too much while the vehicle is in reverse.
- While Drive-Start Control is being activated, your vehicle may have trouble escaping from the mud or fresh snow. In such case, deactivate TRC (→P. 359) to cancel Drive-Start Control so that the vehicle may become able to escape from the mud or fresh snow.

■ Breaking in your new Lexus

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 300 km (186 miles):
Avoid sudden stops.
- For the first 800 km (500 miles):
Do not tow a trailer.
- For the first 1000 km (621 miles):
 - Do not drive at extremely high speeds.
 - Avoid sudden acceleration.
 - Do not drive continuously in low gears.
 - Do not drive at a constant speed for extended periods.

■ Drum-in-disc type parking brake system

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drum are replaced. Have your Lexus dealer perform the bedding down operation.

■ Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P. 665)

■ Idling time before engine stop

► IS300 (vehicles without a Stop & Start system)

To prevent damage to the turbocharger, allow the engine to idle immediately after high-speed driving or hill climbing.

Driving condition	Idling time
Normal city driving	Not necessary
High-speed driving (Constant speed of approx. 100 km/h [62 mph])	Approximately 1 minute
Steep hill driving or continuous driving at 100 km/h (62 mph) or more (race track driving etc.)	Approximately 2 minutes

► IS300 (vehicles with a Stop & Start system)

To prevent damage to the turbocharger, allow the engine to idle immediately after high-load driving.

Driving condition	Idling time
Normal city driving or high-speed driving (at the highway speed limit or recommended speed)	Not necessary
Steep hill driving, continuous driving (race track driving etc.), or towing a trailer or another vehicle (for South Africa with a towing package)	Approximately 1 minute

- If the steering wheel is turned shortly after the engine has started (vehicles with a Stop & Start system)

→P. 309



WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ When starting the vehicle

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

■ When driving the vehicle

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
 - Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
 - When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
 - Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
 - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- Do not drive the vehicle over or stop the vehicle near flammable materials. The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.
- During normal driving, do not turn off the engine. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so. However, in the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: →P. 591
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill. Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P. 227)
- Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving. Doing so may result in a loss of vehicle control.
- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.

**WARNING**

Observe the following precautions.

Failure to do so may result in death or serious injury.

■ **When driving on slippery road surfaces**

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.
- Sudden acceleration, engine braking due to shifting, or changes in engine speed could cause the vehicle to skid.
- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

■ **When shifting the shift lever**

- Do not let the vehicle roll backward while the shift lever is in a driving position, or roll forward while the shift lever is in R.
Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle.
- Do not shift the shift lever to P while the vehicle is moving.
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward.
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to a driving position while the vehicle is moving backward.
Doing so can damage the transmission and may result in a loss of vehicle control.
- Shifting the shift lever to N while the vehicle is moving will disengage the engine from the transmission. Engine braking is not available when N is selected.
- Be careful not to shift the shift lever with the accelerator pedal depressed. Shifting the shift lever to a gear other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

■ **If you hear a squealing or scraping noise (brake pad wear indicators)**

Have the brake pads checked and replaced by your Lexus dealer as soon as possible. Rotor damage may result if the pads are not replaced when needed.

Front brakes only: Moderate levels of brake pad and disc wear allow enhanced front braking power. As a result, the discs may wear more quickly than conventional brake discs. Therefore, when replacing the brake pads, Lexus recommends that you also have the thickness of the discs measured.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

 WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ **When the vehicle is stopped**

- Do not race the engine.
If the shift lever is any position other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.
- In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the engine is running, and apply the parking brake as necessary.
- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.
- Avoid revving or racing the engine.
Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

■ **When the vehicle is parked**

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.
Doing so may result in the following:
 - Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
 - The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
 - Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake, shift the shift lever to P, stop the engine and lock the vehicle.
Do not leave the vehicle unattended while the engine is running.
If the vehicle is parked with the shift lever in P but the parking brake is not set, the vehicle may start to move, possibly leading to an accident.
- Do not touch the exhaust pipes while the engine is running or immediately after turning the engine off.
Doing so may cause burns.

**WARNING**

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ When taking a nap in the vehicle

Always turn the engine off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

■ When braking

- When the brakes are wet, drive more cautiously.
Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.
- If the brake booster device does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking.
In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.
- Do not pump the brake pedal if the engine stalls.
Each push on the brake pedal uses up the reserve for the power-assisted brakes.
- The brake system consists of 2 individual hydraulic systems; if one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase.
Have your brakes fixed immediately.

■ If the vehicle becomes stuck

Do not spin the wheels excessively when any of the tires is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.

**NOTICE**

■ **When driving the vehicle**

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the engine output.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

■ **When parking the vehicle**

Always set the parking brake, and shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

■ **Avoiding damage to vehicle parts**

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.
Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.
- IS300 (vehicles without a Stop & Start system): Make sure to idle the engine immediately after high speed driving or hill climbing. Stop the engine only after the turbocharger has cooled down.
Failure to do so may cause damage to the turbocharger.
- IS300 (vehicles with a Stop & Start system): Make sure to idle the engine immediately after high-load driving. Stop the engine only after the turbocharger has cooled down.
Failure to do so may cause damage to the turbocharger.

■ **If you get a flat tire while driving**

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally.

Information on what to do in case of a flat tire (→P. 632, 644)



NOTICE

■ When encountering flooded roads

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have your Lexus dealer check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, transmission, differential, etc.
- Lubricant condition for the propeller shaft, bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load:

WARNING

■ Things that must not be carried in the trunk

The following things may cause a fire if loaded in the trunk:

- Receptacles containing gasoline
- Aerosol cans

■ Storage precautions

Observe the following precautions.

Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- Stow cargo and luggage in the trunk whenever possible.
- To prevent cargo and luggage from sliding forward during braking, do not stack anything in the enlarged trunk. Keep cargo and luggage low, as close to the floor as possible.
- When you fold down the rear seats, long items should not be placed directly behind the front seats.
- Never allow anyone to ride in the enlarged trunk. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened.
- Do not place cargo or luggage in or on the following locations.
 - At the feet of the driver
 - On the front passenger or rear seats (when stacking items)
 - On the package tray
 - On the instrument panel
 - On the dashboard
 - In front of the Lexus Display Audio screen (if equipped) or navigation system screen (if equipped)
- Secure all items in the occupant compartment.

■ Load and distribution

- Do not overload your vehicle.
- Do not apply loads unevenly.
Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

Trailer towing (for South Africa with a towing package)

The strain of towing a trailer will have a negative impact on the running performance, handling, fuel consumption and endurance of your vehicle. Use the vehicle features in the correct manner and operate the vehicle with care for safer driving and optimal comfort. Damage and/or malfunctions that occur as a result of towing performed for commercial purposes are not covered by the Lexus warranty.

Contact your Lexus dealer for further information about additional requirements such as towing kits, etc.

◆ Weight limits

Check the allowable towing capacity, GVM (Gross Vehicle Mass), MPAC (Maximum Permissible Axle Capacity), and permissible draw bar load before towing. (→P. 662)


◆ Towing hitch/bracket

Lexus recommends the use of the Lexus hitch/bracket for your vehicle. Other products of a suitable nature and comparable quality may also be used.


◆ To prevent an accident

The handling of the vehicle will feel different when towing a trailer. Beware of the 3 most common causes of towing-related accidents: driver error, excessive speed, and overloading.

Installation positions for the towing hitch/bracket and hitch ball

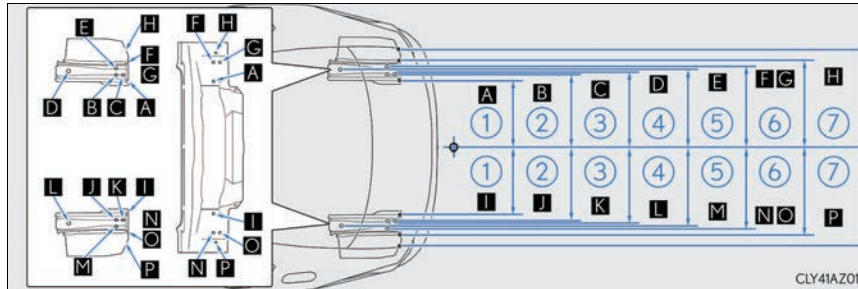

- | | |
|---------------------|---------------------|
| ① 436 mm (17.2 in.) | ⑤ 520 mm (20.5 in.) |
| ② 475 mm (18.7 in.) | ⑥ 560 mm (22.0 in.) |
| ③ 476 mm (18.7 in.) | ⑦ 622 mm (24.5 in.) |
| ④ 502 mm (19.8 in.) | |

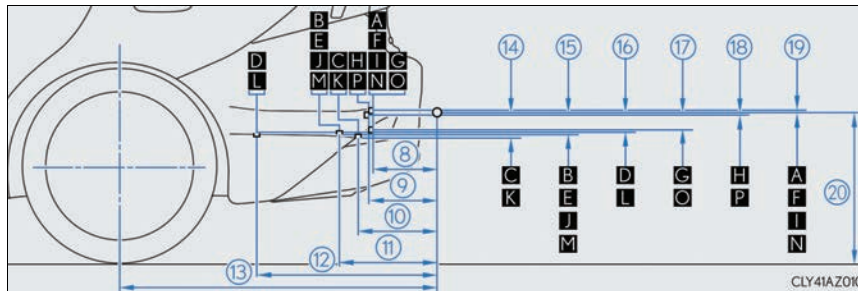

- | | |
|----------------------|---------------------|
| ⑧ 308 mm (12.1 in.) | ⑮ 53 mm (2.1 in.) |
| ⑨ 318 mm (12.5 in.) | ⑯ 42 mm (1.7 in.) |
| ⑩ 342 mm (13.5 in.) | ⑰ 34 mm (1.3 in.) |
| ⑪ 394 mm (15.5 in.) | ⑱ 6 mm (0.2 in.) |
| ⑫ 704 mm (27.7 in.) | ⑲ 11 mm (0.4 in.) |
| ⑬ 1138 mm (44.8 in.) | ⑳ 390 mm (15.4 in.) |
| ⑭ 58 mm (2.3 in.) | |

■ Tire information

- Increase the tire inflation pressure to 20.0 kPa (0.2 kgf/cm² or bar, 3 psi) greater than the recommended value when towing. (→P. 675)
- Increase the air pressure of the trailer tires in accordance with the total trailer weight and according to the values recommended by the manufacturer of your trailer.

■ Break-in schedule

Lexus recommends that vehicles fitted with new power train components should not be used for towing trailers for the first 800 km (500 miles).

■ Safety checks before towing

- Check that the maximum load limit for the towing hitch/bracket hitch ball is not exceeded. Bear in mind that the coupling weight of the trailer will add to the load exerted on the vehicle. Also make sure that you will not be towing a load that exceeds the maximum permissible axle capacity.
- Ensure that the trailer load is secure.
- Supplementary outside rear view mirrors should be added to the vehicle if the traffic behind cannot be clearly seen with standard mirrors. Adjust the extending arms of these mirrors on both sides of the vehicle so that they always provide maximum visibility of the road behind.

■ Maintenance

- Maintenance must be performed more frequently when using the vehicle for towing due to the greater weight burden placed on the vehicle compared to normal driving.
- Retighten all bolts securing the hitching ball and bracket after towing for approximately 1000 km (600 miles).



NOTICE

■ When the rear bumper strengthening material is aluminum

Ensure the steel bracket part does not come directly in contact with that area. When steel and aluminum come into contact, there is a reaction similar to corrosion, which will weaken the section concerned and may result in damage. Apply a rust inhibitor to parts that will come in contact when attaching a steel bracket.

Guidance

Your vehicle will handle differently when towing a trailer. In order to avoid accident, death or serious injury, keep the following in mind when towing:

■ Checking connections between trailer and lights

Stop the vehicle and check the operation of the connection between the trailer and lights after driving for a brief period as well as before starting off.

■ Practicing driving with a coupled trailer

- Get the feel for turning, stopping and reversing with the trailer coupled by practicing in an area with no or light traffic.
- When reversing with a coupled trailer, hold the section of the steering wheel nearest to you and rotate clockwise to turn the trailer left or counterclockwise to turn it right. Always rotate a little at a time to prevent steering error. Have someone guide you when reversing to lessen the risk of an accident.

■ Increasing vehicle-to-vehicle distance

At a speed of 10 km/h (6 mph), the distance to the vehicle running ahead of you should be equivalent to or greater than the combined length of your vehicle and trailer. Avoid sudden braking that may cause skidding. Otherwise, the vehicle may spin out of control. This is especially true when driving on wet or slippery road surfaces.

■ Sudden acceleration/steering input/cornering

Executing sharp turns when towing may result in the trailer colliding with your vehicle. Decelerate well in advance when approaching turns and take them slowly and carefully to avoid sudden braking.

■ Important points regarding turning

The wheels of the trailer will travel closer to the inside of the curve than the wheels of the vehicle. To make allowance for this, take the turns wider than you would normally do.

■ Important points regarding stability

Vehicle movement resulting from uneven road surfaces and strong crosswinds will affect handling. The vehicle may also be rocked by passing buses or large trucks. Frequently check behind when moving alongside such vehicles. As soon as such vehicle movement occurs, immediately start to decelerate smoothly by slowly applying the brakes. Always steer the vehicle straight ahead while braking.

■ Passing other vehicles

Consider the total combined length of your vehicle and trailer and ensure that the vehicle-to-vehicle distance is sufficient before executing lane changes.

■ Transmission information

To maintain engine braking efficiency, when using engine braking when driving on a long steep downward grade, do not use the transmission in D. The vehicle must be driven in shift range 4 of M mode. (→P. 230)

■ If the engine overheats

Towing a loaded trailer up a long, steep incline in temperatures exceeding 30°C (85°F) may result in the engine overheating. If the engine coolant temperature gauge indicates that the engine is overheating, turn the air conditioning off immediately, leave the road and stop the vehicle in a safe place. (→P. 655)

■ When parking the vehicle

Always place wheel chocks under the wheels of both the vehicle and trailer. Firmly set the parking brake and shift the shift lever to P.

**WARNING****■ To avoid accident or injury**

Do not tow a trailer when the compact spare tire is installed on your vehicle.

■ Vehicle speed in towing

Observe the legal maximum speeds for trailer towing.

■ Before descending hills or long declines

Reduce speed and downshift. However, never downshift suddenly while descending steep or long downhill grades.


■ Operation of the brake pedal

Do not hold the brake pedal depressed often or for long periods of time. Doing so may result in the brake overheating or reduce braking effects.

Trailer towing (vehicles without a towing package)

Lexus does not recommend towing a trailer with your vehicle. Lexus also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your vehicle is not designed for trailer towing or for the use of tow hitch mounted carriers.

Towing capacity: 0 kg (0 lb.)

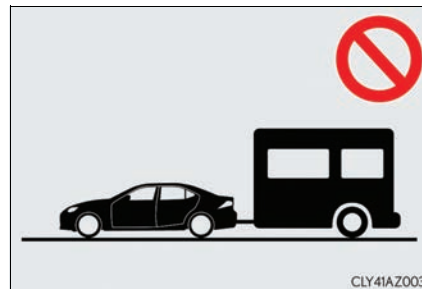

4

Driving

Engine (ignition) switch

Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch modes.

Starting the engine

- 1 Check that the parking brake is set.
- 2 Check that the shift lever is in P.
- 3 Firmly depress the brake pedal.



and a message will be displayed on the multi-information display.

If it is not displayed, the engine cannot be started.


- 4 Press the engine switch shortly and firmly.

When operating the engine switch, one short, firm press is enough. It is not necessary to press and hold the switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.

The engine can be started from any engine switch mode.

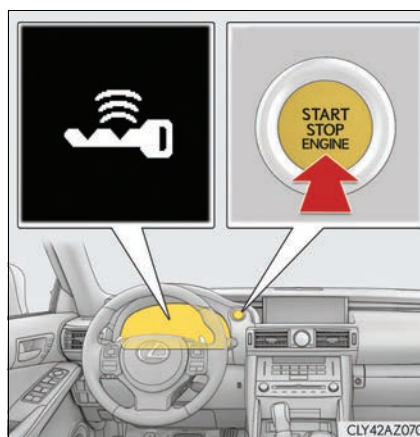

Stopping the engine

- 1 Stop the vehicle.
- 2 Set the parking brake (→P. 236), and shift the shift lever to P.
- 3 Press the engine switch.
- 4 Release the brake pedal and check that the display on the meters is off.

Changing engine switch modes

Modes can be changed by pressing the engine switch with brake pedal released. (The mode changes each time the switch is pressed.)

① Off*

The emergency flashers can be used.
The multi-information display will not be displayed.


② ACCESSORY mode

Some electrical components such as the audio system can be used.
"ACCESSORY" will be displayed on the meters.

③ IGNITION ON mode

All electrical components can be used.
"IGNITION ON" will be displayed on the meters.

*: If the shift lever is in a position other than P when turning off the engine, the engine switch will be turned to ACCESSORY mode, not to off.

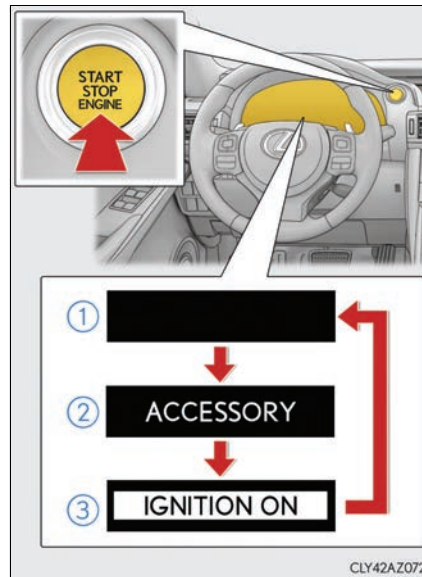

4

Driving

When stopping the engine with the shift lever in a position other than P

If the engine is stopped with the shift lever in a position other than P, the engine switch will not be turned off but instead be turned to ACCESSORY mode. Perform the following procedure to turn the switch off:

- ① Check that the parking brake is set.
- ② Shift the shift lever to P.
- ③ Check that "Turn Off Vehicle" is displayed on the multi-information display and then press the engine switch once.
- ④ Check that "Turn Off Vehicle" on the multi-information display is off.

■ Auto power off function

If the vehicle is left in ACCESSORY mode for more than 20 minutes or IGNITION ON mode (the engine is not running) for more than an hour with the shift lever in P, the engine switch will automatically turn off. However, this function cannot entirely prevent battery discharge. Do not leave the vehicle with the engine switch in ACCESSORY or IGNITION ON mode for long periods of time when the engine is not running.

■ Electronic key battery depletion

→P. 151

■ Conditions affecting operation

→P. 168

■ Notes for the entry function

→P. 169

■ If the engine does not start

- Check that the shift lever is securely set in P. The engine may not start if the shift lever is displaced out of P. "To Start Vehicle, Put Shift Lever into P" will be displayed on the multi-information display.
- The engine immobilizer system may not have been deactivated. (→P. 104)
Contact your Lexus dealer.


■ Steering lock

After turning the engine switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the engine switch again automatically cancels the steering lock.

■ When the steering lock cannot be released

"Steering Wheel Lock Press Engine Switch while Turning Wheel" will be displayed on the multi-information display.

Check that the shift lever is in P. Press the engine switch while turning the steering wheel left and right.

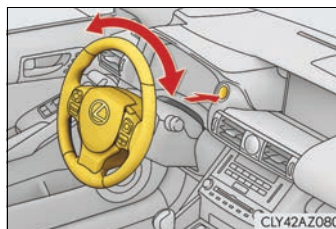

■ Steering lock motor overheating prevention

To prevent the steering lock motor from overheating, operation of the motor may be suspended if the engine is turned on and off repeatedly in a short period of time. In this case, refrain from operating the engine switch. After about 10 seconds, the steering lock motor will resume functioning.

■ When "Smart Entry & Start System Malfunction See Owner's Manual" is displayed on the multi-information display

The system may be malfunctioning. Have the vehicle inspected by your Lexus dealer immediately.

■ If the electronic key battery is depleted

→P. 574

■ Operation of the engine switch

- If the switch is not pressed shortly and firmly, the engine switch mode may not change or the engine may not start.
- If attempting to restart the engine immediately after turning the engine switch off, the engine may not start in some cases. After turning the engine switch off, please wait a few seconds before restarting the engine.

■ If the smart entry & start system has been deactivated by a customized setting

→P. 647

**WARNING****■ When starting the engine**

Always start the engine while sitting in the driver's seat. Do not depress the accelerator pedal while starting the engine under any circumstances. Doing so may cause an accident resulting in death or serious injury.

■ Caution while driving

If engine failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

■ Stopping the engine in an emergency

If you want to stop the engine in an emergency while driving the vehicle, press and hold the engine switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P. 591)

However, do not touch the engine switch while driving except in an emergency. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.

**NOTICE****■ To prevent battery discharge**

- Do not leave the engine switch in ACCESSORY or IGNITION ON mode for long periods of time without the engine running.
- If "ACCESSORY" or "IGNITION ON" is displayed on the meters while the engine is not running, the engine switch is not off. Exit the vehicle after turning the engine switch off.
- Do not stop the engine when the shift lever is in a position other than P. If the engine is stopped in another shift lever position, the engine switch will not be turned off but instead be turned to ACCESSORY mode. If the vehicle is left in ACCESSORY mode, battery discharge may occur.

■ When starting the engine


- Do not race a cold engine.
- If the engine becomes difficult to start or stalls frequently, have your vehicle checked by your Lexus dealer immediately.

■ Symptoms indicating a malfunction with the engine switch

If the engine switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact your Lexus dealer immediately.

Automatic transmission

Shifting the shift lever

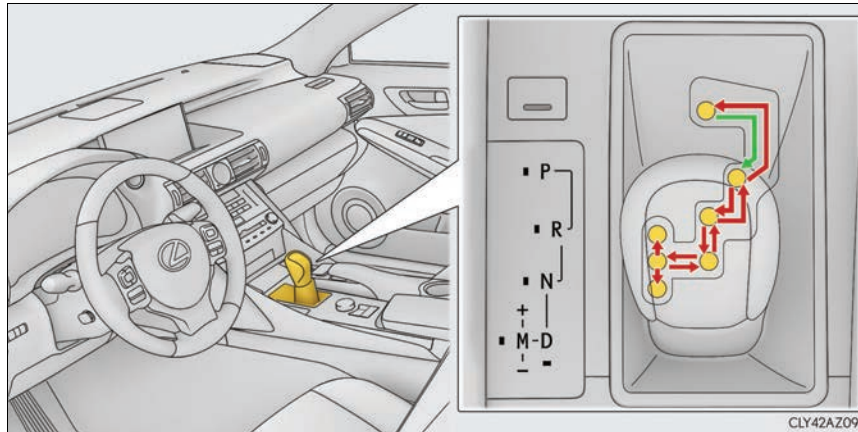

While the engine switch is in IGNITION ON mode, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

Shift position purpose

Shift position	Objective or function
P	Parking the vehicle/starting the engine
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving ^{*1}
M	M mode driving ^{*2} (→P. 230)

^{*1}: To improve fuel efficiency and reduce noise, shift the shift lever to D for normal driving.

^{*2}: Any gear range can be fixed when driving in M mode.

Selecting the driving mode

■ Sport mode/Eco drive mode


→P. 353

■ Snow mode (if equipped)

Snow mode can be selected to suit the conditions when driving on slippery road surfaces, such as snow.

Press the switch.

Press the switch again to return to normal mode.

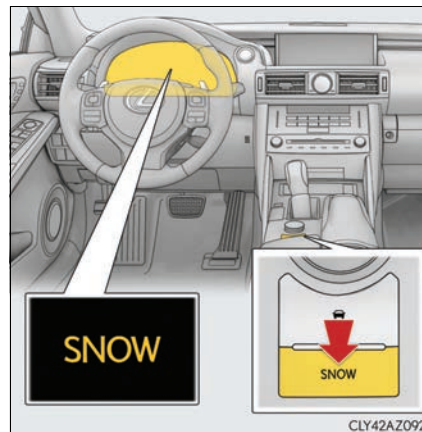

Selecting shift ranges in the D position

To drive using temporary shift range selection, operate the “-” or “+” paddle shift switch.

When the “-” paddle shift switch is operated, the shift range will be downshifted to a range that enables engine braking force that is suitable to driving conditions.

When the “+” paddle shift switch is operated, the shift range will be one gear higher than the gear in use during normal D position driving.


Changing the shift range allows restriction of the highest gear, preventing unnecessary upshifting and enabling the level of engine braking force to be selected.

① Upshifting

② Downshifting

The selected shift range, from D1 to D8, will be displayed in the meter.

To return to normal D position driving, the “+” paddle shift switch must be held down for a period of time.

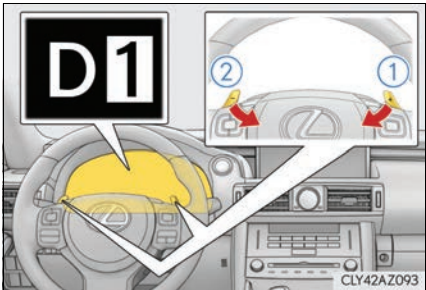

Shift ranges and their functions

Meter display	Function
D2 - D8	A gear in the range between 1 and the selected gear is automatically chosen depending on vehicle speed and driving conditions
D1	1st gear is set

A lower shift range will provide greater engine braking forces than a higher shift range.

Selecting gears in the M position


To enter M mode, shift the shift lever to M. Gears can then be selected by operating the shift lever or paddle shift switches, allowing you to drive in the gear of your choice.

① Upshifting

② Downshifting

The gear changes once every time the shift lever or paddle shift switch is operated.

The selected gear, from M1 to M8, will be fixed and displayed in the meter.

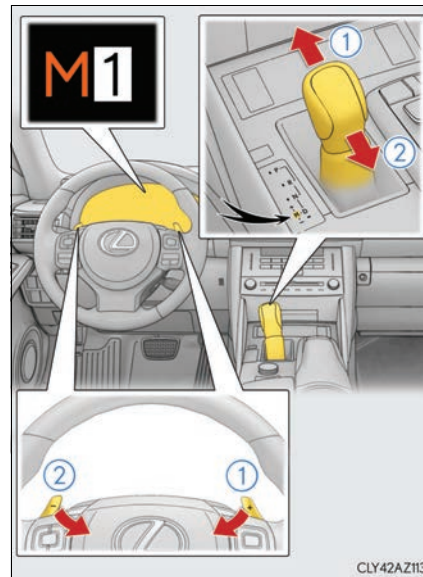

When in the M position, the gear will not change unless the shift lever or paddle shift switches are operated.

However, even when in the M position, the gears will be automatically changed in the following situation:

- When vehicle speed drops (downshift only).
- When the automatic transmission fluid or engine coolant temperature is low.
- When automatic transmission fluid temperature is high.
- When the needle of the tachometer is in the red zone (the range which exceeds the allowable revs of the engine).

In the following situations, the gear will not shift even if the shift lever or paddle shift switches are operated.

- "Slippery Road. Cannot Shift to Lower Gear" is displayed on the multi information display.
- The vehicle speed is low (upshift only).

■ Automatic deactivation of shift range selection in the D position

Shift range selection in the D position will be deactivated in the following situations:

- When the vehicle comes to a stop
- If the accelerator pedal is depressed for more than a certain period of time
- When the shift lever is shifted to a position other than D

■ To protect the automatic transmission

"Transmission Fluid Temp High See Owner's Manual" is displayed on the multi-information display and a function is adopted that automatically selects a higher shift range when the fluid temperature is high. Have the vehicle inspected by your Lexus dealer.

■ Downshifting restriction warning buzzer

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever or paddle shift switch is operated. (A buzzer will sound twice.)

■ Snow mode automatic deactivation

Snow mode is automatically deactivated if the engine switch is turned off after driving in snow mode.

■ Gear position display on the multi-information display

When Gear positions is selected for a Drive Information screen on the multi-information display and the shift lever is in the D or M position, the currently selected gear position will be displayed on the multi-information display. (The display changes according to the shift lever position and driving conditions.)

■ When driving with cruise control or dynamic radar cruise control activated

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate because cruise control or dynamic radar cruise control will not be canceled.

- While driving in the D position, downshifting to 7, 6, 5 or 4. (→P. 289, 301)
- When switching the driving mode to sport mode while driving in D position. (→P. 353)

■ Restraining sudden start (Drive-Start Control)

- When the following unusual operation is performed, the engine output may be restrained.
 - When the shift lever is shifted from R to D, D to R, N to R, P to D, or P to R (D includes M) with the accelerator pedal depressed, a warning message appears on the multi-information display. (→P. 612)
 - When the accelerator pedal is depressed too much while the vehicle is in reverse.

■ Shift lock system

The shift lock system is a system to prevent accidental operation of the shift lever in starting.

The shift lever can be shifted from P only when the engine switch is in IGNITION ON mode and the brake pedal is being depressed.

■ If the shift lever cannot be shifted from P


First, check whether the brake pedal is being depressed.

If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system. Have the vehicle inspected by your Lexus dealer immediately.


The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.

Releasing the shift lock:

- 1 Set the parking brake.
- 2 Turn the engine switch to off.
- 3 Depress the brake pedal.
- 4 Pry the cover up with a flathead screwdriver or equivalent tool.
To prevent damage to the cover, cover the tip of the screwdriver with a rag.

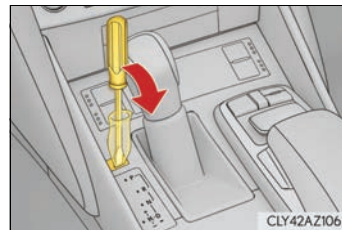

- 5 Press the shift lock override button.
The shift lever can be shifted while the button is pressed.

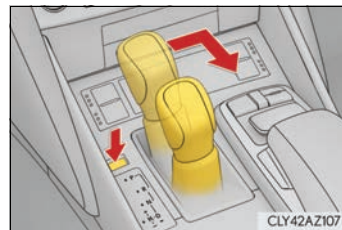

■ AI-SHIFT

- The AI-SHIFT automatically selects the suitable gear according to driver performance and driving conditions.
The AI-SHIFT automatically operates when the shift lever is in D. (Shifting the shift lever to the M position cancels the function.)
- The G AI-SHIFT is automatically changed to a suitable gear step while running in sport mode according to the driving operations and running conditions.
The G AI-SHIFT automatically operates when the drive mode select switch is set to sport mode with the shift lever in the D position. (The function will be canceled, if the drive mode is select switch is set to normal mode or shift lever is put in the M position.)

**WARNING****■ When driving on slippery road surfaces**

Be careful of downshifting and sudden acceleration, as this could result in the vehicle skidding to the side or spinning.

■ To prevent an accident when releasing the shift lock

Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal.


If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.

Turn signal lever

Operating instructions

The lever will return to its original position immediately after operation.

- ① Right turn
- ② Lane change to the right (move the lever partway and release it)
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)
The left hand signals will flash 3 times.
- ④ Left turn

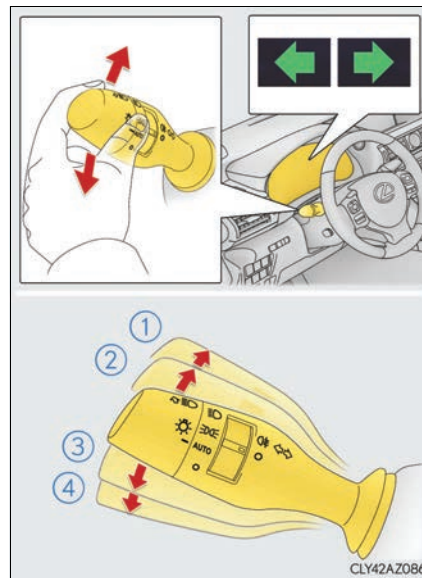

■ **If the turn signals do not stop flashing after turning left or right, or if you want to stop them flashing**

Operate the lever in the opposite direction to either position ② or ③.

If you move the lever to either position ① or ④, the selected turn signals will flash.

- **Turn signals can be operated when**

The engine switch is in IGNITION ON mode.

- **If the indicator flashes faster than usual**

Check that a light bulb in the front or rear turn signal lights has not burned out.

- **If the turn signals stop flashing before a lane change has been performed**

Operate the lever again.


- **Customization**

The number of times the turn signals flash during a lane change can be changed.
(Customizable feature →P. 679)

Parking brake

Operating instructions

To set the parking brake, fully depress the parking brake pedal with your left foot while depressing the brake pedal with your right foot.
(Depressing the pedal again releases the parking brake.)

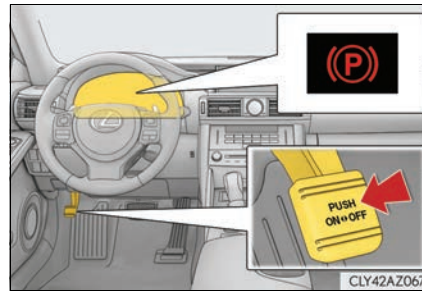

■ Parking the vehicle

→P. 204

■ Parking brake engaged warning buzzer

→P. 601, 611

■ Usage in winter time

→P. 363



NOTICE

■ Before driving

Fully release the parking brake.

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.

ASC (Active Sound Control)*


The ASC system is an electronic sound system that generates driving sound, conveying the kinetic situations of the vehicle's acceleration and deceleration to the driver through the speakers behind the instrument panel. The vehicle's response to the driver's acceleration behavior and shift operations are also conveyed in sound. When sport mode is selected, the sound conveyed to the driver will be louder.

Controlling volume

① Louder

② Lower

When the dial is turned to the lowest volume, driving sound will be turned off and the indicator will go off.

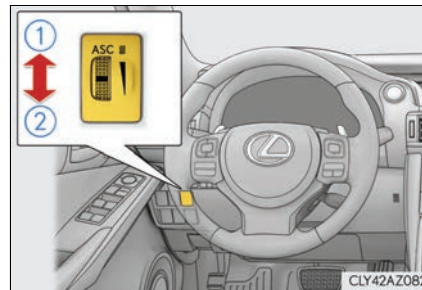

4

Driving

■ ASC is enabled when

The vehicle is being driven in normal mode or sport mode. (→P. 353)

■ Situations that may disable the ASC system

The ASC system may be disabled depending on the driving conditions, such as when the tires slip due to sudden acceleration.

*: If equipped

■ Certification for ASC (Active Sound Control)

► For vehicles sold in Taiwan

設備名稱：主動聲音控制 Equipment name : Active Sound Control		型號（型式）：EAAE1124C0 Type designation (Type) : EAAE1124C0				
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
外殼	○	○	○	○	○	○
散熱片	○	○	○	○	○	○
螺絲	○	○	○	○	○	○
電路板	○	○	○	○	○	○
連接器	—	○	○	○	○	○
電子元件	—	○	○	○	○	○
備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。 Note 1 : “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.						
備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2 : “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.						
備考3. “—”係指該項限用物質為排除項目。 Note 3 : The “—” indicates that the restricted substance corresponds to the exemption.						

Headlight switch


The headlights can be operated manually or automatically.

Operating instructions

Operating the  switch turns on the lights as follows:

- ①  The front position, tail, license plate and instrument panel lights turn on.
- ②  The headlights and all lights listed above turn on.
- ③ **AUTO** The headlights, daytime running lights (→P. 240) and all the lights listed above turn on and off automatically.
(When the engine switch is in IGNITION ON mode.)
- ④  * The daytime running lights turn on. (→P. 240)

*: If equipped

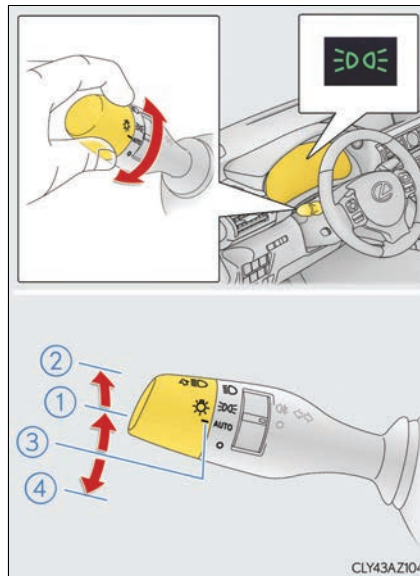

4

Driving


Turning on the high beam headlights

- ① With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.

- ② Pull the lever toward you and release it to flash the high beams once.

You can flash the high beams with the headlights on or off.

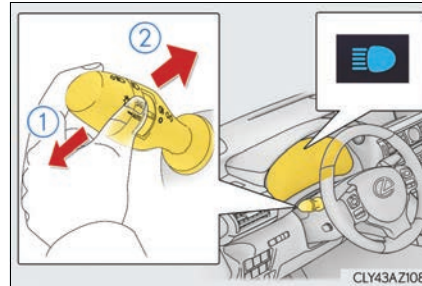


■ Daytime running light system

To make your vehicle more visible to other drivers during daytime driving, the daytime running lights turn on automatically whenever the engine is started with the headlight switch off or in the "AUTO" position and the parking brake is released. (Illuminate brighter than the front position lights.) Daytime running lights are not designed for use at night.

■ Headlight control sensor

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield. Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

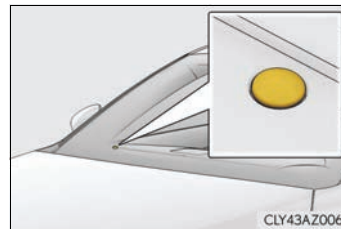

■ Automatic light off system

If you open the driver's door with the engine switch off, all lights are turned off.

To turn the lights on again, turn the engine switch to IGNITION ON mode, or turn the light switch off once and then back to  or .

■ Light reminder buzzer

A buzzer sounds when the engine switch is turned off or turned to ACCESSORY mode and the driver's door is opened while the lights are turned on.

■ Automatic headlight leveling system

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

■ Customization

Settings (e.g. light sensor sensitivity) can be changed.
(Customizable features: →P. 679)

**NOTICE****■ To prevent battery discharge**

Do not leave the lights on longer than necessary when the engine is not running.

Automatic High Beam*

The Automatic High Beam uses a camera sensor located behind the upper portion of the windshield to assess the brightness of the lights of vehicles ahead, streetlights, etc., and automatically turns the high beams on or off as necessary.

WARNING

■ Limitations of the Automatic High Beam


Do not overly rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning the high beams on or off manually if necessary.

■ To prevent incorrect operation of the Automatic High Beam system

Do not overload the vehicle.


Activating the Automatic High Beam

- 1 Push the lever away from you with the headlight switch in the  or **AUTO** position.

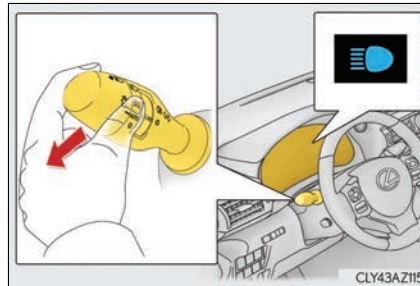

- 2 Press the Automatic High Beam switch.

The Automatic High Beam indicator will come on when the system is operating.

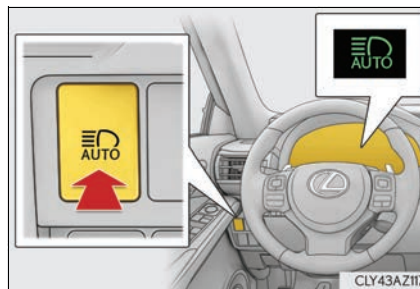


*: If equipped

Turning the high beams on/off manually**■ Switching to the low beams**

Pull the lever to its original position.

The Automatic High Beam indicator will turn off.


Push the lever away from you to activate the Automatic High Beam system again.

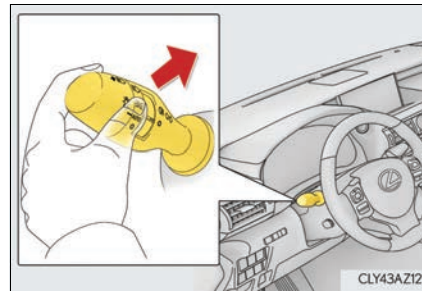**■ Switching to the high beams**

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

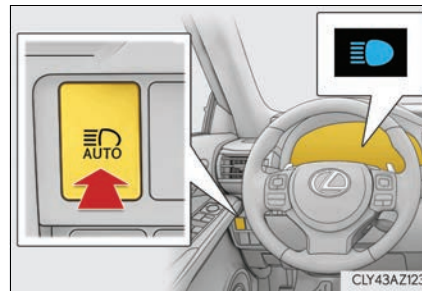

■ Conditions to turn the high beams on/off automatically

- When all of the following conditions are met, the high beams will be turned on automatically (after approximately 1 second):
 - The vehicle speed is approximately 30 - 40 km/h (19 - 25 mph)* or more.
 - The area ahead of the vehicle is dark.
 - There are no vehicles ahead with headlights or tail lights turned on.
 - There are few streetlights on the road ahead.
- If any of the following conditions is met, the high beams will turn off automatically:
 - The vehicle speed is below approximately 25 - 30 km/h (16 - 19 mph)*.
 - The area ahead of the vehicle is not dark.
 - Vehicles ahead have their headlights or tail lights turned on.
 - There are many streetlights on the road ahead.

*: The vehicle speed at which the high beams are automatically turned on/off may vary depending on the country for which the vehicle is approved.

■ Camera sensor detection information


- The high beams may not be automatically turned off in the following situations:
 - When a vehicle suddenly appears from around a curve
 - When the vehicle is cut in front of by another vehicle
 - When vehicles ahead cannot be detected due to repeated curves, road dividers or roadside trees
 - When vehicles ahead appear in a faraway lane on a wide road
 - When the lights of vehicles ahead are not on
- The high beams may be turned off if a vehicle ahead that is using fog lights without its headlights turned on is detected.
- House lights, street lights, traffic signals, and illuminated billboards or signs and other reflective objects may cause the high beams to change to the low beams, or the low beams to remain on.
- The following factors may affect the amount of time taken for the high beams to turn on or off:
 - The brightness of the headlights, fog lights, and tail lights of vehicles ahead
 - The movement and direction of vehicles ahead
 - When a vehicle ahead only has operational lights on one side
 - When a vehicle ahead is a two-wheeled vehicle
 - The condition of the road (gradient, curve, condition of the road surface, etc.)
 - The number of passengers and amount of luggage in the vehicle
- The high beams may turn on or off unexpectedly.

- Bicycles or similar vehicles may not be detected.
- In the following situations the system may not be able to correctly detect the surrounding brightness level. This may cause the low beams to remain on or the high beams to flash or dazzle pedestrians or vehicles ahead. In such a case, it is necessary to manually switch between the high and low beams.
 - When driving in inclement weather (heavy rain, snow, fog, sandstorms, etc.)
 - When the windshield is obscured by fog, mist, ice, dirt, etc.
 - When the windshield is cracked or damaged
 - When the camera sensor is deformed or dirty
 - When the temperature of the camera sensor is extremely high
 - When the surrounding brightness level is equal to that of headlights, tail lights or fog lights
 - When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly
 - When the vehicle is hit by water, snow, dust, etc. from a preceding vehicle
 - When driving through an area of intermittently changing brightness and darkness
 - When frequently and repeatedly driving ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel roads, etc.)
 - When frequently and repeatedly taking curves or driving on a winding road
 - When there is a highly reflective object ahead of the vehicle, such as a sign or mirror
 - When the back of a preceding vehicle is highly reflective, such as a container on a truck
 - When the vehicle's headlights are damaged or dirty, or are not aimed properly
 - When the vehicle is listing or tilting due to a flat tire, a trailer being towed, etc.
 - When the headlights are changed between the high beams and low beams repeatedly in an abnormal manner
 - When the driver believes that the high beams may be flashing or dazzling pedestrians or other drivers
 - When the vehicle is used in an area in which vehicles travel on the opposite side of the road of the country for which the vehicle was designed, for example using a vehicle designed for right-hand traffic in a left-hand traffic area, or vice versa

Fog light switch*

The fog light secure excellent visibility in difficult driving conditions, such as in rain and fog.

-  Turns the rear fog light on
Releasing the switch ring returns it to
○ .
Operating the switch ring again turns
the rear fog light off.

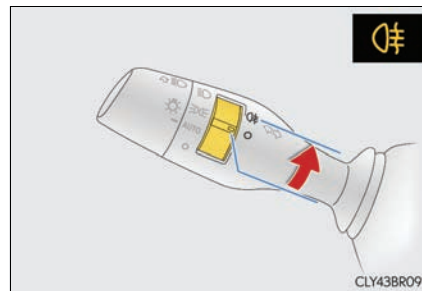

■ Fog light can be used when

The headlights or the front position lights are turned on.

*: If equipped

Windshield wipers and washer

Operating the wiper lever

Operating the  lever operates the wipers or washer as follows. The lever will return to its original position immediately after operation.

► Intermittent windshield wipers with interval adjuster

- ① ○ Move the lever up by 2 levels
- ② △ Move the lever up by 1 level
- ③ ▽ Move the lever down by 1 level
- ④ ≡ Move the lever down by 2 levels



4


Driving

Operation Status before operation	○	△	▽	≡
Off	Temporary operation	Temporary operation	Intermittent operation	High speed operation
Intermittent operation	Off	Off	Low speed operation	High speed operation
Low speed operation	Off	Intermittent operation	High speed operation	High speed operation
High speed operation	Off	Low speed operation	No change	No change

Wiper intervals can be adjusted when intermittent operation is selected.

- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency

The intermittent windshield wiper operates more frequently as vehicle speed becomes higher.

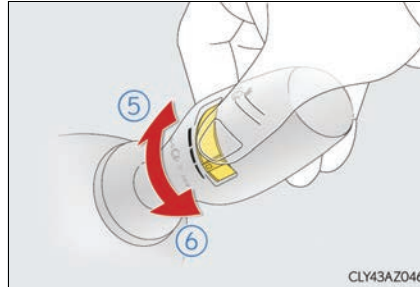


- ⑦  Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners: When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

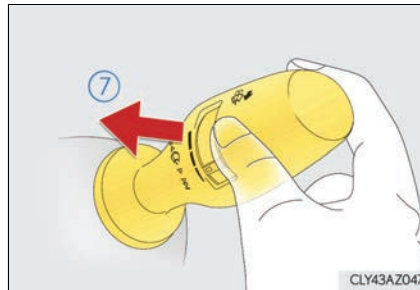


► Rain-sensing windshield wipers

- ① ○ Move the lever up by 2 levels
- ② △ Move the lever up by 1 level
- ③ ▽ Move the lever down by 1 level
- ④ ≡ Move the lever down by 2 levels

- ⑤  AUTO AUTO mode on/off switch

With AUTO mode selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The AUTO mode indicator will turn on when AUTO mode is selected.

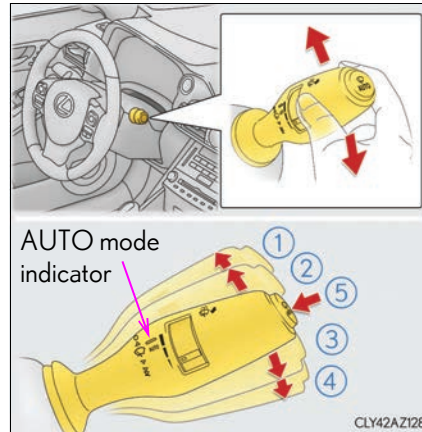

Operation		○	△	▽	≡
Status before operation	Off	Temporary operation	Temporary operation	Low speed operation	High speed operation
	Low speed operation	Off	Off	High speed operation	High speed operation
	High speed operation	Off	Low speed operation	No change	No change
	AUTO mode	Off	Temporary operation ^{*1}	Low speed operation ^{*2}	High speed operation ^{*2}
	Continuously		No change		

^{*1}: After temporary operation, the mode will return to AUTO mode.

^{*2}: AUTO mode will be canceled.

When AUTO mode is selected, the sensor sensitivity can be adjusted by turning the switch ring.

- ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity



- ⑧  Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners: When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.




Switching between the intermittent windshield wipers and rain-sensing windshield wipers (vehicles with rain-sensing windshield wipers)

The wipers can be used as intermittent windshield wipers, which operate regardless of vehicle speed or amount of raindrops. The intermittent windshield wiper operation can be switched when the vehicle is stopped and the wiper is off. The wiper operation cannot be switched during AUTO mode or while the intermittent windshield wipers are operating.

Press and hold  until the AUTO mode indicator stops flashing.


If  is pressed and held until the AUTO mode indicator stops flashing again, it will return to its previous state.

The wiper can be switched when the vehicle is stopped and the wipers are off.

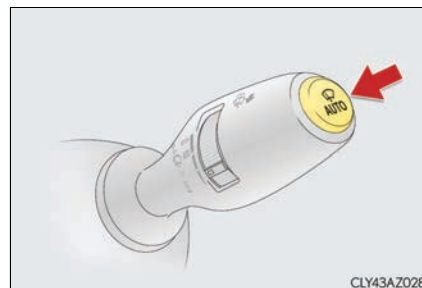

■ Operation of the intermittent windshield wipers with interval adjuster

- ① ○ Move the lever up by 2 levels
- ② △ Move the lever up by 1 level
- ③ ▽ Move the lever down by 1 level
- ④ ⚡ Move the lever down by 2 levels

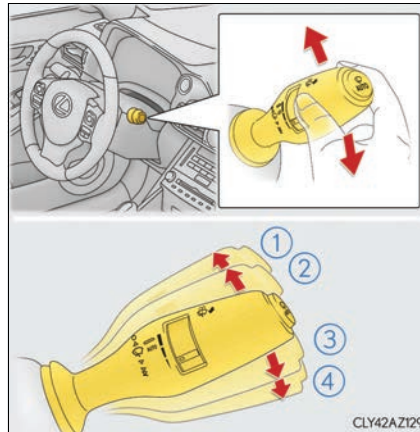


Operation Status before operation	○	△	▽	⚡
Off	Temporary operation	Temporary operation	Intermittent operation	High speed operation
Intermittent operation	Off	Off	Low speed operation	High speed operation
Low speed operation	Off	Intermittent operation	High speed operation	High speed operation
High speed operation	Off	Low speed operation	No change	No change

Wiper intervals can be adjusted when intermittent operation is selected.

- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency

The intermittent windshield wiper operates more frequently as vehicle speed becomes higher.

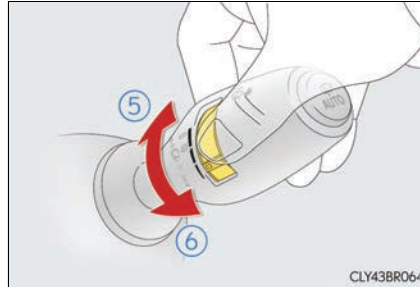


CLY43BR064

- ⑦  Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

The wipers will automatically operate a couple of times after the washer squirts.

When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

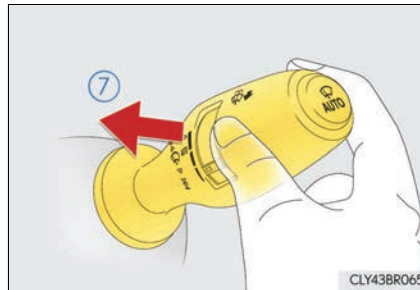

CLY43BR065

■ The windshield wiper and washer can be operated when

The engine switch is in IGNITION ON mode.

■ Dripping prevention wiper sweep

After performing a washing and wiping operation several times, the wipers operate one more time after a short delay to prevent dripping.

However, this final wiper operation will not be performed while driving.

■ Effects of vehicle speed on wiper operation (vehicles with rain-sensing windshield wipers)

Vehicle speed affects the following even when the wipers are not in AUTO mode.


- Intermittent wiper interval
- Wiper operation when the washer is being used (delay until drip prevention wiper sweep occurs)

With low speed windshield wiper operation selected, wiper operation will be switched from low speed to intermittent wiper operation only when the vehicle is stationary.

■ Raindrop sensor (vehicles with rain-sensing windshield wipers)

- The raindrop sensor judges the amount of raindrops.

An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

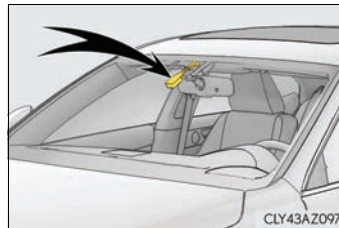

- If the wiper is turned to AUTO mode while the engine switch is in IGNITION ON mode, the wipers will operate once to show that AUTO mode is activated.
- If the temperature of the raindrop sensor is 85°C (185°F) or higher, or -30°C (-22°F) or lower, automatic operation may not occur. In this case, operate the wipers in any mode other than AUTO mode.

■ When the windshield wipers are in temporary operation (vehicles with rain-sensing windshield wipers)

AUTO mode cannot be activated even if  is pressed.

■ If no windshield washer fluid sprays

Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.

**WARNING****■ Caution regarding the use of windshield wipers in AUTO mode**

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in AUTO mode. Take care that your fingers or anything else do not become caught in the windshield wipers.

■ Caution regarding the use of washer fluid

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

**NOTICE****■ When the windshield is dry**

Do not use the wipers, as they may damage the windshield.

■ When there is no washer fluid spray from the nozzle

Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.

■ When a nozzle becomes blocked

In this case, contact your Lexus dealer.

Do not try to clear it with a pin or other object. The nozzle will be damaged.

Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:

Before refueling the vehicle

- Close all the doors and windows, and turn the engine switch off.
- Confirm the type of fuel.

■ Fuel types

→P. 665

■ Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

■ If the malfunction indicator lamp illuminates

The malfunction indicator lamp may illuminate erroneously if refueling is performed repeatedly when the fuel tank is nearly full.

**WARNING****■ When refueling the vehicle**

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel. Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle. Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged. This may cause static electricity to build up, resulting in a possible ignition hazard.

■ When refueling

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.

**NOTICE****■ Refueling**


Do not spill fuel during refueling.

Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.


Opening the fuel tank cap

- 1 With the doors unlocked, press the center of the rear edge of the fuel filler door.

Push until you hear a click and take your hand away to slightly open the fuel filler door. Then open the door fully by hand.

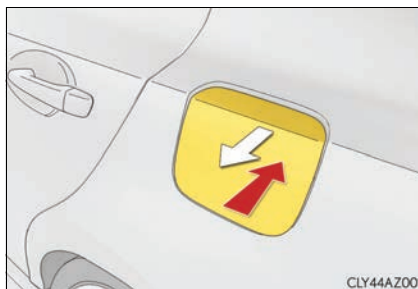


- 2 Turn the fuel tank cap slowly to remove it and put it into the holder on the fuel filler door.

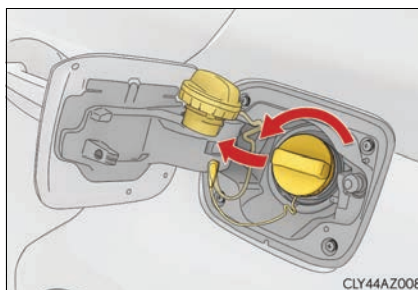


■ If the fuel filler door cannot be opened

Remove the cover inside the trunk and pull the lever to open the fuel filler door if the fuel filler door cannot be opened by pressing the rear edge of the fuel filler door.

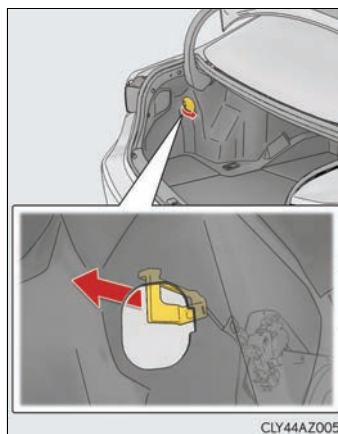


Closing the fuel tank cap

- 1 After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

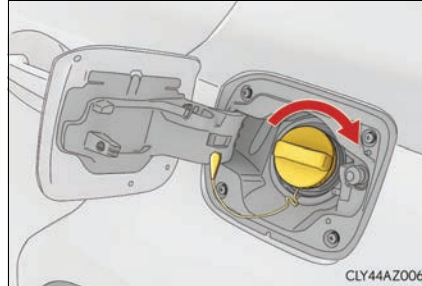

- 2 Close the fuel filler door, and press the center of the rear edge of the fuel filler door until you hear a click. When you lock the doors, the fuel filler door will also lock.

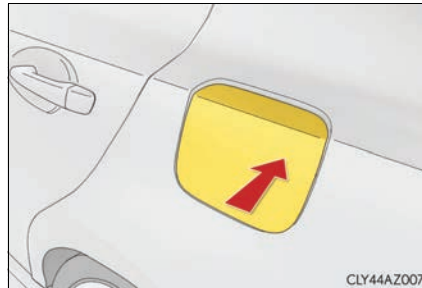

Fuel filler door lock condition

The fuel filler door may not be locked even when the vehicle's doors are locked in the following situations:

- When operating the door lock button inside the vehicle
- When the automatic door locking system is operated (→P. 158)
- When the fuel filler door is closed after the vehicle's doors are locked

⚠ WARNING

■ When replacing the fuel tank cap

Do not use anything but a genuine Lexus fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

Lexus Safety System +*

The Lexus Safety System + consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

◆ PCS (Pre-Collision System)

→P. 266

◆ LDA (Lane Departure Alert with steering control)

→P. 279

◆ Automatic High Beam

→P. 242

◆ Dynamic radar cruise control

→P. 289



WARNING

■ Lexus Safety System +

The Lexus Safety System + is designed to operate under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants and the vehicle in the case of a collision or assist the driver in normal driving conditions.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

4

Driving

*: If equipped

Vehicle data recording

The pre-collision system is equipped with a sophisticated computer that will record certain data, such as:

- Accelerator status
- Brake status
- Vehicle speed
- Operation status of the pre-collision system functions
- Information (such as the distance and relative speed between your vehicle and the vehicle ahead or other objects)

The pre-collision system does not record conversations, sounds or pictures.

● Data usage

Lexus may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.


Lexus will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

Sensors

Two types of sensors, located behind the front grille and windshield, detect information necessary to operate the drive assist systems.

- ① Radar sensor
- ② Camera sensor

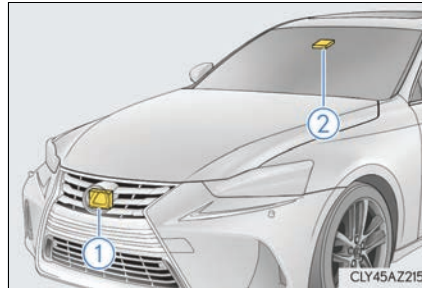

⚠ WARNING

■ To avoid malfunction of the radar sensor

Observe the following precautions.


Otherwise, the radar sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the radar sensor and radar sensor cover clean at all times.

- ① Radar sensor
- ② Radar sensor cover

If the front of the radar sensor or the front or back of the radar sensor cover is dirty or covered with water droplets, snow, etc., clean it.

Clean the radar sensor and radar sensor cover with a soft cloth so you do not mark or damage them.

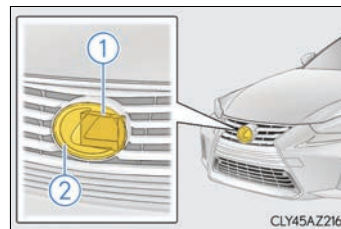

- Do not attach accessories, stickers (including transparent stickers) or other items to the radar sensor, radar sensor cover or surrounding area.
- Do not subject the radar sensor or surrounding area to a strong impact.
If the radar sensor, front grille, or front bumper has been subjected to a strong impact, have the vehicle inspected by your Lexus dealer.
- Do not disassemble the radar sensor.
- Do not modify or paint the radar sensor, radar sensor cover or surrounding area.
- If the radar sensor, front grille, or front bumper needs to be removed and installed, or replaced, contact your Lexus dealer.

⚠ WARNING

■ To avoid malfunction of the camera sensor


Observe the following precautions.

Otherwise, the camera sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the windshield clean at all times.
 - If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clear the windshield.
 - If a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the camera sensor.
 - If the inner side of the windshield where the camera sensor is installed is dirty, contact your Lexus dealer.
 - Do not attach objects, such as stickers, transparent stickers, and so forth, to the outer side of the windshield in front of the camera sensor (shaded area in the illustration).

A: From the top of the windshield to approximately 1 cm (0.4 in.) below the bottom of the camera sensor

B: Approximately 20 cm (7.9 in.) (Approximately 10 cm [4.0 in.] to the right and left from the center of the camera sensor)
 - If the part of the windshield in front of the camera sensor is fogged up or covered with condensation or ice, use the windshield defogger to remove the fog, condensation or ice. (→P. 486)
 - If water droplets cannot be properly removed from the area of the windshield in front of the camera sensor by the windshield wipers, replace the wiper insert or wiper blade.
- If the wiper inserts or wiper blades need to be replaced, contact your Lexus dealer.

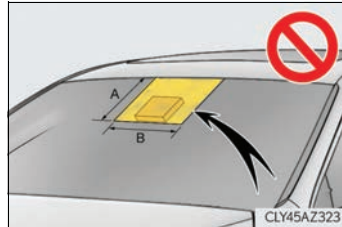

 WARNING

- Do not attach window tinting to the windshield.
- Replace the windshield if it is damaged or cracked.
If the windshield needs to be replaced, contact your Lexus dealer.
- Do not get the camera sensor wet.
- Do not allow bright lights to shine into the camera sensor.
- Do not dirty or damage the camera sensor.
When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens. Also, do not touch the lens.
If the lens is dirty or damaged, contact your Lexus dealer.
- Do not subject the camera sensor to a strong impact.
- Do not change the installation position or direction of the camera sensor or remove it.
- Do not disassemble the camera sensor.
- Do not modify any components of the vehicle around the camera sensor (inside rear view mirror, etc.) or ceiling.
- Do not attach any accessories that may obstruct the camera sensor to the hood, front grille or front bumper. Contact your Lexus dealer for details.
- If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the camera sensor.
- Do not modify the headlights or other lights.

■ Certification

- ▶ For vehicles sold in Korea



상호명/제조사 : DENSO CORPORATION
 기자재의 명칭 (모델명) : 차량 충돌방지용 레이더 무선기기(DNMWR008)
 제조연월/제조국 : See Product. / JAPAN
 식별부호 : MSIP-CRM-DKR-DNMWR008

- ▶ For vehicles sold in Thailand

Brand Name: DENSO
 Model: DNMWR008

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.
 เพื่อหลีกเลี่ยงอันตรายที่อาจเกิดจากคลื่นแม่เหล็กไฟฟ้า กรณารักษาระยะห่างจากเซ็นเซอร์เรดาร์ให้มากกว่า 20 ซม. ขณะเซ็นเซอร์ทำงาน
 เครื่องวิทยุคมนาคมนี้มีระดับการแผ่คลื่นแม่เหล็กไฟฟ้าสอดคล้องตามมาตรฐานความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้เครื่องวิทยุคมนาคมที่คณะกรรมการกิจการกระจายเสียง กิจการโทรทัศน์ และกิจการโทรคมนาคมแห่งชาติประกาศกำหนด

- For vehicles sold in Taiwan

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

- For vehicles sold in Jordan

For Vehicles sold in Jordan

TRC approval number: TRC/LPD/2014/149

PCS (Pre-Collision System)*

The pre-collision system uses a radar sensor and camera sensor to detect vehicles and pedestrians*¹ in front of your vehicle. When the system determines that the possibility of a frontal collision with a vehicle or pedestrian is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with a vehicle or pedestrian is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-collision system can be disabled/enabled and the warning timing can be changed. (→P. 270)

*¹: Depending on the region in which the vehicle was sold, the pedestrian detection function may not be available. See the following table for details.


Countries/areas	Function availability	Regions
Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait	The pedestrian detection function is available	Region A
Korea, South Africa, Jordan, Lebanon, Thailand, Taiwan, Brunei Darussalam, Republic of Singapore, Malaysia	The pedestrian detection function is not available	Region B

The countries and areas for each region listed in the table are current as of September 2019. However, depending on when the vehicle was sold, the countries and areas of each region may be different. Contact your Lexus dealer for details.

*: If equipped

◆ Pre-collision warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the multi-information display to urge the driver to take evasive action.

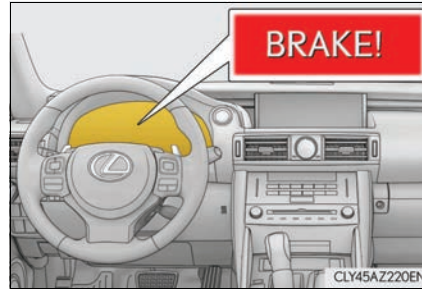**◆ Pre-collision brake assist**

When the system determines that the possibility of a frontal collision is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

◆ Pre-collision braking

When the system determines that the possibility of a frontal collision is high, the system warns the driver. If the system determines that the possibility of a frontal collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the collision speed.

◆ Suspension control (if equipped)

When the system determines that the possibility of a frontal collision is high, the AVS (→P. 358) will control the damping force of the shock absorbers to help maintain an appropriate vehicle posture.

**WARNING****■ Limitations of the pre-collision system**

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.
Do not use the pre-collision system instead of normal braking operations under any circumstances. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not overly rely on this system. Failure to do so may lead to an accident, resulting in death or serious injury.
- Although this system is designed to help avoid a collision or help reduce the impact of the collision, its effectiveness may change according to various conditions, therefore the system may not always be able to achieve the same level of performance.
Read the following conditions carefully. Do not overly rely on this system and always drive carefully.
 - Conditions under which the system may operate even if there is no possibility of a collision: →P. 274
 - Conditions under which the system may not operate properly: →P. 276
- Do not attempt to test the operation of the pre-collision system yourself.
Depending on the objects used for testing (dummies, cardboard objects imitating detectable objects, etc.), the system may not operate properly, possibly leading to an accident.

■ Pre-collision braking

- When the pre-collision braking function is operating, a large amount of braking force will be applied.
- If the vehicle is stopped by the operation of the pre-collision braking function, the pre-collision braking function operation will be canceled after approximately 2 seconds. Depress the brake pedal as necessary.
- The pre-collision braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-collision braking function from operating.
- In some situations, while the pre-collision braking function is operating, operation of the function may be canceled if the accelerator pedal is depressed strongly or the steering wheel is turned and the system determines that the driver is taking evasive action.
- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-collision braking function.

**WARNING****■ When to disable the pre-collision system**

In the following situations, disable the system, as it may not operate properly, possibly leading to an accident resulting in death or serious injury:

- When the vehicle is being towed
- When your vehicle is towing another vehicle
- When transporting the vehicle via truck, boat, train or similar means of transportation
- When the vehicle is raised on a lift with the engine running and the tires are allowed to rotate freely
- When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer
- When a strong impact is applied to the front bumper or front grille, due to an accident or other reasons
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When tires of a size other than specified are installed
- When tire chains are installed
- When a compact spare tire or an emergency tire puncture repair kit is used
- If equipment (snow plow, etc.) that may obstruct the radar sensor or camera sensor is temporarily installed to the vehicle

Changing settings of the pre-collision system

■ Enabling/disabling the pre-collision system

The pre-collision system can be enabled/disabled on  (→P. 134) of the multi-information display.

The system is automatically enabled each time the engine switch is turned to IGNITION ON mode.

If the system is disabled, the PCS warning light will turn on and a message will be displayed on the multi-information display.




■ Changing the pre-collision warning timing

The pre-collision warning timing can be changed on  (→P. 134) of the multi-information display.

The operation timing setting is retained when the engine switch is turned off.

- ① Far
The warning will begin to operate earlier than with the default timing.
- ② Middle
This is the default setting.
- ③ Near
The warning will begin to operate later than with the default timing.

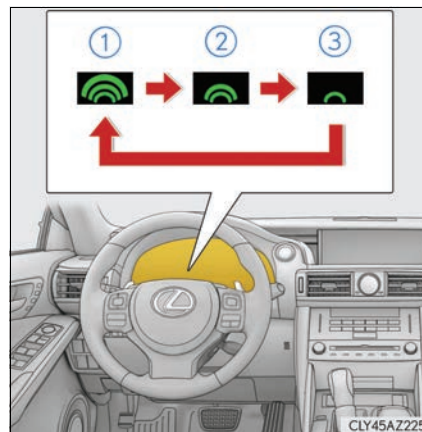

■ Operational conditions

Availability of the pedestrian detection function depends on the region in which the vehicle was sold. (For specific countries/areas: →P. 266)

Read the following for details:

► Region A

(The pedestrian detection function is available)

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a vehicle or pedestrian is high.

Each function is operational at the following speeds:

● Pre-collision warning:

- Vehicle speed is between approximately 10 and 180 km/h (7 and 110 mph). (For detecting a pedestrian, vehicle speed is between approximately 10 and 80 km/h [7 and 50 mph].)
- The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 10 km/h (7 mph) or more.

● Pre-collision brake assist:

- Vehicle speed is between approximately 30 and 180 km/h (20 and 110 mph). (For detecting a pedestrian, vehicle speed is between approximately 30 and 80 km/h [20 and 50 mph].)
- The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 30 km/h (20 mph) or more.

● Pre-collision braking:

- Vehicle speed is between approximately 10 and 180 km/h (7 and 110 mph). (For detecting a pedestrian, vehicle speed is between approximately 10 and 80 km/h [7 and 50 mph].)
- The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 10 km/h (7 mph) or more.

The system may not operate in the following situations:

- If a battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time
- If the shift lever is in R
- If VSC is disabled (only the pre-collision warning function will be operational)

- ▶ Region B
(The pedestrian detection function is not available)

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a vehicle is high.

Each function is operational at the following speeds:


- Pre-collision warning:
 - Vehicle speed is between approximately 15 and 180 km/h (10 and 110 mph).
 - The relative speed between your vehicle and the vehicle ahead is approximately 10 km/h (7 mph) or more.
- Pre-collision brake assist:
 - Vehicle speed is between approximately 30 and 180 km/h (20 and 110 mph).
 - The relative speed between your vehicle and the vehicle ahead is approximately 30 km/h (20 mph) or more.
- Pre-collision braking:
 - Vehicle speed is between approximately 15 and 180 km/h (10 and 110 mph).
 - The relative speed between your vehicle and the vehicle ahead is approximately 10 km/h (7 mph) or more.

The system may not operate in the following situations:

- If a battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time
- If the shift lever is in R
- If VSC is disabled (only the pre-collision warning function will be operational)

■ Pedestrian detection function ^{*2}

The pre-collision system detects pedestrians based on the size, profile, and motion of a detected object. However, a pedestrian may not be detected depending on the surrounding brightness and the motion, posture, and angle of the detected object, preventing the system from operating properly. (→P. 277)

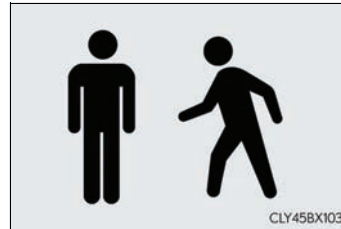

^{*2}: For countries/areas specified as Region B (→P. 266), the pedestrian detection function may not be available.

■ Cancellation of the pre-collision braking


If either of the following occur while the pre-collision braking function is operating, it will be canceled:

- The accelerator pedal is depressed strongly.
- The steering wheel is turned sharply or abruptly.


■ Conditions under which the system may operate even if there is no possibility of a collision

- In some situations such as the following, the system may determine that there is a possibility of a frontal collision and operate.


- When passing a vehicle or pedestrian*2
- When changing lanes while overtaking a preceding vehicle
- When overtaking a preceding vehicle that is changing lanes
- When overtaking a preceding vehicle that is making a left/right turn

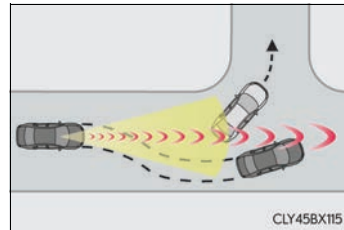


- When passing a vehicle in an oncoming lane that is stopped to make a right/left turn

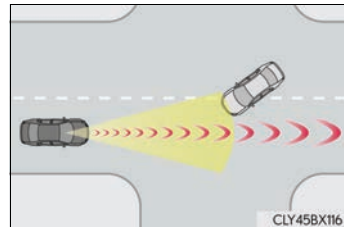

- When driving on a road where relative location to vehicle ahead in an adjacent lane may change, such as on a winding road

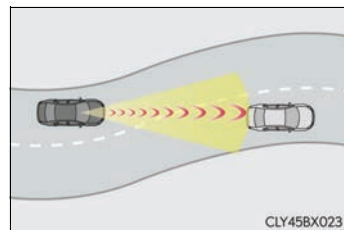


- When rapidly closing on a vehicle ahead
- If the front of the vehicle is raised or lowered, such as when the road surface is uneven or undulating
- When approaching objects on the roadside, such as guardrails, utility poles, trees, or walls
- When there is a vehicle, pedestrian*2, or object by the roadside at the entrance of a curve

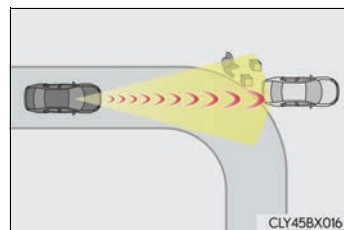


- When driving on a narrow path surrounded by a structure, such as in a tunnel or on an iron bridge


- When there is a metal object (manhole cover, steel plate, etc.), steps, or a protrusion on the road surface or roadside
- When a crossing pedestrian approaches very close to the vehicle^{*2}

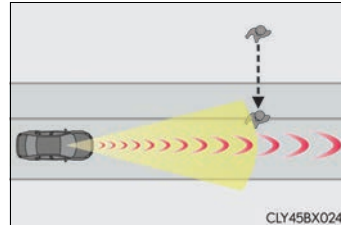


- When passing through a place with a low structure above the road (low ceiling, traffic sign, etc.)

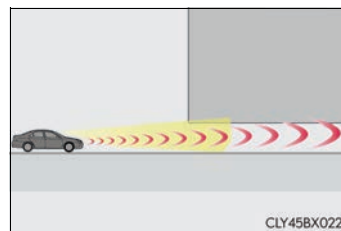

- When passing under an object (billboard, etc.) at the top of an uphill road

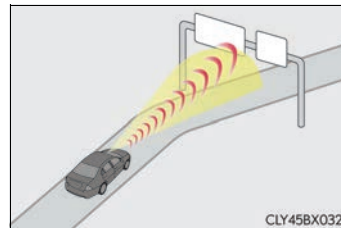

- When rapidly closing on an electric toll gate barrier, parking area barrier, or other barrier that opens and closes
- When using an automatic car wash
- When driving through or under objects that may contact the vehicle, such as thick grass, tree branches, or a banner

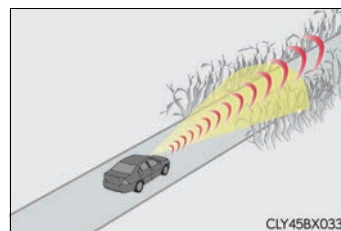


- When the vehicle is hit by water, snow, dust, etc. from a vehicle ahead
- When driving through steam or smoke
- When there are patterns or paint on the road or a wall that may be mistaken for a vehicle or pedestrian^{*2}
- When driving near an object that reflects radio waves, such as a large truck or guardrail
- When driving near a TV tower, broadcasting station, electric power plant, or other location where strong radio waves or electrical noise may be present

^{*2}: For countries/areas specified as Region B (→P. 266), the pedestrian detection function may not be available.


■ Situations in which the system may not operate properly

- In some situations such as the following, a vehicle may not be detected by the radar sensor and camera sensor, preventing the system from operating properly:


- If an oncoming vehicle is approaching your vehicle
- If a vehicle ahead is a motorcycle or bicycle
- When approaching the side or front of a vehicle
- If a preceding vehicle has a small rear end, such as an unloaded truck
- If a preceding vehicle has a low rear end, such as a low bed trailer

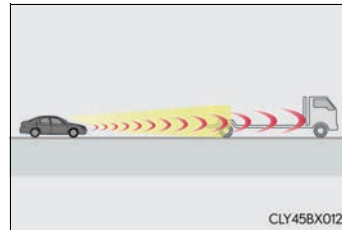

- If a vehicle ahead is carrying a load which protrudes past its rear bumper
- If a vehicle ahead has extremely high ground clearance

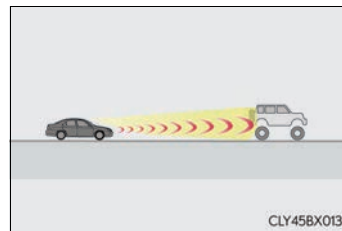


- If a vehicle ahead is irregularly shaped, such as a tractor or side car
- If the sun or other light is shining directly on a vehicle ahead
- If a vehicle cuts in front of your vehicle or emerges from beside a vehicle
- If a vehicle ahead makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)
- When suddenly cutting behind a preceding vehicle
- When a vehicle ahead is not directly in front of your vehicle

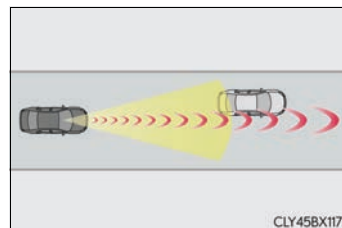

- When driving in inclement weather such as heavy rain, fog, snow or a sandstorm
- When the vehicle is hit by water, snow, dust, etc. from a vehicle ahead
- When driving through steam or smoke
- When driving in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a tunnel
- When a very bright light, such as the sun or the headlights of oncoming traffic, shines directly into the camera sensor
- When the surrounding area is dim, such as at dawn or dusk, or while at night or in a tunnel

- After the engine has started the vehicle has not been driven for a certain amount of time
- While making a left/right turn and for a few seconds after making a left/right turn
- While driving on a curve and for a few seconds after driving on a curve
- If your vehicle is skidding
- If the front of the vehicle is raised or lowered

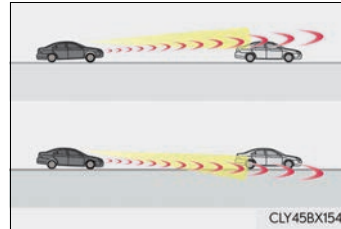

- If the wheels are misaligned
 - If a wiper blade is blocking the camera sensor
 - The vehicle is wobbling.
 - The vehicle is being driven at extremely high speeds.
 - When driving on a hill
 - If the radar sensor or camera sensor is misaligned
- In some situations such as the following, sufficient braking force may not be obtained, preventing the system from performing properly:
 - If the braking functions cannot operate to their full extent, such as when the brake parts are extremely cold, extremely hot, or wet
 - If the vehicle is not properly maintained (brakes or tires are excessively worn, improper tire inflation pressure, etc.)
 - When the vehicle is being driven on a gravel road or other slippery surface
 - Some pedestrians such as the following may not be detected by the radar sensor and camera sensor, preventing the system from operating properly^{*2}:
 - Pedestrians shorter than approximately 1 m (3.2 ft.) or taller than approximately 2 m (6.5 ft.)
 - Pedestrians wearing oversized clothing (a rain coat, long skirt, etc.), making their silhouette obscure
 - Pedestrians who are carrying large baggage, holding an umbrella, etc., hiding part of their body
 - Pedestrians who are bending forward or squatting
 - Pedestrians who are pushing a stroller, wheelchair, bicycle or other vehicle
 - Groups of pedestrians which are close together
 - Pedestrians who are wearing white and look extremely bright
 - Pedestrians in the dark, such as at night or while in a tunnel
 - Pedestrians whose clothing appears to be nearly the same color or brightness as their surroundings
 - Pedestrians near walls, fences, guardrails, or large objects
 - Pedestrians who are on a metal object (manhole cover, steel plate, etc.) on the road
 - Pedestrians who are walking fast
 - Pedestrians who are changing speed abruptly
 - Pedestrians running out from behind a vehicle or a large object
 - Pedestrians who are extremely close to the side of the vehicle (outside rear view mirror, etc.)
- ^{*2}: For countries/areas specified as Region B (→P. 266), the pedestrian detection function may not be available.

■ **If the PCS warning light flashes or illuminates and a warning message is displayed on the multi-information display**

The pre-collision system may be temporarily unavailable or there may be a malfunction in the system.

- In the following situations, the warning light will turn off, the message will disappear and the system will become operational when normal operating conditions return:
 - When the radar sensor or camera sensor or the area around either sensor is hot, such as in the sun
 - When the radar sensor or camera sensor or the area around either sensor is cold, such as in an extremely cold environment
 - When a front sensor is dirty or covered with snow, etc.
 - When the part of the windshield in front of the camera sensor is fogged up or covered with condensation or ice (Defogging the windshield: →P. 486)
 - If the camera sensor is obstructed, such as when the hood is open or a sticker is attached to the windshield near the camera sensor
- If the PCS warning light continues to flash or remains illuminated or the warning message does not disappear even though the vehicle has returned to normal, the system may be malfunctioning. Have the vehicle inspected by your Lexus dealer immediately.

■ **If VSC is disabled**


- If VSC is disabled (→P. 360), the pre-collision brake assist and pre-collision braking functions are also disabled.
- The PCS warning light will turn on and "VSC Turned Off Pre-Collision Brake System Unavailable" will be displayed on the multi-information display.

LDA (Lane Departure Alert with steering control)*

Summary of functions

When driving on highways and freeways with white (yellow) lines, this function alerts the driver when the vehicle might depart from its lane and provides assistance by operating the steering wheel to keep the vehicle in its lane.

The LDA system recognizes visible white (yellow) lines with the camera sensor on the upper portion of the front windshield.

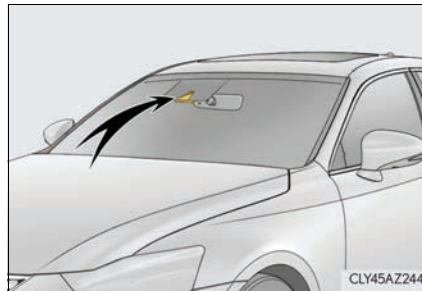


Functions included in LDA system

◆ Lane departure alert function

When the system determines that the vehicle might depart from its lane, a warning is displayed on the multi-information display, and either the warning buzzer sounds or the steering wheel vibrates to alert the driver.

When the warning buzzer sounds or the steering wheel vibrates, check the surrounding road situation and carefully operate the steering wheel to move the vehicle back to the center of the lane.

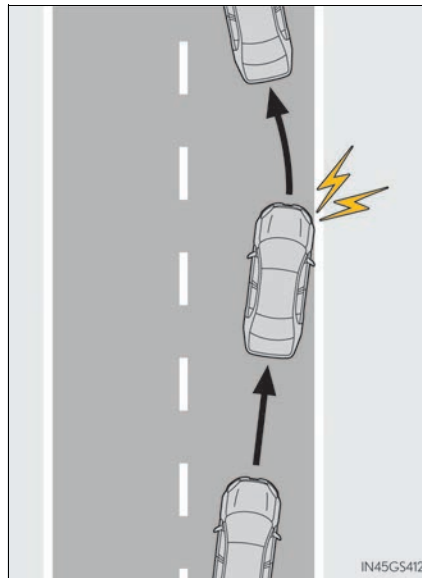

4

Driving


*: If equipped

◆ Steering control function

When the system determines that the vehicle might depart from its lane, the system provides assistance as necessary by operating the steering wheel in small amounts for a short period of time to keep the vehicle in its lane.

Except for GCC countries*, Jordan, Lebanon and Thailand: If the system detects that the steering wheel has not been operated for a fixed amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the function is temporarily canceled.


For GCC countries*, Jordan, Lebanon and Thailand: If the system detects that the steering wheel has not been operated for a fixed amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the warning buzzer sounds.

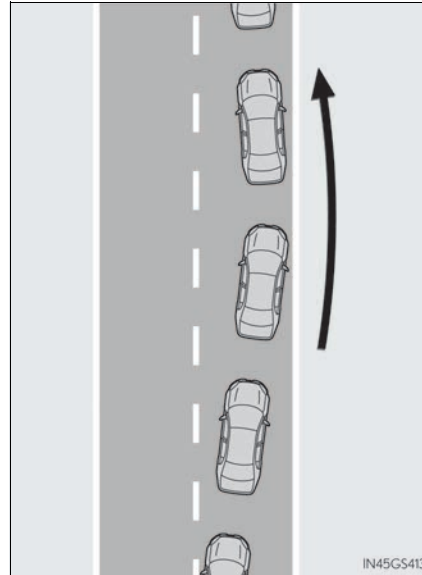

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar and Kuwait

◆ Vehicle sway warning function

When the vehicle is swaying or appears as if it may depart from its lane multiple times, the warning buzzer sounds and a message is displayed on the multi-information display to alert the driver.

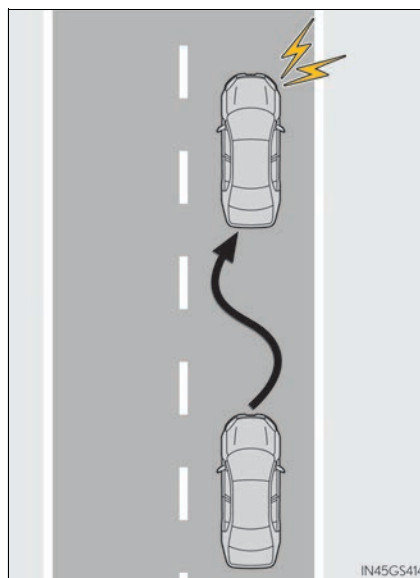

**WARNING**

■ **Before using LDA system**

Do not rely solely upon the LDA system. The LDA system does not automatically drive the vehicle or reduce the amount of attention that must be paid to the area in front of the vehicle. The driver must always assume full responsibility for driving safely by paying careful attention to the surrounding conditions and operating the steering wheel to correct the path of the vehicle. Also, the driver must take adequate breaks when fatigued, such as from driving for a long period of time. Failure to perform appropriate driving operations and pay careful attention may lead to an accident, resulting in death or serious injury.

■ **To avoid operating LDA system by mistake**

When not using the LDA system, use the LDA switch to turn the system off.

■ **Situations unsuitable for LDA system**

Do not use the LDA system in the following situations. The system may not operate properly and lead to an accident, resulting in death or serious injury.

- A spare tire, tire chains, etc. are equipped.
- When the tires have been excessively worn, or when the tire inflation pressure is low.
- Tires which differ by structure, manufacturer, brand or tread pattern are used.
- Objects or patterns that could be mistaken for white (yellow) lines are present on the side of the road (guardrails, curbs, reflective poles, etc.).
- Vehicle is driven on a snow-covered road.
- White (yellow) lines are difficult to see due to rain, snow, fog, dust, etc.
- Asphalt repair marks, white (yellow) line marks, etc. are present due to road repair.
- Vehicle is driven in a temporary lane or restricted lane due to construction work.
- Vehicle is driven on a road surface which is slippery due to rainy weather, fallen snow, freezing, etc.
- Vehicle is driven in traffic lanes other than on highways and freeways.
- Vehicle is driven in a construction zone.
- Vehicle is towing a trailer or another vehicle.

■ **Preventing LDA system malfunctions and operations performed by mistake**

- Do not modify the headlights or place stickers, etc. on the surface of the lights.
- Do not modify the suspension etc. If the suspension etc. needs to be replaced, contact your Lexus dealer.
- Do not install or place anything on the hood or grille. Also, do not install a grille guard (bull bars, kangaroo bar, etc.).
- If your windshield needs repairs, contact your Lexus dealer.


Turning LDA system on

Press the LDA switch to turn the LDA system on.

The LDA indicator illuminates and a message is displayed on the multi-information display.

Press the LDA switch again to turn the LDA system off.

When the LDA system is turned on or off, operation of the LDA system continues in the same condition the next time the engine is started.

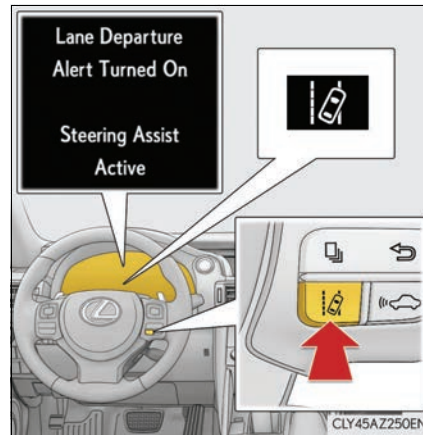

Indications on multi-information display

① LDA indicator

The illumination condition of the indicator informs the driver of the system operation status.

Illuminated in white:
LDA system is operating.

Illuminated in green:
Steering wheel assistance of the steering control function is operating.

Flashing in orange:
Lane departure alert function is operating.

② Operation display of steering wheel operation support


Indicates that steering wheel assistance of the steering control function is operating.

③ Lane departure alert function display

Displayed when the multi-information display is switched to the driving assist system information screen.

► Inside of displayed white lines is white

► Inside of displayed white lines is black

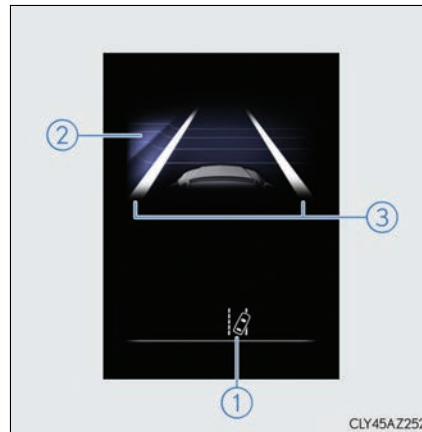


CLY45AZ252



CLY45AZ253

Indicates that the system is recognizing white (yellow) lines. When the vehicle departs from its lane, the white line displayed on the side the vehicle departs from flashes orange.

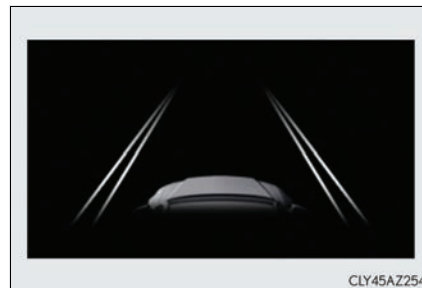

CLY45AZ254

Indicates that the system is not able to recognize white (yellow) lines or is temporarily canceled.

■ Operation conditions of each function

● Lane departure alert function

This function operates when all of the following conditions are met.

- LDA is turned on.
- Vehicle speed is approximately 50 km/h (32 mph) or more.
- System recognizes white (yellow) lines.
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- Turn signal lever is not operated.
- Vehicle is driven on a straight road or around a gentle curve with a radius of more than approximately 150 m (492 ft.).
- No system malfunctions are detected. (→P. 601)

● Steering control function

This function operates when all of the following conditions are met in addition to the operation conditions for the lane departure alert function.

- Setting for Steering Assist in  of the multi-information display is set to On. (→P. 134)
- Vehicle is not accelerated or decelerated by a certain amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- ABS, VSC, TRC and PCS are not operating.
- TRC or VSC is not turned off.
- Except for GCC countries*, Jordan, Lebanon and Thailand: Hands off steering wheel warning is not displayed. (→P. 286)

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar and Kuwait

● Vehicle sway warning function

This function operates when all of the following conditions are met.

- Setting for Sway Warning in  of the multi-information display is set to On. (→P. 134)
- Vehicle speed is approximately 50 km/h (32 mph) or more.
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- No system malfunctions are detected. (→P. 601)

■ Temporary cancellation of functions

When the operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. (→P. 285)

For Korea: If the operation conditions are no longer met while the steering control function is operating, the buzzer may sound and indicate that the function has temporarily stopped operating.

■ Steering control function


Depending on the vehicle speed, lane departure situation, road conditions, etc., the driver may not feel the function is operating or the function may not operate at all.

■ Lane departure alert function

The warning buzzer may be difficult to hear due to external noise, audio playback, etc. Also, it may be difficult to feel steering wheel vibrations due to the road conditions etc.

■ Hands off steering wheel warning


Except for GCC countries*, Jordan, Lebanon, Thailand and Korea: When the system determines that the driver has removed their hands from the steering wheel while the steering control function is operating, a warning message urging the driver to hold the steering wheel and the symbol shown in the illustration are displayed on the multi-information display.

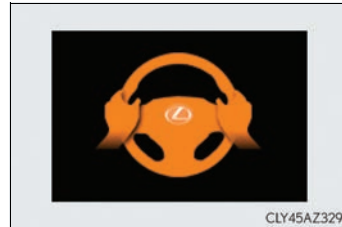

If the driver continues to keep their hands off of the steering wheel, a warning message and the symbol shown in the illustration are displayed on the multi-information display, and the function is temporarily canceled. This warning also operates in the same way when the driver continuously operates the steering wheel only a small amount. Always keep your hands on the steering wheel when using this system, regardless of warnings.

Depending on the vehicle and road conditions, the warning may not operate.


For GCC countries*, Jordan, Lebanon and Thailand: When the system determines that the driver has removed their hands from the steering wheel while the steering control function is operating, a warning message urging the driver to hold the steering wheel and the symbol shown in the illustration are displayed on the multi-information display.

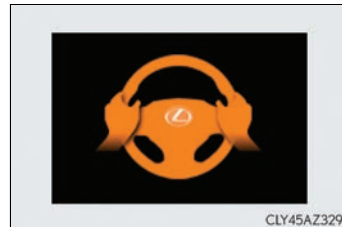

If the driver continues to keep their hands off of the steering wheel, a buzzer sounds and a warning message and the symbol shown in the illustration are displayed on the multi-information display. This warning also operates in the same way when the driver continuously operates the steering wheel only a small amount. Always keep your hands on the steering wheel when using this system, regardless of warnings.

Depending on the vehicle and road conditions, the warning may not operate.

For Korea: When the system determines that the driver has removed their hands from the steering wheel while the steering control function is operating, a warning message urging the driver to hold the steering wheel and the symbol shown in the illustration are displayed on the multi-information display.

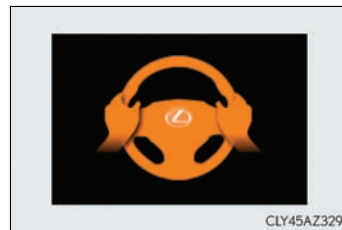


If the driver continues to keep their hands off of the steering wheel, a buzzer sounds, a warning message and the symbol shown in the illustration are displayed on the multi-information display, and the function is temporarily canceled. This warning also operates in the same way when the driver continuously operates the steering wheel only a small amount. Always keep your hands on the steering wheel when using this system, regardless of warnings.

Depending on the vehicle and road conditions, the warning may not operate.

■ Vehicle sway warning function

When the system determines that the vehicle is swaying while the vehicle sway warning function is operating, a buzzer sounds and a warning message urging the driver to rest and the symbol shown in the illustration are simultaneously displayed on the multi-information display.

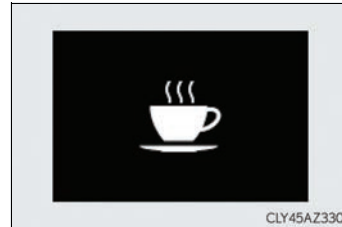

Depending on the vehicle and road conditions, the warning may not operate.

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar and Kuwait

■ White (yellow) lines are only on one side of road

The LDA system will not operate for the side on which white (yellow) lines could not be recognized.

■ Conditions in which functions may not operate properly

In the following situations, the camera sensor may not detect white (yellow) lines and various functions may not operate normally.

- There are shadows on the road that run parallel with, or cover, the white (yellow) lines.
- The vehicle is driven in an area without white (yellow) lines, such as in front of a tollgate or checkpoint, or at an intersection, etc.
- The white (yellow) lines are cracked, "Raised pavement marker" or stones are present.
- The white (yellow) lines cannot be seen or are difficult to see due to sand, etc.
- The vehicle is driven on a road surface that is wet due to rain, puddles, etc.
- The traffic lines are yellow (which may be more difficult to recognize than lines that are white).
- The white (yellow) lines cross over a curb, etc.
- The vehicle is driven on a bright surface, such as concrete.
- The vehicle is driven on a surface that is bright due to reflected light, etc.
- The vehicle is driven in an area where the brightness changes suddenly, such as at the entrances and exits of tunnels, etc.
- Light from the headlights of an oncoming vehicle, the sun, etc. enters the camera.
- The vehicle is driven where the road diverges, merges, etc.
- The vehicle is driven on a slope.
- The vehicle is driven on a road which tilts left or right, or a winding road.
- The vehicle is driven on an unpaved or rough road.
- The vehicle is driven around a sharp curve.
- The traffic lane is excessively narrow or wide.
- The vehicle is extremely tilted due to carrying heavy luggage or having improper tire pressure.
- The distance to the preceding vehicle is extremely short.
- The vehicle is moving up and down a large amount due to road conditions during driving (poor roads or road seams).

- The headlight lenses are dirty and emit a faint amount of light at night, or the beam axis has deviated.
- The vehicle is struck by a crosswind.
- The vehicle has just changed lanes or crossed an intersection.
- Snow tires, etc. are equipped.

■ **Warning message**

Warning messages are used to indicate a system malfunction or to inform the driver of the need for caution while driving. (→P. 607)

■ **Customization**

→P. 134

Dynamic radar cruise control*


Summary of functions

In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control on freeways and highways.

- Vehicle-to-vehicle distance control mode (→P. 292)
- Constant speed control mode (→P. 297)

- ① Vehicle-to-vehicle distance switch
- ② Display
- ③ Set speed
- ④ Indicators
- ⑤ Cruise control switch

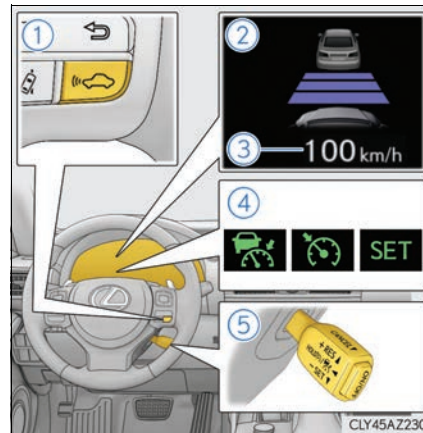

4

Driving

*: If equipped

**WARNING****■ Before using dynamic radar cruise control**

Driving safely is the sole responsibility of the driver. Do not rely solely on the system, and drive safely by always paying careful attention to your surroundings.

The dynamic radar cruise control provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided.

Set the speed appropriately depending on the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for checking the set speed.

Even when the system is functioning normally, the condition of the preceding vehicle as detected by the system may differ from the condition observed by the driver. Therefore, the driver must always remain alert, assess the danger of each situation and drive safely. Relying on this system or assuming the system ensures safety while driving can lead to an accident, resulting in death or serious injury.

■ Cautions regarding the driving assist systems

Observe the following precautions, as there are limitations to the assistance provided by the system.

Failure to do so may cause an accident resulting in death or serious injury.

● Assisting the driver to measure following distance

The dynamic radar cruise control is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for driver to pay close attention to the vehicle's surroundings.

● Assisting the driver to judge proper following distance

The dynamic radar cruise control determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

● Assisting the driver to operate the vehicle

The dynamic radar cruise control has limited capability to prevent or avoid a collision with a vehicle traveling ahead. Therefore, if there is ever any danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

■ To avoid inadvertent dynamic radar cruise control activation

Switch the dynamic radar cruise control off using the "ON/OFF" button when not in use.

**WARNING****■ Situations unsuitable for dynamic radar cruise control**


Do not use dynamic radar cruise control in any of the following situations. Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- Roads where there are pedestrians, cyclists, etc.
- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhills, or where there are sudden changes between sharp up and down gradients
Vehicle speed may exceed the set speed when driving down a steep hill.
- At entrances to freeways and highways
- When weather conditions are bad enough that they may prevent the sensors from detecting correctly (fog, snow, sandstorm, heavy rain, etc.)
- When there is rain, snow, etc. on the front surface of the radar sensor or camera sensor
- In traffic conditions that require frequent repeated acceleration and deceleration
- When your vehicle is towing a trailer or during emergency towing
- When an approach warning buzzer is heard often

Driving in vehicle-to-vehicle distance control mode

This mode employs a radar sensor to detect the presence of vehicles up to approximately 100 m (328 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead.

Note that vehicle-to-vehicle distance will close in when traveling on downhill slopes.

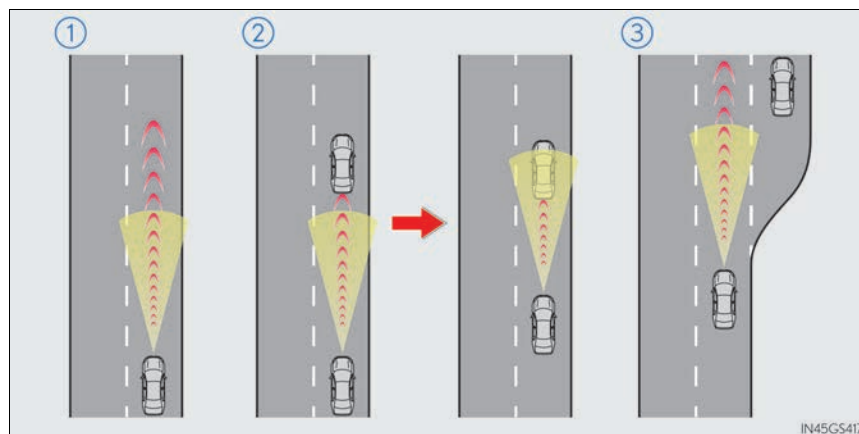

- ① Example of constant speed cruising
When there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance switch.

- ② Example of deceleration cruising and follow-up cruising
When a preceding vehicle driving slower than the set speed appears

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the stop lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. Approach warning warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

- ③ Example of acceleration
When there are no longer any preceding vehicles driving slower than the set speed


The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Setting the vehicle speed (vehicle-to-vehicle distance control mode)

- 1 Press the "ON/OFF" button to activate the cruise control.

Dynamic radar cruise control indicator will come on and a message will be displayed on the multi-information display. Press the button again to deactivate the cruise control.


If the "ON/OFF" button is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode. (→P. 297)

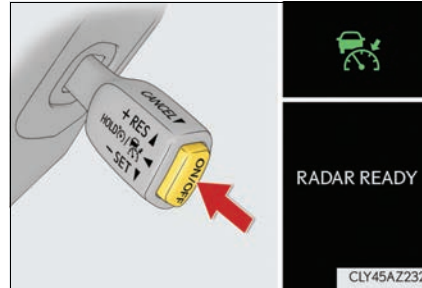

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 50 km/h [30 mph]) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

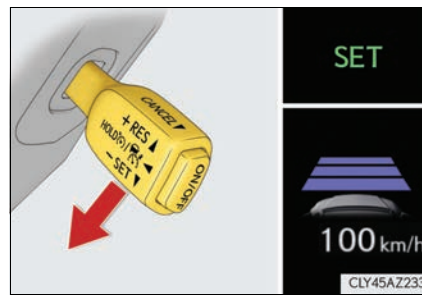


Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is displayed.

- ① Increases the speed
- ② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

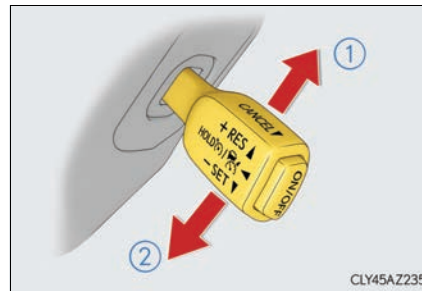

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

Fine adjustment: By 1 km/h (0.6 mph)^{*1} or 1 mph (1.6 km/h)^{*2} each time the lever is operated

Large adjustment: Increases or decreases in 5 km/h (3.1 mph)^{*1} or 5 mph (8 km/h)^{*2} increments for as long as the lever is held

In the constant speed control mode (→P. 297), the set speed will be increased or decreased as follows:

Fine adjustment: By 1.6 km/h (1 mph)^{*1} or 1 mph (1.6 km/h)^{*2} each time the lever is operated

Large adjustment: The speed will continue to change while the lever is held.

*1: When the set speed is shown in "km/h"

*2: When the set speed is shown in "MPH"


Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

Pressing the switch changes the vehicle-to-vehicle distance as follows:

- ① Long
- ② Medium
- ③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

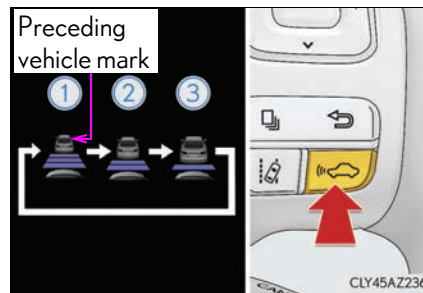

Vehicle-to-vehicle distance settings (vehicle-to-vehicle distance control mode)


Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (160 ft.)
Medium	Approximately 40 m (130 ft.)
Short	Approximately 30 m (100 ft.)

Canceling and resuming the speed control


- ① Pulling the lever toward you cancels the speed control.
The speed control is also canceled when the brake pedal is depressed.
- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

However, cruise control does not resume when the vehicle speed is approximately 40 km/h (25 mph) or less.

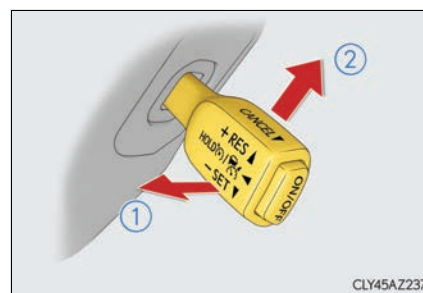

Approach warning (vehicle-to-vehicle distance control mode)

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

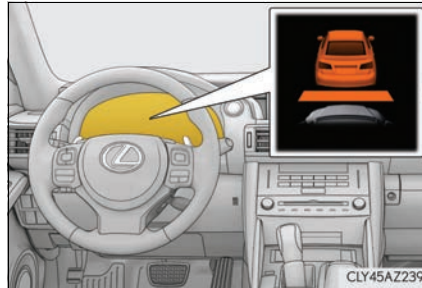

■ Warnings may not occur when

In the following instances, warnings may not occur even when the vehicle-to-vehicle distance is small.

- When the speed of the preceding vehicle matches or exceeds your vehicle speed
- When the preceding vehicle is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- When depressing the accelerator pedal

Selecting constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to a dirty radar sensor, etc.

- 1 With the cruise control off, press and hold the "ON/OFF" button for 1.5 seconds or more.

Immediately after the "ON/OFF" button is pressed, the dynamic radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

Switching to constant speed control mode is only possible when operating the lever with the cruise control off.



- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 50 km/h [30 mph]) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

Adjusting the speed setting: →P. 294

Canceling and resuming the speed setting: →P. 295

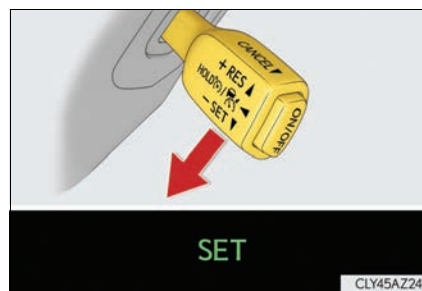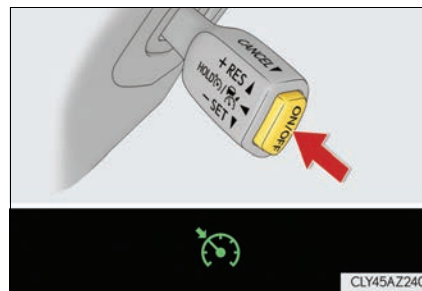

■ Dynamic radar cruise control can be set when

- The shift lever is in D.
- Range 4 or higher of D has been selected by using the paddle shift switch.
- Vehicle speed is at or above approximately 50 km/h (30 mph).

■ Accelerating after setting the vehicle speed

The vehicle can accelerate by operating the accelerator pedal. After accelerating, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the preceding vehicle.

■ Automatic cancelation of vehicle-to-vehicle distance control mode

Vehicle-to-vehicle distance control mode is automatically canceled in the following situations:

- Actual vehicle speed falls at or below approximately 40 km/h (25 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.
- When snow mode is set. (if equipped)
- The sensor cannot detect correctly because it is covered in some way.
- Pre-collision braking is activated.

If vehicle-to-vehicle distance control mode is automatically canceled for any other reason, there may be a malfunction in the system. Contact your Lexus dealer.

■ Automatic cancelation of constant speed control mode

Constant speed control mode is automatically canceled in the following situations:

- Actual vehicle speed is more than approximately 16 km/h (10 mph) below the set vehicle speed.
- Actual vehicle speed falls below approximately 40 km/h (25 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.
- Pre-collision braking is activated.

If constant speed control mode is automatically canceled for any other reason, there may be a malfunction in the system. Contact your Lexus dealer.

■ Brake system operation sound

If the brakes are applied automatically while the vehicle is in vehicle-to-vehicle distance control mode, a brake system operation sound may be heard. This does not indicate a malfunction.

■ Warning messages and buzzers for dynamic radar cruise control


Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. If a warning message is shown on the multi-information display, read the message and follow the instructions.

■ When the sensor may not be correctly detecting the vehicle ahead

In the case of the following and depending on the conditions, operate the brake pedal when deceleration of the system is insufficient or operate the accelerator pedal when acceleration is required.

As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P. 296) may not be activated.


- Vehicles that cut in suddenly
- Vehicles traveling at low speeds
- Vehicles that are not moving in the same lane
- Vehicles with small rear ends (trailers with no load on board, etc.)

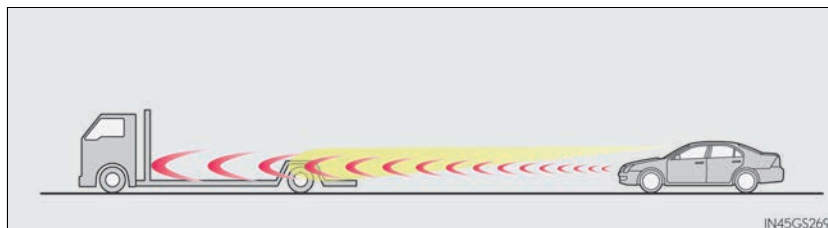


- Motorcycles traveling in the same lane
- When water or snow thrown up by the surrounding vehicles hinders the detecting of the sensor

300 4-5. Using the driving support systems

- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment, etc.)

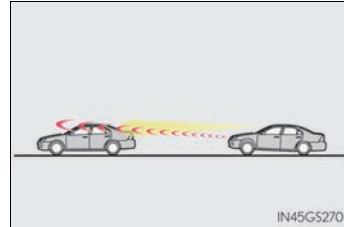

- Preceding vehicle has an extremely high ground clearance

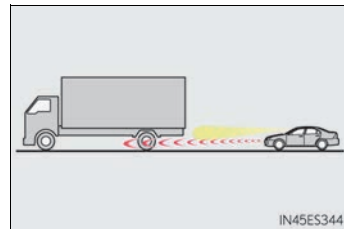


■ Conditions under which the vehicle-to-vehicle distance control mode may not function correctly


In the case of the following conditions, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.

As the sensor may not be able to correctly detect vehicles ahead, the system may not operate properly.

- When the road curves or when the lanes are narrow

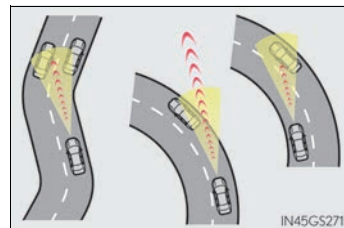

- When steering wheel operation or your position in the lane is unstable

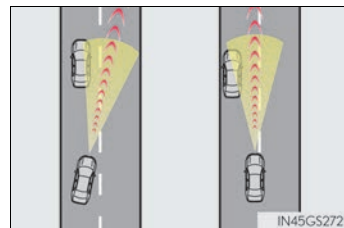


- When the vehicle ahead of you decelerates suddenly
- When driving on a road surrounded by a structure, such as in a tunnel or on a bridge
- While the vehicle speed is decreasing to the set speed after the vehicle accelerates by depressing the accelerator pedal

Cruise control*

Summary of functions

Use the cruise control to maintain a set speed without depressing the accelerator pedal.


- ① Indicators
- ② Cruise control switch

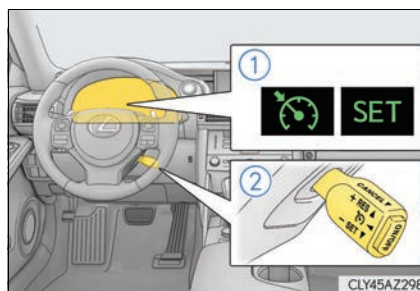

Setting the vehicle speed


- 1 Press the "ON/OFF" button to activate the cruise control.

Cruise control indicator will come on.
Press the button again to deactivate the cruise control.

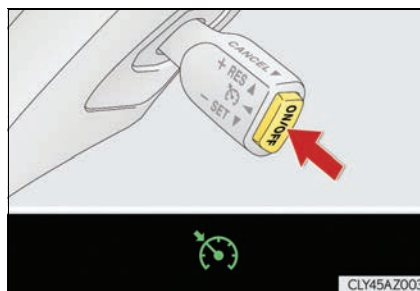

- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

"SET" indicator will come on.
The vehicle speed at the moment the lever is released becomes the set speed.

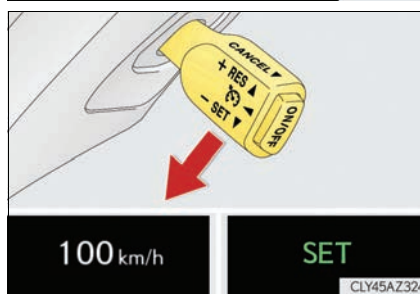

4

Driving

*: If equipped


Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is obtained.

- ① Increases the speed
- ② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

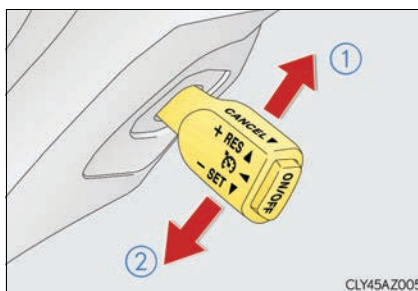

The set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1 km/h (0.6 mph)*¹ or 1 mph (1.6 km/h)*² each time the lever is operated.

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

*¹: When the set speed is shown in "km/h"

*²: When the set speed is shown in "MPH"


Canceling and resuming the constant speed control

- ① Pulling the lever toward you cancels the constant speed control.

The speed setting is also canceled when the brakes are applied.

- ② Pushing the lever up resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 40 km/h (25 mph).

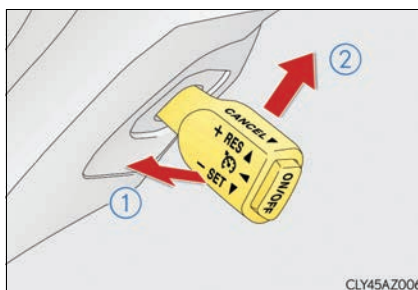

■ Cruise control can be set when

- The shift lever is in D.
- Range 4 or higher of D has been selected by using the paddle shift.
- Vehicle speed is above approximately 40 km/h (25 mph).

■ Accelerating after setting the vehicle speed

- The vehicle can be accelerated normally. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pushing the lever down to set the new speed.

■ Automatic cruise control cancelation

Cruise control will stop maintaining the vehicle speed in any of the following situations.

- Actual vehicle speed falls more than approximately 16 km/h (10 mph) below the preset vehicle speed.
At this time, the memorized set speed is not retained.
- Actual vehicle speed is below approximately 40 km/h (25 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off by pressing the VSC OFF switch.

■ If the warning message for the cruise control is shown on the multi-information display

Press the "ON/OFF" button once to deactivate the system, and then press the button again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by your Lexus dealer.

**WARNING****■ To avoid operating the cruise control by mistake**

Switch the cruise control off using the “ON/OFF” button when not in use.

■ Situations unsuitable for cruise control

Do not use cruise control in any of the following situations.

Doing so may result in loss of control and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep hills
Vehicle speed may exceed the set speed when driving down a steep hill.
- When your vehicle is towing a trailer or during emergency towing

Stop & Start system*

The Stop & Start system stops and restarts the engine according to the brake pedal or shift lever operation when the vehicle is stopped.


Stop & Start system operation

◆ When the shift lever is in D

■ Stopping the engine

While driving with the shift lever in D, depress the brake pedal and stop the vehicle.

The Stop & Start indicator will come on.

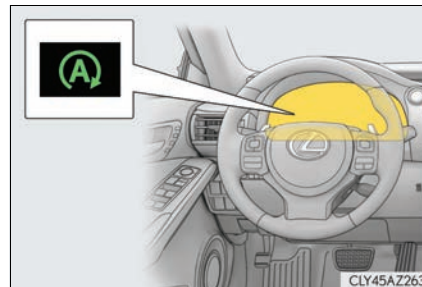

■ Restarting the engine

Release the brake pedal.

The Stop & Start indicator will turn off.

*: If equipped

◆ When the shift lever is shifted to P

■ Stopping the engine


- 1 While driving with the shift lever in D, depress the brake pedal and stop the vehicle.

The engine will be stopped by the Stop & Start system and the Stop & Start indicator will come on.

- 2 Shift the shift lever to P.
(→P. 227)

The engine will remain stopped.

The engine may restart if the shift lever is shifted from D to P immediately after the engine is stopped by the Stop & Start system. Additionally, if the engine is not stopped by the Stop & Start system when vehicle is stopped with the shift lever in D, it may be stopped by the Stop & Start system when the shift lever is shifted to P.

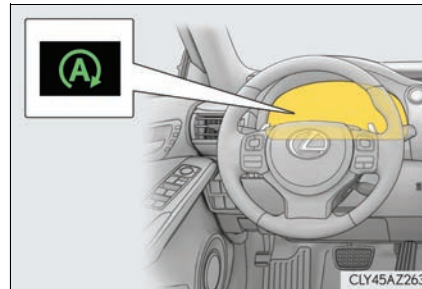

■ Restarting the engine

With the brake pedal depressed, shift the shift lever to a position other than P.
(→P. 227)


If the brake pedal was released after the engine was stopped by the Stop & Start system, the engine will restart when the brake pedal is depressed again. If the brake pedal was not released after the engine was stopped by the Stop & Start system, the engine will restart when the shift lever is shifted to a position other than P.

Disabling the Stop & Start system

Press the Stop & Start cancel switch to disable the Stop & Start system.

The Stop & Start cancel indicator will come on.

Pressing the switch again will enable the Stop & Start system and the Stop & Start cancel indicator will turn off.

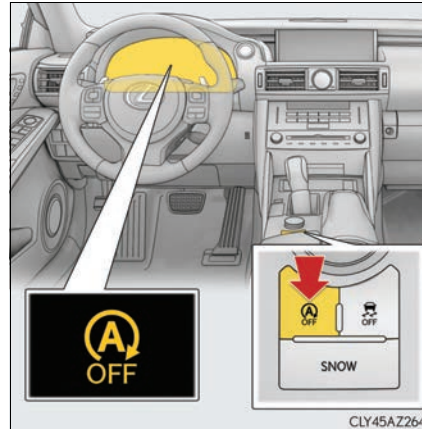

■ Automatic reactivation of the Stop & Start system

Even if the Stop & Start system is disabled by the Stop & Start cancel switch, it will be automatically re-enabled once the engine switch is turned off and then the engine is started.

■ If the Stop & Start cancel switch is pressed while the vehicle is stopped

- When the engine is stopped by the Stop & Start system, pressing the Stop & Start cancel switch will restart the engine.
From the next time the vehicle is stopped (after Stop & Start system has been disabled), the engine will not be stopped.
- With the Stop & Start system disabled, pressing the Stop & Start cancel switch will re-enable the system but not stop the engine.
From the next time the vehicle is stopped (after Stop & Start system has been enabled), the engine will be stopped.

Hill-start assist control

After the engine is stopped by the Stop & Start system when the vehicle is on an incline, brake force is temporarily maintained to prevent rolling backwards until the engine is restarted and drive force is generated.

When drive force is generated, the maintained brake force is automatically canceled.

- This function operates on flat surfaces as well as steep inclines.
- Sound may be generated from the brakes, but this is not a malfunction.
- Brake pedal response may change and vibration may occur, but these are not malfunctions.

■ Operating conditions

- The Stop & Start system is operational when all of the following conditions are met:
 - The brake pedal is being depressed firmly.
 - The shift lever is in D or P.
 - Normal mode or Eco drive mode is selected as the driving mode.
 -  () is off.
 - The driver's seat belt is fastened.
 - The engine is adequately warmed up.
 - The driver's door is closed.
 - The accelerator pedal is not being depressed.
 - The outside temperature is -5°C (23°F) or higher.
 - The hood is closed.
- In the following situations the engine may not be stopped by the Stop & Start system. This is not a malfunction of the Stop & Start system.
 - The air conditioning system is being used when the ambient temperature is high or low.
 - The battery is undergoing a periodic recharge.
 - The battery is not sufficiently charged, such as if the vehicle has been parked for a long time and the battery charge has decreased, the electric load is large, the battery fluid temperature is excessively low or the battery has deteriorated.
 - The brake booster vacuum is low.
 - The vehicle is stopped on a steep incline.
 - The steering wheel is being operated.
 - Due to traffic or other circumstances the vehicle is stopped repeatedly.
 - The vehicle is being driven in a high altitude area.
 - Engine coolant temperature or transmission fluid temperature is extremely low or high.
 - The battery fluid temperature is extremely low or high.
 - For a while after the battery terminals have been disconnected and reconnected.
 - For a while after the battery has been replaced.

- In the following situations, the engine will restart automatically if the engine is stopped by the Stop & Start system. (To enable stopping of the engine by the Stop & Start system, drive the vehicle.)
 - The air conditioning system is turned on.
 -  () is turned on.
 - The steering wheel is operated.
 - The shift lever is shifted to M, N or R from D.
 - The shift lever is shifted from P.
 - Sport mode or snow mode is selected as the driving mode.
 - The driver's seat belt is unfastened.
 - The driver's door is opened.
 - The accelerator pedal is depressed.
 - The Stop & Start cancel switch is pressed.
 - The vehicle starts to roll on an incline.
- In the following situations, the engine may restart automatically if the engine is stopped by the Stop & Start system. (To enable stopping of the engine by the Stop & Start system, drive the vehicle.)
 - The brake pedal is pumped or strongly depressed.
 - The air conditioning system is being used.
 - The battery is not sufficiently charged.

■ If the steering wheel is turned shortly after the engine has started

If the steering wheel is turned shortly after the engine has been started by the Stop & Start system, the steering wheel may feel heavy.

■ Hood

- If the hood is opened while the engine is stopped by the Stop & Start system with the shift lever in D, the engine will stall and will not be able to be restarted by the automatic engine start function. In this case, restart the engine using the normal engine starting procedure. (→P. 222)
- If the hood is opened while the engine is stopped by the Stop & Start system with the shift lever in P, the engine will be restarted automatically.
- Even if the hood is closed after the engine is started with the hood open, the Stop & Start system will not operate. Close the hood, turn the engine switch off, wait 30 seconds or more, and then start the engine.

■ When to use the Stop & Start system

- When stopping the vehicle for a longer period of time, turn the engine switch off and stop the engine completely.
- When the system does not operate, is canceled, or is malfunctioning, warning messages and a warning buzzer are used to inform the driver. (→P. 311)
- If the engine switch is pressed when the engine is stopped by the Stop & Start system, the engine will stall and will not be able to be restarted by the automatic engine start function. In this case, restart the engine using the normal engine starting procedure. (→P. 222)
- When the engine is restarted by the Stop & Start system, the power outlet may be temporarily unusable, but this is not a malfunction.
- Installation and removal of electrical components and wireless devices may affect the Stop & Start system. Contact your Lexus dealer for details.

■ If the windshield is fogged up while the engine is stopped by the Stop & Start system

Turn  () on. (The engine will start due to the automatic engine start function.): →P. 486

If the windshield fogs up frequently, press the Stop & Start cancel switch to disable the system.

■ If an odor comes from the air conditioning system while the engine is stopped by the Stop & Start system

Press the Stop & Start cancel switch to deactivate the Stop & Start system.

■ Air conditioning system operation while the engine is stopped by the Stop & Start system

- If the air conditioning system is being used in automatic mode, the fan speed may be reduced or the fan may be stopped while the engine is stopped by the Stop & Start system in order to reduce changes in the cabin temperature.

- To ensure air conditioning system performance when the vehicle is stopped, disable the Stop & Start system by pressing the Stop & Start cancel switch.

■ Changing the idling stop time with the air conditioning system on

The length of time the Stop & Start system will operate when the air conditioning system is on can be changed by performing the following operation. (The length of time the Stop & Start system will operate when the air conditioning system is off cannot be changed.)

- Setting by pressing and holding the Stop & Start cancel switch

Each time the Stop & Start cancel switch is pressed and held for 3 seconds or more, the system changes between standard and extended. The system status can be confirmed on the multi-information display screen. (→P. 124)

- Settings using the multi-information display

 (→P. 133) or  (→P. 134).

■ The Stop & Start system protection function

- When the volume of the audio system is excessively high, sound output from the audio system may suddenly be cut off in order to reduce battery consumption. To prevent the audio system from being cut off, keep the volume of audio system at a moderate level.

If the audio system has been cut off, turn the engine switch off, wait for 3 seconds or more and then turn it to ACCESSORY mode or IGNITION ON mode to re-enable the audio system.

- The audio system may not be activated if the battery terminals are disconnected and then reconnected. If this occurs, turn the engine switch off and then turn it to IGNITION ON mode and then off twice to activate the audio system.

■ Replacing the battery

→P. 653

■ Displaying the Stop & Start system status

→P. 133

■ Multi-information display messages

If the following situations,  and a message may be displayed on the multi-information display.

- When the engine cannot be stopped by the Stop & Start system

Message	Details
 "Depress Brake Firmly to Activate"	The brake pedal is not depressed enough. If the brake pedal is depressed further, the system will operate.
 "For Climate Control"	• The air conditioning system is being used when the ambient temperature is high or low. If the difference between the set temperature and cabin temperature is small, the system will be enabled. •  () is ON.
 "Battery Charging"	• The battery charge amount may be low. Engine stop is temporarily prohibited to prioritize charging of the battery, but if the engine is operated for a short while, engine stop is allowed. • A refresh charge may be occurring, such as when the battery is undergoing a periodic recharge, for a while after the battery terminals have been disconnected and reconnected, for a while after the battery has been replaced, etc. After a refresh charge of approximately 5 to 60 minutes completes, the system can be operated. • The engine may have been started with the hood opened. Close the hood, turn the engine switch off, wait 30 seconds or more, and then start the engine. If the message is displayed continuously (more than 60 minutes), the battery may have deteriorated. Contact your Lexus dealer for details.
 "For Brake System"	• The vehicle is being driven in a high altitude area. • The brake booster vacuum is low. When the brake booster vacuum reaches a predetermined level, the system will be enabled.
 "Driver Seat Belt Unbuckled"	The driver seat belt is not fastened.
 "Non-Dedicated Battery"	A non-dedicated battery for the Stop & Start system may have been installed. The Stop & Start system does not operate. Have the vehicle inspected by your Lexus dealer.

- When the engine automatically restarts while stopped by the Stop & Start system

Message	Details
 "For Climate Control"	• The air conditioning system has been turned on or is being used. •  () has been turned on.
 "For Brake System"	The brake pedal has been depressed further or pumped. The system will be enabled after the engine runs and the brake booster vacuum reaches a predetermined level.
 "Battery Charging"	The battery charge amount may be low. The engine is restarted to prioritize battery charging. Operating the engine for a short while allows the system to recover.
 "Steering Wheel Turned"	The steering wheel was operated.
 "Driver Seat Belt Unbuckled"	The driver seat belt has been unfastened.

■ Stop & Start system warning messages

If a system malfunction occurs, a warning message will be displayed on the multi-information display to inform the driver of the need for caution. (→P. 619)

■ If the Stop & Start cancel indicator continues to flash

The system may be malfunctioning. Have the vehicle inspected by your Lexus dealer.

**WARNING****■ When the Stop & Start system is operating**

- Depress the brake pedal and apply the parking brake when necessary while the engine is stopped by the Stop & Start system (while the Stop & Start indicator is on).
- Do not allow anyone to leave the vehicle while the engine is stopped by the Stop & Start system (while the Stop & Start indicator is on).
An accident may occur due to the automatic engine start function.
- Ensure that the engine is not stopped by the Stop & Start system while the vehicle is in a poorly ventilated area. The engine may restart due to the automatic engine start function, causing exhaust gases to collect and enter the vehicle, possibly resulting in death or a serious health hazard.

**NOTICE****■ To ensure the system operates correctly**

If any of the following situations occur, the Stop & Start system may not operate correctly. Have your vehicle checked by your Lexus dealer.


- While the driver's seat belt is fastened, the driver's and front passenger's seat belt reminder light flashes.
- Even though the driver's seat belt is not fastened, the driver's and front passenger's seat belt reminder light does not illuminate.
- Even though the driver's door is closed, the open door warning is displayed on the multi-information display or the interior light is illuminated when the interior light switch is in the door position.
- Even though the driver's door is open, the open door warning is not displayed on the multi-information display or the interior light does not illuminate when the interior light switch is in the door position.

Lexus parking assist-sensor*

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the displays and a buzzer. Always check the surrounding area when using this system.


Types of sensors

► Except F SPORT models

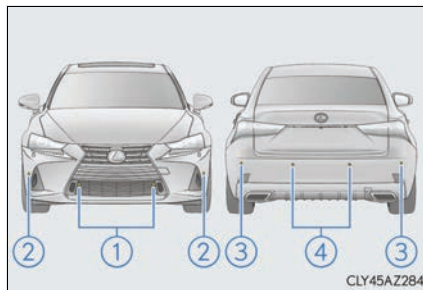

- ① Front center sensors
- ② Front corner sensors

► F SPORT models

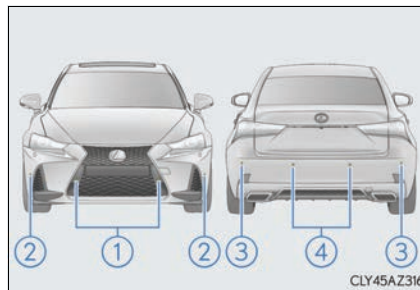


- ③ Rear corner sensors
- ④ Rear center sensors

Lexus parking assist-sensor switch

Turns the Lexus parking assist-sensor on/off.

When on, the indicator light comes on to inform the driver that the system is operational.

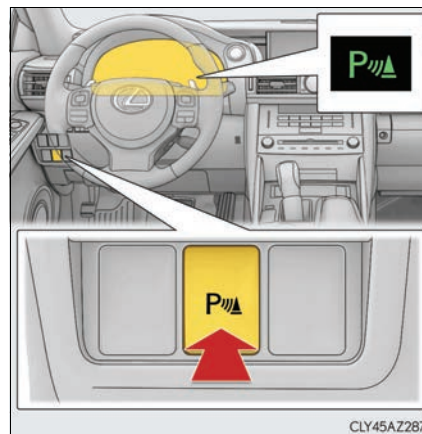


*: If equipped

Display

When the sensors detect an obstacle, the following displays inform the driver of the position and distance to the obstacle.


■ Multi-information display

- ① Front corner sensor operation
- ② Front center sensor operation
- ③ Rear corner sensor operation
- ④ Rear center sensor operation

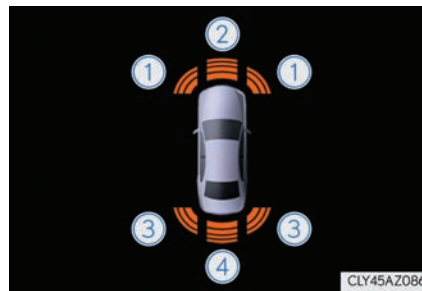

■ Lexus Display Audio or navigation system (7-inch display) screen

- ① Lexus parking assist-sensor
When the vehicle is moving forward.
A graphic is automatically displayed when an obstacle is detected. The screen can be set so that the graphic is not displayed. (→P. 319)
 : Select to mute the buzzer sounds.
- ② Lexus parking assist-sensor
- ③ Rear Cross Traffic Alert (if equipped)
When the vehicle is moving backward.
A simplified image is displayed on the upper part of the screen when an obstacle is detected.

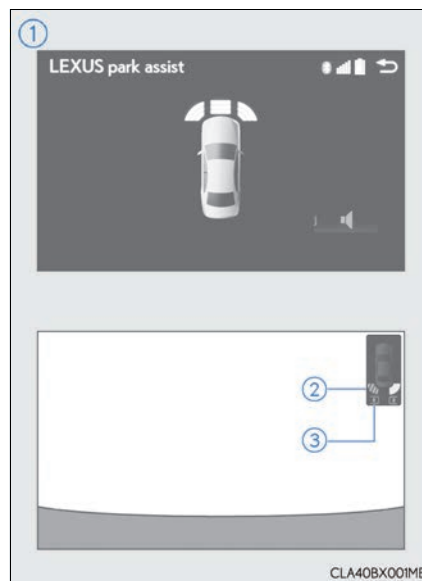

4

Driving


■ Navigation system (10.3-inch display) screen

- ① Lexus parking assist-sensor
- ② Rear Cross Traffic Alert (if equipped)

A graphic is automatically displayed on the side display when an obstacle is detected. The screen can be set so that the graphic is not displayed. (→P. 319)




: Select to mute the buzzer sounds. This function is available when the vehicle is moving forward.

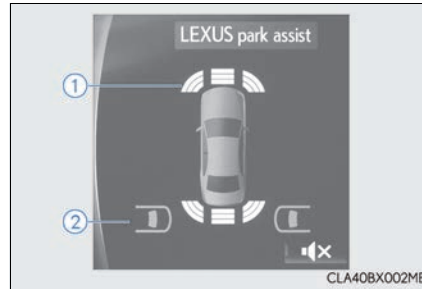

Sensor detection display, obstacle distance

■ Distance display

Sensors that detect an obstacle will illuminate continuously or blink.

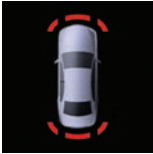Display ^{*1}	Insert display	Approximate distance to obstacle	
	Lexus parking assist monitor ^{*4}	Front corner sensor/ front center sensor	Rear corner sensor/ rear center sensor
 (continuous)	 (blinking slowly)	Front center sensor only: 100 cm (3.3 ft.) to 50 cm (1.6 ft.)	Rear center sensor only: 150 cm (4.9 ft.) to 60 cm (2.0 ft.)
 (continuous)	 (blinking)	50 cm (1.6 ft.) to 40 cm (1.3 ft.)	60 cm (2.0 ft.) to 45 cm (1.5 ft.)
 (continuous)	 (blinking rapidly)	40 cm (1.3 ft.) to 30 cm (1.0 ft.)	Rear corner sensor: 45 cm (1.5 ft.) to 30 cm (1.0 ft.) Rear center sensor: 45 cm (1.5 ft.) to 35 cm (1.1 ft.)
 (blinking ^{*2} or continuous ^{*3})	 (continuous)	Less than 30 cm (1.0 ft.)	Rear corner sensor: Less than 30 cm (1.0 ft.) Rear center sensor: Less than 35 cm (1.1 ft.)

- *1: The images may differ from that shown in the illustrations. (→P. 315)
- *2: Multi-information display
- *3: Audio system screen
- *4: Lexus Display Audio or navigation system (7-inch display) screen

■ Buzzer operation and distance to an obstacle

A buzzer sounds when the sensors are operating.


- The buzzer beeps faster as the vehicle approaches an obstacle. When the vehicle comes within the following distance of the obstacle, the buzzer sounds continuously:
 - Front center sensors: Approximately 30 cm (1.0 ft.)
 - Corner sensors: Approximately 30 cm (1.0 ft.)
 - Rear center sensors: Approximately 35 cm (1.1 ft.)
- When 2 or more obstacles are detected simultaneously, the buzzer system responds to the nearest obstacle. If one or both come within the above distances, the beep will repeat a long tone, followed by fast beeps.

Detection range of the sensors

- ① Approximately 100 cm (3.3 ft.)
- ② Approximately 150 cm (4.9 ft.)
- ③ Approximately 50 cm (1.6 ft.)
- ④ Approximately 60 cm (2.0 ft.)

The diagram shows the detection range of the sensors. Note that the sensors cannot detect obstacles that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object etc.

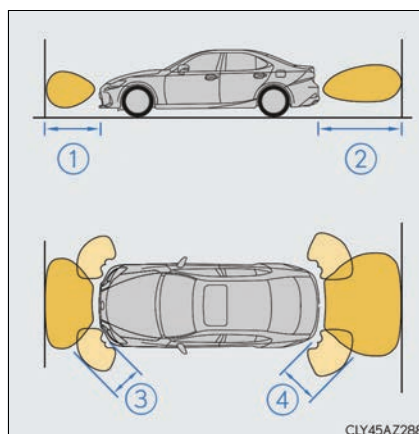



Setting up Lexus parking assist-sensor

You can change the buzzer sounds volume and the screen operating conditions when the engine switch is in IGNITION ON mode.

- 1 Press the "MENU" button on the Lexus Display Audio controller/Remote Touch, and then select  on the screen.
- 2 Select "Vehicle", and then select "LEXUS park assist" on the screen.
- 3 Select the desired item.

► Lexus Display Audio screen

► Navigation system screen

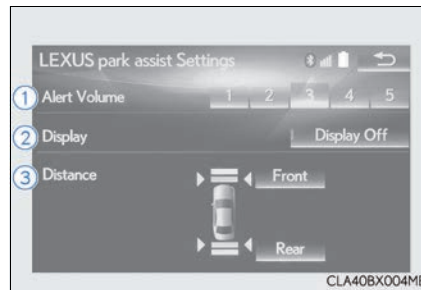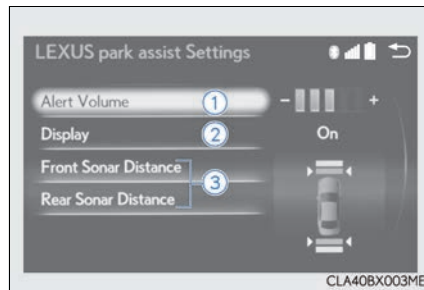

- ① The buzzer sounds volume can be adjusted.
- ② On or off can be selected for Lexus parking assist-sensor display.
- ③ Both the front or rear center sensors display and tone indication can be set.

■ The Lexus parking assist-sensor can be operated when

- Front corner sensors:
 - The engine switch is in IGNITION ON mode.
 - The shift lever is in other than P.
 - The vehicle speed is less than about 10 km/h (6 mph).
(At any speed when the shift lever is in R)
- Front center sensors:
 - The engine switch is in IGNITION ON mode.
 - The shift lever is in other than P or R.
 - The vehicle speed is less than about 10 km/h (6 mph).
- Rear corner and rear center sensors:
 - The engine switch is in IGNITION ON mode.
 - The shift lever is in R.

■ Lexus parking assist-sensor display

Vehicles with a Lexus Display Audio system/navigation system (7-inch display): When an obstacle is detected while the Lexus parking assist monitor is in use, the warning indicator will appear in the upper part of the screen even if the display setting has been set to off.

■ If a message is displayed on the multi-information display

→P. 607

■ Customization

Some functions can be customized. (→P. 319, 679)



WARNING

■ When using the Lexus parking assist-sensor

Observe the following precautions.

Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

- Do not use the sensor at speeds in excess of 10 km/h (6 mph).
- The sensors' detection areas and reaction times are limited. When moving forward or reversing, check the areas surrounding the vehicle (especially the sides of the vehicle) for safety, and drive slowly, using the brake to control the vehicle's speed.
- Do not install accessories within the sensors' detection areas.

■ Sensor detection information

- The sensor's detection areas are limited to the areas around the vehicle's bumper.
- Certain vehicle conditions and surrounding environments, such as the following, may affect the ability of the sensors to correctly detect objects. Pay particular attention in the following situations. Failure to do so may result in the vehicle being driven unsafely, possibly leading to an accident.
 - There is dirt, snow or ice on the sensor. (Wiping the sensors will resolve this problem.)
 - The sensor is frozen. (Thawing the area will resolve this problem.)
 - In especially cold weather, if a sensor is frozen the screen may show an abnormal display, or obstacles may not be detected.
 - The sensor is covered in any way.
 - The vehicle is leaning considerably to one side.
 - On an extremely bumpy road, on an incline, on gravel, or on grass.
 - The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
 - There is another vehicle equipped with parking assist sensors in the vicinity.
 - The sensor is coated with a sheet of spray or heavy rain.
 - The vehicle is equipped with a fender pole or wireless antenna.
 - Towing eyelets are installed.
 - The bumper or sensor receives a strong impact.
 - The vehicle is approaching a tall or curved curb.
 - In harsh sunlight or intense cold weather.
 - The area directly under the bumpers is not detected.
 - If obstacles draw too close to the sensor.
 - A non-genuine Lexus suspension (lowered suspension etc.) is installed.
 - People may not be detected if they are wearing certain types of clothing.

In addition to the examples above, there are instances in which, because of their shape, signs and other objects may be judged by a sensor to be closer than they are.

**WARNING**

- The shape of the obstacle may prevent a sensor from detecting it. Pay particular attention to the following obstacles:
 - Wires, fences, ropes, etc.
 - Cotton, snow and other materials that absorb sound waves
 - Sharply-angled objects
 - Low obstacles
 - Tall obstacles with upper sections projecting outwards in the direction of your vehicle
 - People, animals and other moving objects
 - People wearing certain types of clothing
- The following situations may occur during use.
 - Depending on the shape of the obstacle and other factors, the detection distance may shorten, or detection may be impossible.
 - Obstacles may not be detected if they are too close to the sensor.
 - There will be a short delay between obstacle detection and display. Even at slow speeds, there is a possibility that the obstacle will come within the sensor's detection areas before the display is shown and the buzzer sounds.
 - Thin posts or objects lower than the sensor may not be detected when approached, even if they have been detected once.
 - It might be difficult to hear beeps due to the volume of audio system or air flow noise of the air conditioning system.

**NOTICE**■ **When using Lexus parking assist-sensor**

In the following situations, the system may not function correctly due to a sensor malfunction, etc. Have the vehicle checked by your Lexus dealer.

- The Lexus parking assist-sensor operation display flashes, and a buzzer sounds when no obstacles are detected.
- If the area around a sensor collides with something, or is subjected to strong impact.
- If the bumper collides with something.
- If the display shows continuously without beeping, except when the buzzer mute switch has been turned on.
- If a display error occurs, first check the sensor.
If the error occurs even if there is no ice, snow or mud on the sensor, it is likely that the sensor is malfunctioning.

■ **Notes when washing the vehicle**

Do not apply intensive bursts of water or steam to the sensor area.

Doing so may result in the sensor malfunctioning.

Lexus parking assist monitor*


The parking assist monitor assists the driver by displaying an image of the view behind the vehicle while backing up, for example while parking.

The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

The rear view image is displayed when the shift lever is in R and the engine switch is in IGNITION ON mode.

The parking assist monitor system will be deactivated when the shift lever is in any position other than R.

When the shift lever is shifted to R and any mode button (such as "MENU") is pressed, the parking assist monitor system is canceled, and the screen is switched to the mode of the button that was pressed.

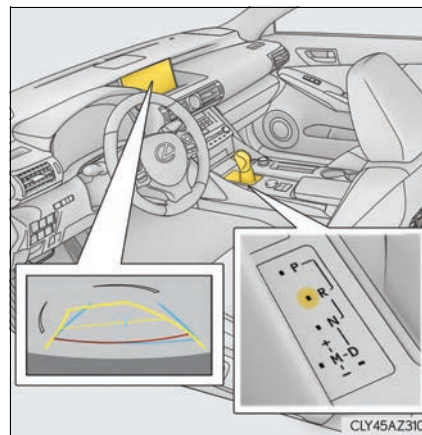

4

Driving

*: If equipped


Using the Lexus parking assist monitor

■ Screen display

The parking assist monitor screen will be displayed if the shift position is shifted to R while the engine switch is in IGNITION ON mode.


- ① Lexus parking assist-sensor (if equipped)
- ② Rear Cross Traffic Alert (if equipped)

A simplified image is displayed on the upper part of the screen when an obstacle is detected.

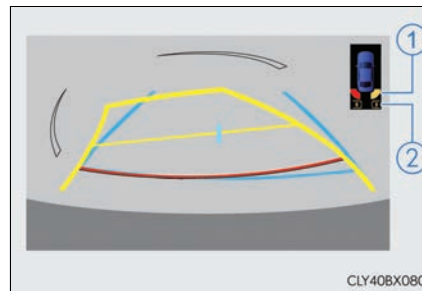


■ Using the system

Use any of the following modes.

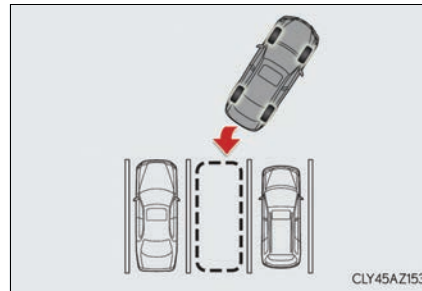


- Estimated course line display mode (→P. 326)

Estimated course lines are displayed which move in accordance with the operation of the steering wheel.

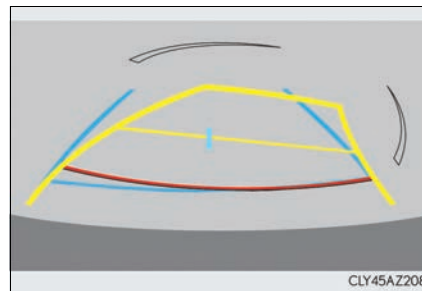


- Parking assist guide line display mode (→P. 328)

The steering wheel return points (parking assist guide lines) are displayed.

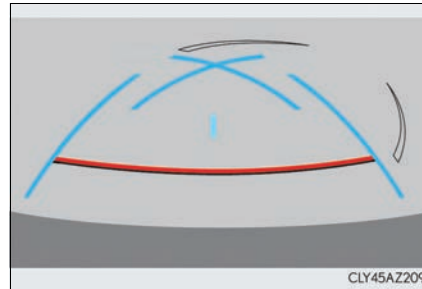

- Distance guide line display mode

Distance guide lines only are displayed.

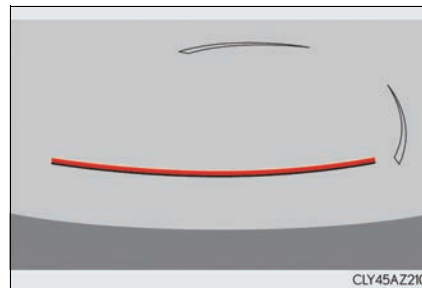


4

Driving

Switching the display mode


When the shift lever is in any position other than R, the display mode can be changed in the following procedure.

- 1 Press the "MENU" button on the Lexus Display Audio controller, and then select "Setup" on the screen.
- 2 Select "Vehicle", and then select "Back Camera Guide Line Setting" on the screen.
- 3 Select the desired display mode.
 - ① Estimated course line display mode (→P. 326)
 - ② Parking assist guide line display mode (→P. 328)
 - ③ Distance guide line display mode
Distance guide lines only are displayed.

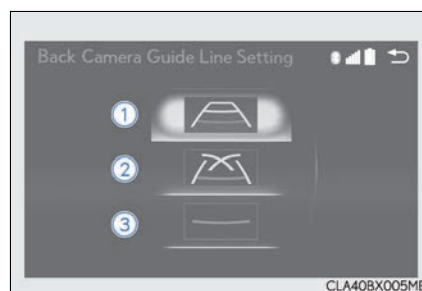

Estimated course line display mode

■ Screen description

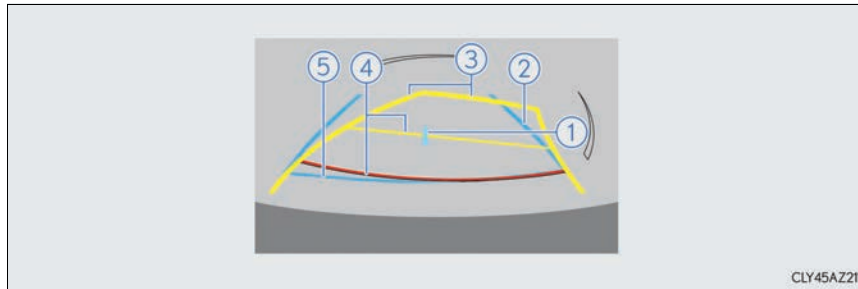


- ① Vehicle center guide line
The line indicates the estimated vehicle center on the ground.
- ② Vehicle width guide line
The line indicates a guide path when the vehicle is being backed straight up.
The displayed width is wider than the actual vehicle width.
The line aligns with the estimated course lines when the steering wheel is straight.
- ③ Estimated course lines
The lines show an estimated course when the steering wheel is turned.
- ④ Distance guide line
The line moves, together with the estimated course lines, in sync with the steering wheel. The line shows points approximately 0.5 m (1.5 ft.) (red) and approximately 1 m (3 ft.) (yellow) from the center of the edge of the bumper.
- ⑤ Distance guide line
The line shows distance behind the vehicle, a point approximately 0.5 m (1.5 ft.) (blue) from the edge of the bumper.


■ Parking operation

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to R.
- 2 Turn the steering wheel so that the estimated course lines are within the parking space, and back up slowly.
 - ① Parking space
 - ② Estimated course lines

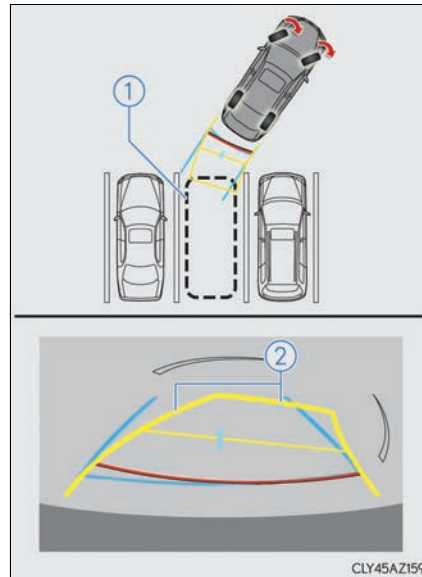


- 3 When the rear position of the vehicle has entered the parking space, turn the steering wheel so that the vehicle width guide lines are within the left and right dividing lines of the parking space.
 - ③ Vehicle width guide line

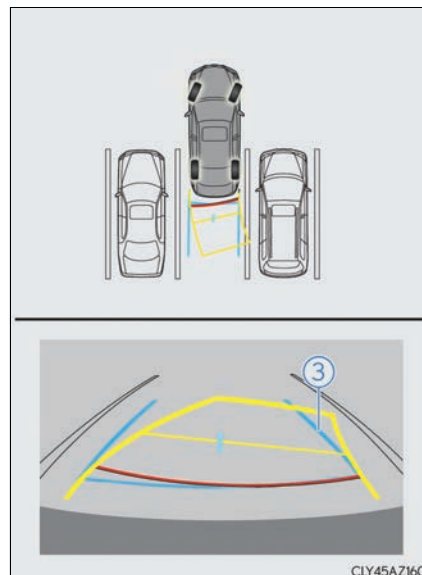

- 4 Once the vehicle width guide lines and the parking space lines are parallel, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

Parking assist guide line display mode

■ Screen description

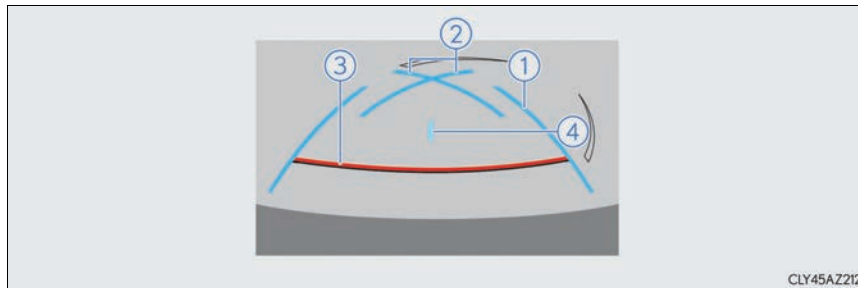


- ① Vehicle width guide lines
These lines indicate a guide path when the vehicle is being backed straight up. The displayed width is wider than the actual vehicle width.
- ② Parking assist guide lines
These lines indicate the path of the smallest turn possible behind the vehicle.
These lines also indicate the approximate position of the steering wheel when parking.
- ③ Distance guide line
This line (red) indicates points approximately 0.5 m (1.5 ft.) behind the rear bumper of your vehicle.
- ④ Vehicle center guide line
The line indicates the estimated vehicle center on the ground.

■ Parking operation

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1** Shift the shift lever to R.
- 2** Back up until the parking assist guide line meets the edge of the left-hand dividing line of the parking space.
 - ① Parking assist guide line
 - ② Parking space dividing line

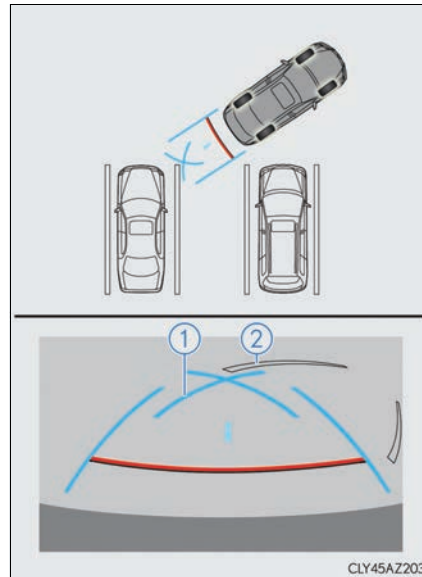

- 3** Turn the steering wheel all the way to the right, and back up slowly.
- 4** Once the vehicle is parallel with the parking space, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5** Stop the vehicle in an appropriate place, and finish parking.

Lexus parking assist monitor precautions


■ Area displayed on screen

The parking assist monitor displays an image of the view from the bumper of the rear area of the vehicle.

The image of the Lexus parking assist monitor can be adjusted.


(→P. 387)

- The area displayed on the screen may vary according to vehicle orientation conditions.
- Objects which are close to either corner of the bumper or under the bumper cannot be seen on the screen.
- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- Items which are located higher than the camera may not be displayed on the monitor.

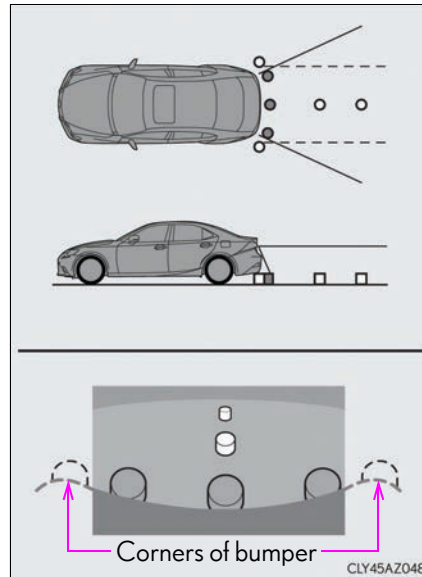

■ Lexus parking assist monitor camera

The camera for the parking assist monitor is located above the license plate.

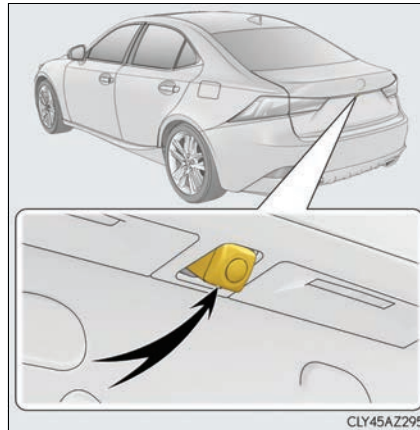**● Using the camera**

If dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.

■ Differences between the screen and the actual road


The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.

The distances between the vehicle width guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.

The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.


- When the ground behind the vehicle slopes up sharply

The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

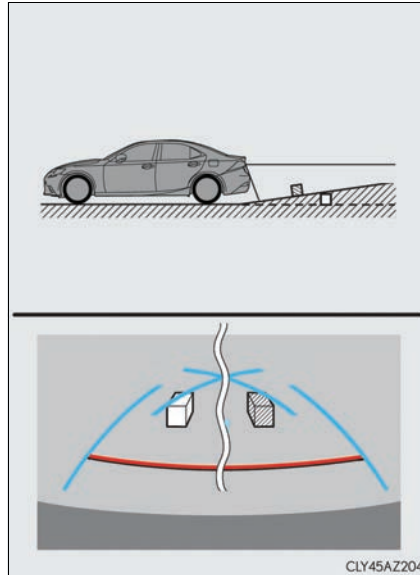


- When the ground behind the vehicle slopes down sharply

The distance guide lines will appear to be further from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

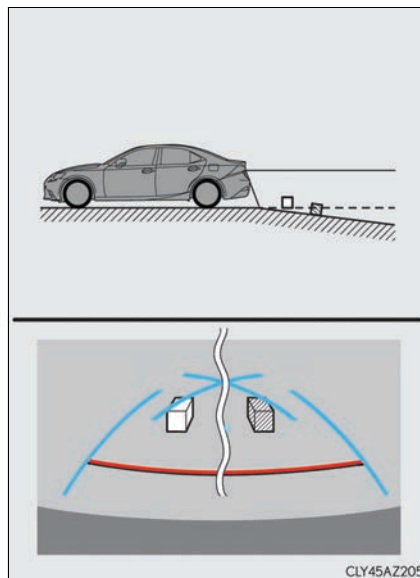

- When any part of the vehicle sags

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

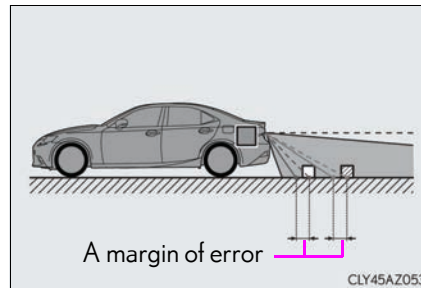


- When approaching three-dimensional objects

The estimated course lines target a flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the estimated course lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.


- Estimated course lines

Visually check the surroundings and the area behind the vehicle. In the case shown in the illustration, the truck appears to be outside of the estimated course lines and the vehicle does not look as if it will hit the truck. However, the rear body of the truck may actually cross over the estimated course lines. In reality if you back up as guided by the estimated course lines, the vehicle may hit the truck.

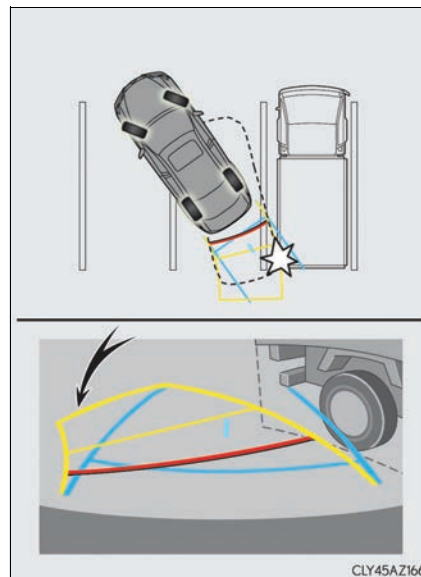

- Distance guidelines

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point ②. However, in reality if you back up to point ①, you will hit the truck. On the screen, it appears that ① is closest and ③ is farthest away. However, in reality, the distance to ① and ③ is the same and ② is farther than ① and ③.

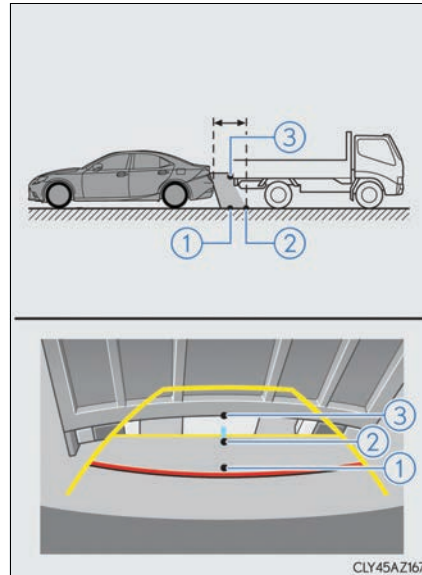

Things you should know

■ If you notice any symptoms

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Lexus dealer.

Likely cause	Solution
❑ The image is difficult to see	
• The vehicle is in a dark area • The temperature around the lens is either high or low • The outside temperature is low • There are water droplets on the camera • It is raining or humid • Foreign matter (mud, etc.) is adhering to the camera • There are scratches on the camera • Sunlight or headlights are shining directly into the camera • The vehicle is under fluorescent lights, sodium lights, mercury lights etc.	If this happens due to these causes, it does not indicate a malfunction. Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.) The image on the Lexus parking assist monitor system screen can be adjusted. (→P. 387)
❑ The image is blurry	
Dirt or foreign matter (such as water droplets, snow, mud, etc.) is adhering to the camera.	Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.
❑ The image is out of alignment	
The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Lexus dealer.
❑ The guide lines are very far out of alignment	
The camera position is out of alignment.	Have the vehicle inspected by your Lexus dealer.
• The vehicle is tilted (there is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.) • The vehicle is used on an incline.	If this happens due to these causes, it does not indicate a malfunction. Back up while visually checking the vehicle's surroundings.

Likely cause	Solution
❑ The estimated course lines move even though the steering wheel is straight	
There is a malfunction in the signals being output by the steering sensor.	Have the vehicle inspected by your Lexus dealer.
❑ Guide lines are not displayed	
The trunk lid is open.	Close the trunk lid. If this does not resolve the symptom, have the vehicle inspected by your Lexus dealer.
❑ The estimated course lines are not displayed	
• The steering wheel has been moved while the battery was being reinstalled. • Battery power is low. • The steering sensor has been reinstalled. • There is a malfunction in the signals being output by the steering sensor.	Stop the vehicle, and turn the steering wheel as far as it will go to the left and right. If this does not resolve the symptom, have the vehicle inspected by your Lexus dealer.

 WARNING
■ When using the Lexus parking assist monitor system

The parking assist monitor is a supplemental device intended to assist the driver when backing up. When backing up, be sure to check visually behind and all around the vehicle before proceeding.

Observe the following precautions to avoid an accident that could result in death or serious injuries.

- Never depend on the parking assist monitor entirely when backing up. The image and the position of the guide lines displayed on the screen may differ from the actual state.
Use caution, just as you would when backing up any vehicle.
- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- If you seem likely to hit nearby vehicles, obstacles, people or mount the shoulder, depress the brake pedal to stop the vehicle.
- The instructions given are only guidelines.
When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the parking assist system.
- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.
- Do not use the parking assist monitor in the following cases:
 - On icy or slick road surfaces, or in snow
 - When using tire chains or emergency tires
 - When the trunk lid is not closed completely
 - On roads that are not flat or straight, such as curves or slopes.
- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to check direct visually and with the mirrors all around the vehicle before proceeding.
- If the tire sizes are changed, the position of the guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P. 331)
- Estimated course line display mode: If the steering wheel is straight and the vehicle width guide lines and the estimated course lines are not in alignment, have the vehicle inspected by your Lexus dealer.



NOTICE

■ How to use the camera

- The parking assist monitor may not operate properly in the following cases.
 - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
 - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
 - When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
 - Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
 - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
 - When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
 - When the camera is used under fluorescent lights, sodium light or mercury light etc., the lights and the illuminated areas may appear to flicker.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Lexus dealer as soon as possible.

BSM (Blind Spot Monitor)*


Summary of the Blind Spot Monitor

The Blind Spot Monitor is a system that has 2 functions:

- The BSM (Blind Spot Monitor) function
Assists the driver in making a decision when changing lanes
- The RCTA (Rear Cross Traffic Alert) function
Assists the driver when backing up

These functions use same sensors.

*: If equipped

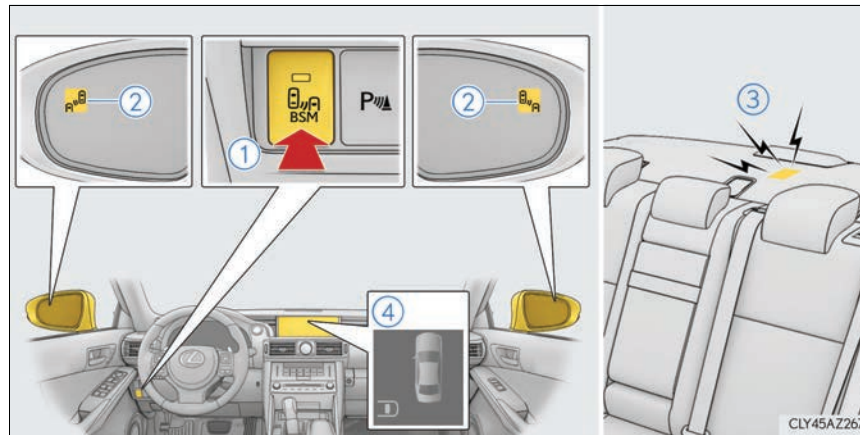

① BSM main switch

Pressing the switch turns the system on or off. When the switch is set to on, the switch's indicator illuminates and the buzzer sounds. Common switch for BSM function and RCTA function.

② Outside rear view mirror indicators

BSM function:

When a vehicle is detected in a blind spot of the outside rear view mirrors, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator will flash.

RCTA function:

When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.

③ RCTA buzzer (RCTA function)

If a vehicle approaching from the right or left at the rear of the vehicle is detected, a buzzer will sound. The buzzer also sounds for approximately 1 second immediately after the BSM function is operated to turn the system on.

④ Monitor screen display (RCTA function)

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon (→P. 349) for the detected side will be displayed on the monitor screen. This illustration shows an example of a vehicle approaching from the left at the rear of the vehicle.

■ Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ Hearing the RCTA buzzer


The RCTA buzzer may be difficult to hear over loud noises, such as if the audio system volume is high.

■ When there is a malfunction in the Blind Spot Monitor

If a system malfunction is detected due to any of the following, a warning message will be displayed: (→P. 607)

- A sensor is malfunctioning
- A sensor is dirty or covered with snow or a sticker
- The outside temperature is extremely high or low
- Sensor voltage is abnormal
- A sensor is misaligned

■ Certification for the Blind Spot Monitor

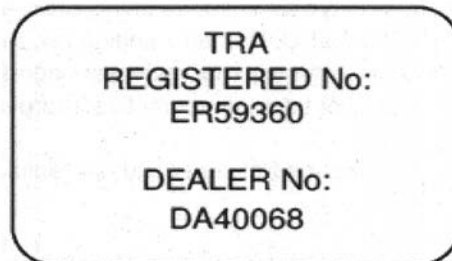

The Equipment Identified hereon is approved for use under the following rules

- 1- This equipment must not cause harmful interference to other service.
- 2- This equipment is subject to harmful interference, and the owner of this equipment must not claim for protection.



TRC's type approval certificate number: TRC/LPD/2014/254

From the Lebanese Telecommunications Ministry:
Type Approval Number : 12421/O&M/2014



FCC ID : OAYSRR3A

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。


低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

⚠ WARNING**■ Handling the radar sensor**

Blind Spot Monitor sensors are installed behind the left and right sides of the rear bumper respectively. Observe the following to ensure the Blind Spot Monitor can function correctly.

- Keep the sensors and the surrounding areas on the rear bumper clean at all times.

If a sensor or its surrounding area on the rear bumper is dirty or covered with snow, the Blind Spot Monitor may not operate and a warning message (→P. 607) will be displayed. In this situation, clear off the dirt or snow and drive the vehicle with the operation conditions of the BSM function (→P. 346) satisfied for approximately 10 minutes. If the warning message does not disappear, have the vehicle inspected by your Lexus dealer.

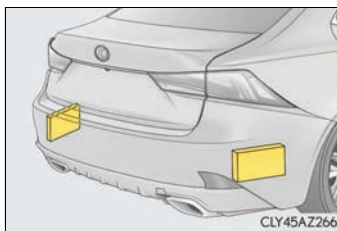

- Do not subject a sensor or its surrounding area on the rear bumper to a strong impact.
If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly.
In the following situations, have your vehicle inspected by your Lexus dealer.
 - A sensor or its surrounding area is subject to a strong impact.
 - If the surrounding area of a sensor is scratched or dented, or part of them has become disconnected.
- Do not disassemble the sensor.
- Do not attach stickers to the sensor or surrounding area on the rear bumper.
- Do not modify the sensor or surrounding area on the rear bumper.
- Do not paint the rear bumper any color other than an official Lexus color.

BSM function

The BSM function uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rear view mirror (the blind spot), and advises the driver of the vehicles existence via the outside rear view mirror indicator.

BSM function detection areas


The areas that vehicles can be detected in are outlined below.

The range of each detection area is:

- ① Approximately 0.5 m (1.6 ft.) to 3.5 m (11.5 ft.) from either side of the vehicle*

*: The area between the side of the vehicle and 0.5 m (1.6 ft.) from the side of the vehicle cannot be detected.

- ② Approximately 3 m (9.8 ft.) from the rear bumper
- ③ Approximately 1 m (3.3 ft.) forward of the rear bumper

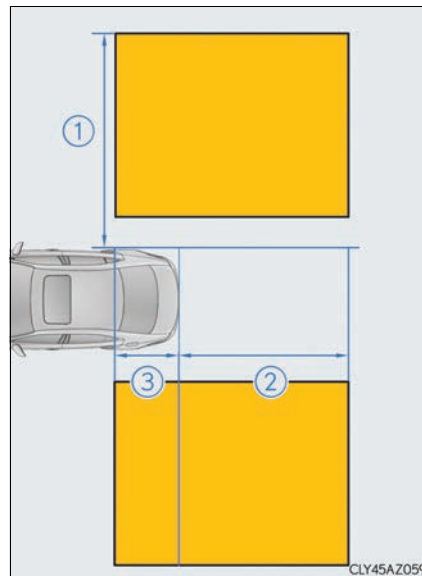

4

Driving

⚠ WARNING

■ Cautions regarding the use of the function

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The BSM function is a supplementary function which alerts the driver that a vehicle is in a blind spot of the outside rear view mirrors or is approaching rapidly from behind into a blind spot. Do not overly rely on the BSM function. As the function cannot judge if it is safe to change lanes, over reliance could lead to an accident resulting in death or serious injury.

As the system may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary.

■ The BSM function is operational when

The BSM function is operational when all of the following conditions are met:

- The BSM function is on.
- The shift lever is in a position other than R.
- The vehicle speed is greater than approximately 16 km/h (10 mph).

■ The BSM function will detect a vehicle when

The BSM function will detect a vehicle present in the detection area in the following situations:

- A vehicle in an adjacent lane overtakes your vehicle.
- You overtake a vehicle in an adjacent lane slowly.
- Another vehicle enters the detection area when it changes lanes.

■ Conditions under which the BSM function will not detect a vehicle

The BSM function is not designed to detect the following types of vehicles and/or objects:

- Small motorcycles, bicycles, pedestrians, etc.*
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects*
- Following vehicles that are in the same lane*
- Vehicles traveling 2 lanes away from your vehicle*
- Vehicles which are being overtaken rapidly by your vehicle*


*: Depending on the conditions, detection of a vehicle and/or object may occur.

■ Conditions under which the BSM function may not function correctly

- The BSM function may not detect vehicles correctly in the following situations:
 - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
 - When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
 - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
 - When multiple vehicles are approaching with only a small gap between each vehicle
 - When the distance between your vehicle and a following vehicle is short
 - When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
 - When the difference in speed between your vehicle and another vehicle is changing
 - When a vehicle enters a detection area traveling at about the same speed as your vehicle
 - As your vehicle starts from a stop, a vehicle remains in the detection area
 - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
 - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
 - When vehicle lanes are wide, or when driving on the edge of a lane, and the vehicle in an adjacent lane is far away from your vehicle
 - When towing a trailer (for South Africa with a towing package)
 - When items such as a bicycle carrier are installed on the rear of the vehicle
 - When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
 - Immediately after the BSM function is turned on
- Instances of the BSM function unnecessarily detecting a vehicle and/or object may increase in the following situations:
 - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
 - When the distance between your vehicle and a guardrail, wall, etc. that enters the detection area is short
 - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
 - When vehicle lanes are narrow, or when driving on the edge of a lane, and a vehicle traveling in a lane other than the adjacent lanes enters the detection area
 - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
 - When the tires are slipping or spinning
 - When the distance between your vehicle and a following vehicle is short
 - When a bicycle carrier or other accessory is installed to the rear of the vehicle
 - When towing a trailer (for South Africa with a towing package)

RCTA function

The RCTA function uses radar sensors to detect vehicles approaching from the right or left at the rear of the vehicle and alerts the driver of the presence of such vehicles by flashing the outside rear view mirror indicators and sounding a buzzer.

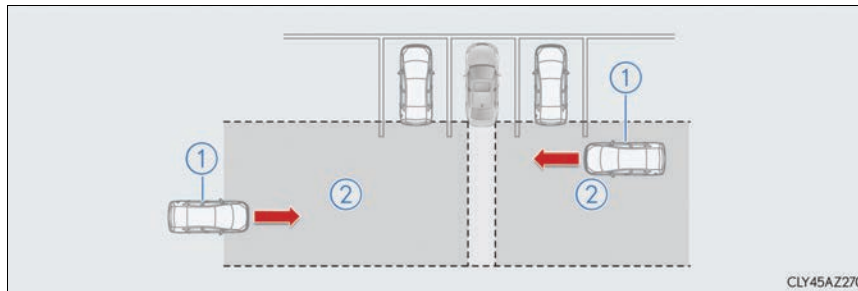

- ① Approaching vehicles
- ② Detection areas of approaching vehicles

■ RCTA icon display

When a vehicle approaching from the right or left at the rear of the vehicle is detected, the following will be displayed on the audio system screen.

Display	Content
	A vehicle is approaching from the left at the rear of the vehicle
	A vehicle is approaching from the right at the rear of the vehicle
	Vehicles are approaching from both sides of the vehicle
	The RCTA function is malfunctioning (→P. 341)

 WARNING


■ Cautions regarding the use of the function

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The RCTA function is only a supplementary function which alerts the driver that a vehicle is approaching from the right or left at the rear of the vehicle. As the RCTA function may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary. Over reliance on this function may lead to an accident resulting in death or serious injury.

RCTA function detection areas

The areas that vehicles can be detected in are outlined below.

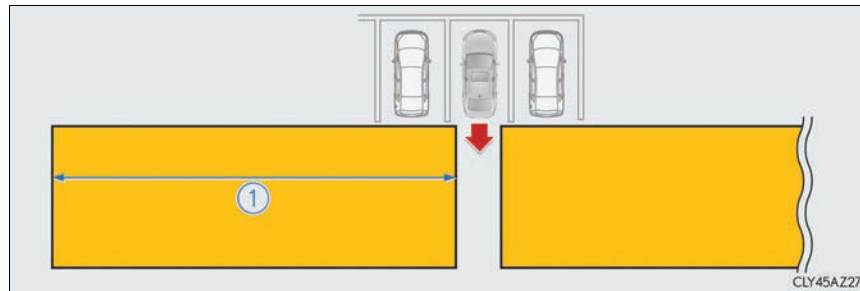

The buzzer can alert the driver of faster vehicles approaching from farther away.

Example:

Approaching vehicle	Speed	① Approximate alert distance
Fast	28 km/h (18 mph)	20 m (65 ft.)
Slow	8 km/h (5 mph)	5.5 m (18 ft.)

■ The RCTA function is operational when


The RCTA function operates when all of the following conditions are met:

- The BSM function is on.
- The shift lever is in R.
- The vehicle speed is less than approximately 8 km/h (5 mph).
- The approaching vehicle speed is between approximately 8 km/h (5 mph) and 28 km/h (18 mph).

■ Conditions under which the RCTA function will not detect a vehicle

The RCTA function is not designed to detect the following types of vehicles and/or objects:

- Vehicles approaching from directly behind
- Vehicles backing up in a parking space next to your vehicle
- Vehicles that the sensors cannot detect due to obstructions

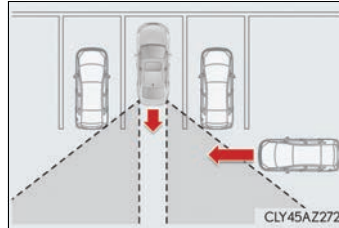


- Guardrails, walls, signs, parked vehicles and similar stationary objects *
- Small motorcycles, bicycles, pedestrians, etc. *
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle *


*: Depending on the conditions, detection of a vehicle and/or object may occur.

■ Conditions under which the RCTA function may not function correctly


- The RCTA function may not detect vehicles correctly in the following situations:
 - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
 - When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
 - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
 - When multiple vehicles are approaching with only a small gap between each vehicle
 - When a vehicle is approaching at high speed
 - When towing a trailer (for South Africa with a towing package)
 - When backing up on a slope with a sharp change in grade

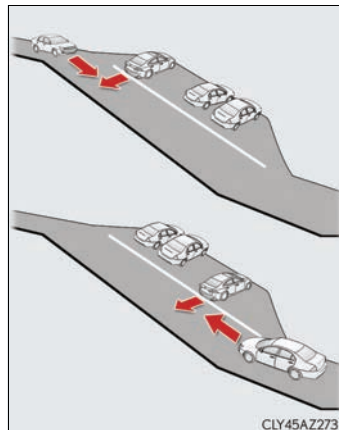

- When backing out of a shallow angle parking spot

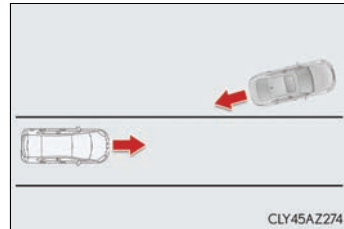


- When the sensors cannot detect a vehicle due to obstructions

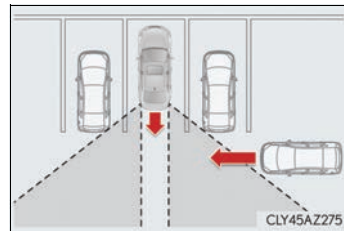

- Instances of the RCTA function unnecessarily detecting a vehicle and/or object may increase in the following situations:

- When a vehicle passes by the side of your vehicle
- When the parking space faces a street and vehicles are being driven on the street

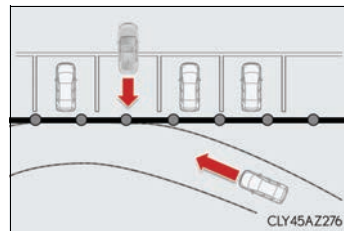


- When the distance between your vehicle and metal objects, such as a guardrail, wall, sign, or parked vehicle, which may reflect electrical waves toward the rear of the vehicle, is short

Driving mode select switch

The driving modes can be selected to suit driving condition.

► Vehicles without AVS

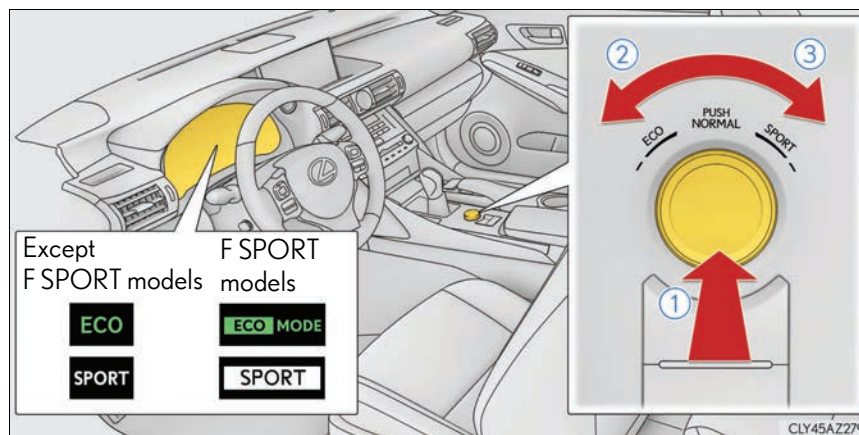

4

Driving

① Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

Press the switch to change the driving mode to normal mode when Eco drive mode or sport mode is selected.

② Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).


When not in Eco drive mode, if the driving mode select switch is turned to the left, the Eco drive mode indicator will come on.

③ Sport mode

Controls the transmission and engine to provide quick, powerful acceleration. This mode also changes the steering feel, making it suitable for when agile driving response is desired, such as when driving on roads with many curves.

When not in sport mode, if the driving mode select switch is turned to the right, the "SPORT" indicator will come on.

► Vehicles with AVS

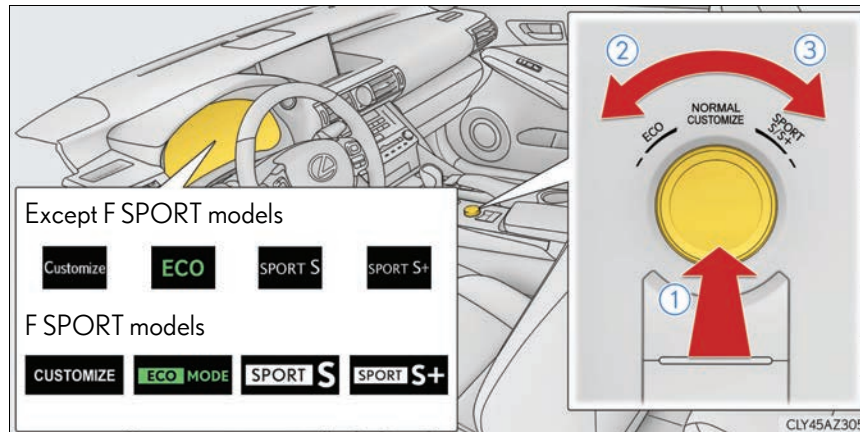

① Normal mode/Customized mode

Normal mode and customized mode are selected by pressing the driving mode select switch. Each time the switch is pressed, the driving mode changes between normal mode and customized mode. When customized mode is selected, the "Customize/CUSTOMIZE" indicator will be illuminated.

When Eco drive mode or sport mode is selected, pressing the switch changes the driving mode to normal mode.

- Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

- Customized mode

Allows you to drive with the following functions set to your preferred settings.

Customized mode settings can only be changed on the drive mode customization display of the audio system screen.

(Displaying the drive mode customization display: →P. 685)

Function	Setting
Powertrain	Normal
	Power
	Eco
Chassis	Normal
	Sport
Air conditioning system	Normal
	Eco

② Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When not in Eco drive mode, if the driving mode select switch is turned to the left, the Eco drive mode indicator will come on.

③ Sport mode

• SPORT S mode

Controls the transmission and engine to provide quick, powerful acceleration. This mode is suitable for when agile driving response is desired, such as when driving on roads with many curves.

When not in SPORT S mode, if the driving mode select switch is turned to the right, the "SPORT S" indicator will come on.

• SPORT S+ mode

Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to the transmission and engine. Suitable for sportier driving.

When in SPORT S mode, if the driving mode select switch is turned to the right, the "SPORT S+" indicator will come on.

■ Operation of the air conditioning system in Eco drive mode

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency (→P. 479). To improve air conditioning performance, adjust the fan speed or turn off Eco drive mode.

■ Automatic deactivation of sport mode and customized mode

If the engine switch is turned off after driving in sport mode or customized mode, the drive mode will be changed to normal mode.

■ Driving mode pop-up display (10.3-inch display only)

When the driving mode is changed, the selected driving mode will be temporarily displayed on the side display. (→P. 477)

Driving assist systems

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

◆ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

◆ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

◆ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces.

Provides cooperative control of the ABS, TRC, VSC and EPS.

Helps to maintain directional stability when swerving on slippery road surfaces by controlling steering performance.

◆ TRC (Traction Control)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

◆ Hill-start assist control

Helps to reduce the backward movement of the vehicle when starting on an uphill

◆ VGRS (Variable Gear Ratio Steering) (if equipped)

Adjusts the front wheel turning angle in accordance with the vehicle speed and steering wheel movement

◆ **EPS (Electric Power Steering)**

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel.

◆ **AVS (Adaptive Variable Suspension system) (if equipped)**

Controls the damping force of the shock absorber of each wheel according to the road and driving conditions, helping achieve a comfortable ride, excellent driveability and a high level of stability.

If SPORT S+ mode is selected using the driving mode select switch, the damping force will become more suitable for sporty driving. (→P. 354)

◆ **VDIM (Vehicle Dynamics Integrated Management)**

Provides integrated control of the ABS, brake assist, TRC, VSC, hill-start assist control, EPS and VGRS (if equipped) systems


Helps to maintain vehicle stability when swerving on slippery road surfaces by controlling the brakes, engine output, steering assist, and if equipped with VGRS, steering ratio

◆ **Emergency brake signal (if equipped)**

When the brakes are applied suddenly, the stop lights automatically flash to alert the vehicle behind.

When the TRC/VSC systems are operating


The slip indicator light will flash while the TRC/VSC systems are operating.

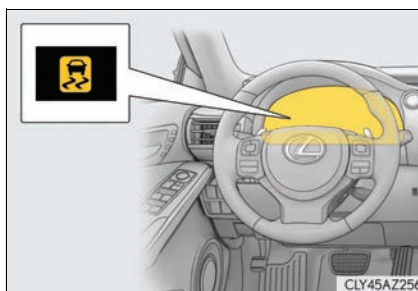

Disabling the TRC system

If the vehicle gets stuck in mud, dirt or snow, the TRC system may reduce power from the engine to the wheels. Pressing  or  to turn the system off may make it easier for you to rock the vehicle in order to free it.

- Vehicles without Stop & Start system ► Vehicles with Stop & Start system

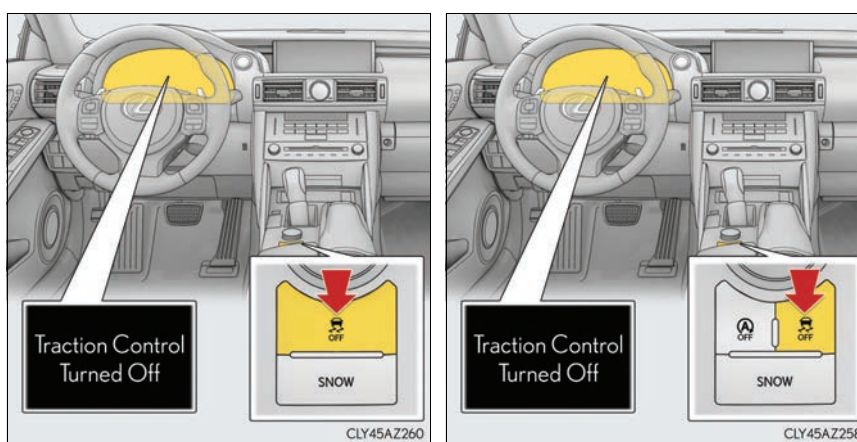

4

Driving

To turn the TRC system off, quickly press and release  or .

The "Traction Control Turned Off" will be shown on the multi-information display.

Press  or  again to turn the system back on.

■ Turning off both TRC and VSC systems

To turn the TRC and VSC systems off, press and hold  or  for more than 3 seconds while the vehicle is stopped.

The VSC OFF indicator light will come on and the "Traction Control Turned Off" will be shown on the multi-information display.*

Press  or  again to turn the system back on.

*: On vehicles with pre-collision system, pre-collision brake assist and pre-collision braking will also be disabled. The pre-collision system warning light will come on and the message will be shown on the multi-information display. (→P. 278)

■ When the message is displayed on the multi-information display showing that TRC has been disabled even if the VSC OFF switch has not been pressed

TRC cannot be operated. Contact your Lexus dealer.

■ VGRS is disabled when

VGRS may stop operating in the following situations.

In this event, the steering wheel may move from its straight forward position, but it will return when the system restarts.

- When the steering wheel is operated for an extended period of time while the vehicle is stopped or is moving very slowly
- When the steering wheel has been held fully to the left or right

The center position of the steering wheel may change when VGRS is disabled. However, the position will return to normal after VGRS is reactivated.

■ Operating conditions of hill-start assist control

When the following four conditions are met, the hill-start assist control will operate:

- The shift lever is in a position other than P or N (when starting off forward/backward on an upward incline)
- The vehicle is stopped
- The accelerator pedal is not depressed
- The parking brake is not engaged

■ Automatic system cancelation of hill-start assist control

The hill-start assist control will turn off in any of the following situations:

- The shift lever is shifted to P or N
- The accelerator pedal is depressed
- The parking brake is engaged
- Approximately 2 seconds elapse after the brake pedal is released

■ When the battery is disconnected

The steering wheel may move from its straight forward position, but this will be corrected automatically when driving.

■ Sounds and vibrations caused by the ABS, brake assist, VSC, TRC, hill-start assist control and VGRS systems

- A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
 - Vibrations may be felt through the vehicle body and steering.
 - A motor sound may be heard also after the vehicle comes to a stop.
 - The brake pedal may pulsate slightly after the ABS is activated.
 - The brake pedal may move down slightly after the ABS is activated.

■ EPS and VGRS operation sound

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Automatic reactivation of TRC and VSC systems

After turning the TRC and VSC systems off, the systems will be automatically re-enabled in the following situations:

- When the engine switch is turned off
- If only the TRC system is turned off, the TRC will turn on when vehicle speed increases. If both the TRC and VSC systems are turned off, automatic re-enabling will not occur when vehicle speed increases.

■ Reduced effectiveness of the EPS system

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the engine off. The EPS system should return to normal within 10 minutes.

■ Operating conditions of emergency brake signal

When the following three conditions are met, the emergency brake signal will operate:

- The emergency flashers are off
- Actual vehicle speed is over 55 km/h (35 mph)
- The brake pedal is depressed in a manner that cause the system to judge from the vehicle deceleration that this is a sudden braking operation

■ Automatic system cancelation of emergency brake signal

The emergency brake signal will turn off in any of the following situations:

- The emergency flashers are turned on
- The brake pedal is released
- The system judges from the vehicle deceleration that is not a sudden braking operation

**WARNING**

■ **The ABS does not operate effectively when**

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on wet or slick roads.

■ **Stopping distance when the ABS is operating may exceed that of normal conditions**

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

■ **TRC/VSC may not operate effectively when**

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC/VSC system is operating.

Drive the vehicle carefully in conditions where stability and power may be lost.

■ **Hill-start assist control does not operate effectively when**

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on steep inclines and roads covered with ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline, as doing so may lead to an accident.

■ **When the VSC is activated**

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

■ **When the TRC/VSC systems are turned off**

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help ensure vehicle stability and driving force, do not turn the TRC/VSC systems off unless necessary.

■ **Replacing tires**

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS, TRC and VSC systems will not function correctly if different tires are installed on the vehicle.

Contact your Lexus dealer for further information when replacing tires or wheels.

■ **Handling of tires and the suspension**

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

Preparation for winter

- Use fluids that are appropriate to the prevailing outside temperatures.
 - Engine oil
 - Engine coolant
 - Washer fluid
 - Have a service technician inspect the condition of the battery.
 - Have the vehicle fitted with four snow tires or purchase a set of tire chains for the rear tires.*
 - Ensure that all tires are the specified size and brand, and that chains match the size of the tires.
- *: Tire chains cannot be mounted on the 18-inch tires.

Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

When driving the vehicle

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

When parking the vehicle

- Park the vehicle and move the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is parked without setting the parking brake, make sure to block the wheels.

Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.

- If the vehicle is parked without setting the parking brake, confirm that the shift lever cannot be moved out of P*.

*: The shift lever will be locked if it is attempted to be shifted from P to any other position without depressing the brake pedal. If the shift lever can be shifted from P, there may be a problem with the shift lock system. Have the vehicle inspected by your Lexus dealer immediately.


Selecting tire chains

- Except vehicles with 18-inch tires

Use the correct tire chain size when mounting the tire chains.

Chain size is regulated for each tire size.

- ① Side chain
(3 mm [0.12 in.] in diameter)
- ② Cross chain
(4 mm [0.16 in.] in diameter)

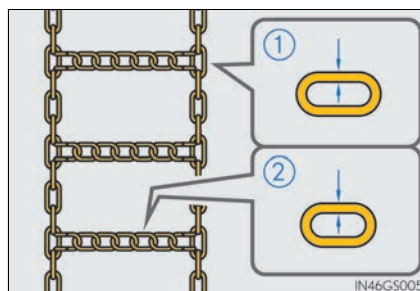

- Vehicles with 18-inch tires

Tire chains cannot be mounted on the 18-inch tires.

Snow tires should be used instead.

Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

■ Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the rear tires. Do not install tire chains on the front tires.
- Install tire chains on rear tires as tightly as possible. Retighten chains after driving 0.5 — 1.0 km (1/4 — 1/2 mile).
- Install tire chains following the instructions provided with the tire chains.



WARNING

■ Driving with snow tires

Observe the following precautions to reduce the risk of accidents.

Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being used.
- Use snow tires on all, not just some wheels.

■ Driving with tire chains (except vehicles with 18-inch tires)

Observe the following precautions to reduce the risk of accidents.

Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LDA (Lane Departure Alert with steering control) system. (if equipped)



NOTICE

■ Repairing or replacing snow tires

Request repairs or replacement of snow tires from Lexus dealers or legitimate tire retailers.

This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

■ Fitting tire chains (except vehicles with 18-inch tires)

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

Eco-friendly driving tips

For improved fuel economy and reduced CO₂ emissions, pay attention to the following points:

◆ Using Eco drive mode

When using Eco drive mode, the torque corresponding to the accelerator pedal depression amount can be generated more smoothly than it is in normal conditions. In addition, the operation of the air conditioning system (heating/cooling) will be minimized, improving the fuel economy. (→P. 353)

◆ Use of Eco Driving Indicator

The Eco-friendly driving is possible by keeping the bar display of the Eco Driving Indicator shown in the multi-information display within the Zone of Eco driving. (→P. 131)

◆ Accelerator pedal/brake pedal operation

Drive your vehicle smoothly. Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will help reduce excessive fuel consumption.

◆ When braking

Observe conditions in front of and around the vehicle, and estimate your stopping position. Release the accelerator pedal early and continue coasting. Use the brake pedal to adjust your stopping position. Make sure to operate the brake pedal gently.

◆ Delays

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel economy. Check traffic reports before leaving and avoid delays as much as possible.

◆ Highway driving

Control and maintain the vehicle at a constant speed. Before stopping at a toll booth or similar, allow plenty of time to release the accelerator pedal and gently apply the brakes.

◆ Air conditioning

Use the air conditioning only when necessary. Doing so can help reduce excessive fuel consumption.

In summer: When the ambient temperature is high, use the recirculated air mode. Doing so will help to reduce the burden on the air conditioning system and reduce fuel consumption as well.

In winter: Turn the A/C switch on only when both heating and dehumidifying are needed, and if only heating is needed, turn the A/C switch off. Turning the A/C switch on when unnecessary leads to excessive fuel consumption.

◆ Performing idling stops

- Avoid unnecessary idling. Stop the engine when parking the vehicle to reduce excessive fuel consumption, even if it is only for a short period of time.
- Except in severe environment, such as when the outside temperature is extremely low, warming up the engine before driving is unnecessary. Rather than idling, it is more efficient to drive the vehicle gently to warm up each part while avoiding increasing the engine revolutions unnecessarily and accelerating or decelerating suddenly.
- Using the Stop & Start system (if equipped) will help improve fuel economy. (→P. 305)
- IS300: Idling before stopping the engine (→P. 222) is performed in order to maintain vehicle functions and is not considered unnecessary idling.

◆ Luggage

Carrying heavy luggage will lead to poor fuel economy. Avoid carrying unnecessary luggage. Installing a large roof rack will also cause poor fuel economy.

◆ **Regular maintenance**

- Make sure to check the tire inflation pressure frequently. Improper tire inflation pressure can cause poor fuel economy. Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel economy. Use tires that are appropriate for the season and road conditions.
- Use oil and fluid of the recommended quality, which affect fuel consumption and the life of the vehicle. Also, check oil and fluid periodically.
(→P. 525)

5-1. Basic Operations

Lexus Display Audio system.....	372
Steering wheel audio switches.....	378
USB/AUX Ports.....	379

5-2. Setup

Setup menu	382
General settings.....	383
Voice settings.....	386
Display settings.....	387

5-3. Using the audio system

Selecting the audio source.....	389
Optimal use of the audio system.....	390
Audio settings	391
Audio menu screen operation.....	400

5-4. Using the radio

Radio operation.....	404
----------------------	-----

5-5. Playing an audio CD and MP3/WMA/AAC discs

Audio CD/DVD player operation.....	408
------------------------------------	-----

5-6. Playing a video CD

Video CD operation	413
--------------------------	-----

Lexus Display Audio system

5


5-7. Playing a DVD	
DVD video operation.....	415
5-8. Using an external device	
Listening to an iPod.....	420
Using USB memory device.....	424
Using the AUX port	429
5-9. Connecting Bluetooth®	
Steps for using Bluetooth® devices	430
Registering a Bluetooth® device.....	432
Selecting a Bluetooth® device.....	433
Connecting a Bluetooth® audio player	434
Connecting a Bluetooth® phone	435
Displaying a Bluetooth® device details	436
Detailed Bluetooth® settings.....	437
5-10. Bluetooth® Audio	
Listening to Bluetooth® Audio.....	438
5-11. Bluetooth® Phone	
Using a Bluetooth® Phone.....	439
Making a call.....	441
Receiving a call	444
Speaking on the phone	445
Using the steering wheel switches.....	447
Bluetooth® phone settings	448
5-12. Phonebook	
Contact settings	450
5-13. Bluetooth®	
What to do if... (Troubleshooting).....	453
Bluetooth®	455
5-14. Other function	
"Information" screen.....	463
MirrorLink™	464
USB photo	468
Speech command system.....	470

Lexus Display Audio system*

Use the following buttons to start listening to the audio system.

Lexus Display Audio operation buttons

The position and shapes of the buttons may differ slightly between right-hand drive vehicles and left-hand drive vehicles.

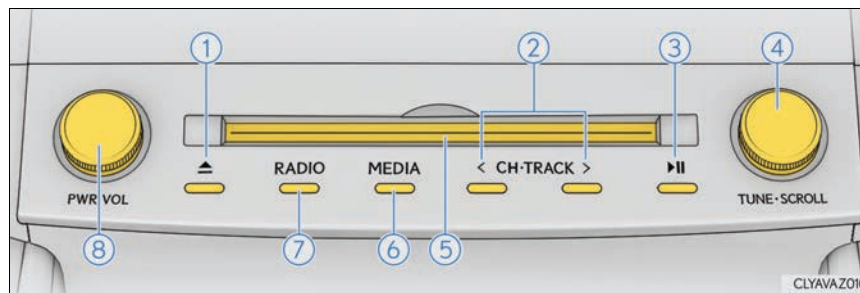

- ① Eject a disc.
- ② Select preset radio stations, or access a desired track or file.
- ③ Except radio and A/V mode: Pause or resume playing a track or file.
Radio and A/V mode: Turn mute on/off.
- ④ "TUNE • SCROLL" knob
Select a radio station band, track or file.
- ⑤ Disc slot
- ⑥ Display the media top screen.
- ⑦ Display the radio top screen.
- ⑧ "PWR • VOL" knob
Press to turn the audio system on/off, and turn to adjust the volume.

*: If equipped

■ “MENU” screen

To display the “MENU” screen, press the “MENU” button on the controller unit.




Button	Function
“Radio”	Display the radio top screen (→P. 404)
“Media”	Display the media top screen (→P. 408, 413, 415, 420, 424, 429, 438)
“Climate”	Display the air conditioning control screen (→P. 479)
“Phone” (“Telephone”)	Display the phone top screen (→P. 439)
“Info”	Display the “Information” screen (→P. 463)
“Setup”	Display the “Setup” screen (→P. 382)
“Display”	Display the display settings screen (→P. 387)

Lexus Display Audio controller

By using the Lexus Display Audio controller, you can control the audio system, hands-free system, etc.

- ① Display the "Source" screen or audio top screen (→P. 389)
- ② Display the "MENU" screen (→P. 373)
- ③ Back button
Display the previous screen
- ④ Turn or move the controller to select a function and number.

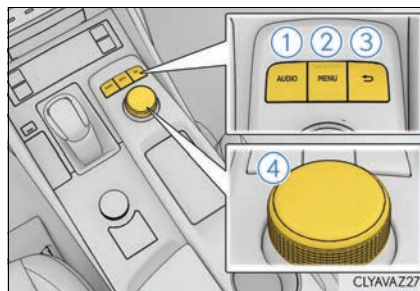


Move the controller to display the left or right side of the screen.

Push the controller to enter the selected function and number.

■ Using the Lexus Display Audio controller


- ① Select: Turn or move the controller.
- ② Enter: Push the controller.

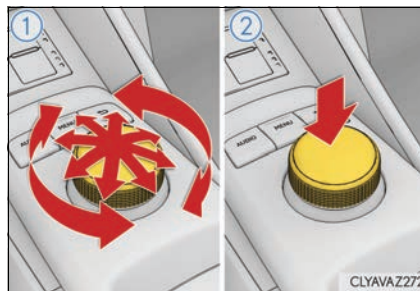

■ Basic screen operation

When a list is displayed, use the appropriate button to scroll through the list.

- ① Select the list by turning the controller.
- ② Return to the previous screen.
- ③ Indicator turns on when you can move the controller left to view additional screen text.
- ④ Indicator turns on when you can move the controller right to view additional screen text.

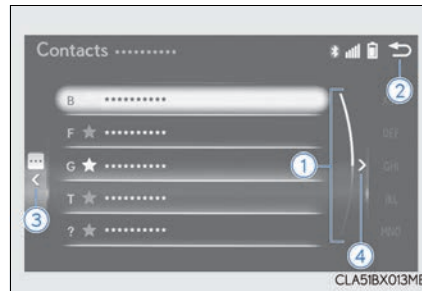


Inputting letters and numbers

■ Input mode

Letters and numbers are inputted via the screen.


- ① Turn the controller to select the desired character and press the controller to input the character.
- ② When this indicator is shown, you can change input fields by moving the controller forward.
- ③ When this indicator is shown, you can change character types by moving the controller to the right and then selecting the desired character type.
- ④ Select to erase characters one by one. Select and hold to erase all characters.
- ⑤ Select to complete data input.

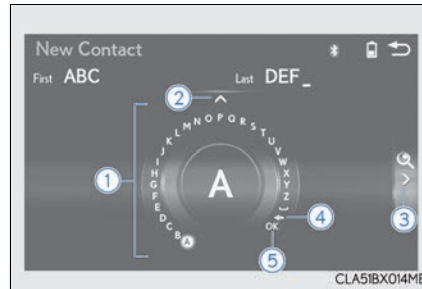

■ Input field mode

When in the input field you can move the cursor to the desired position.

- ① Turn the controller to move the cursor left or right.
- ② When this indicator is shown, you can move the cursor to the right input field by moving the controller to the right.
- ③ When this indicator is shown, you can move the cursor to the left input field by moving the controller to the left.
- ④ When this indicator is shown, you can change to input mode by moving the controller backward.

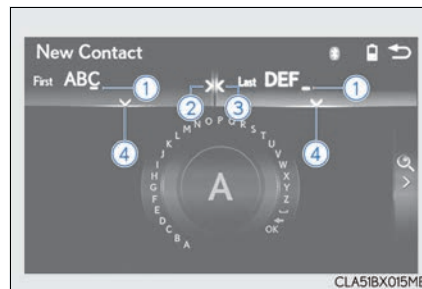

■ When using the screen

- Under extremely cold conditions, the Lexus Display Audio controller may react slowly.
- If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
- The screen may seem dark and hard to see when viewed through sunglasses. Change your angle of viewing, adjust the display on the "Display" screen (→P. 387) or remove your sunglasses.

■ Using cellular phones

Interference may be heard through the audio system's speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.

■ Trademarks and registered trademarks

The company names and product names regarding the audio system are the trademarks or registered trademarks of their respective companies.



WARNING

■ Using the Lexus Display Audio controller

Be careful when touching the Lexus Display Audio controller in extreme temperatures as it may become very hot or cold due to the temperature inside the vehicle.



NOTICE

■ To prevent Lexus Display Audio controller malfunction

- Do not allow the Lexus Display Audio controller to come into contact with food, liquid, stickers or lit cigarettes as doing so may cause it to change color, emit a strange odor or stop functioning.
- Do not subject the Lexus Display Audio controller to excessive pressure or strong impact as the controller may bend or break off.

■ To prevent battery discharge

Do not leave the audio system on longer than necessary when the engine is off.

■ To avoid damaging the audio system

Take care not to spill drinks or other fluids on the audio system.

Steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.

Operation may differ depending on the type of audio system or navigation system. For details, refer to the manual provided with the audio system or navigation system.

Depending on the type of audio source, certain functions may not be available.

Operating the audio system using the steering wheel switches

① Volume switch

- Increases/decreases volume
- Press and hold: Continuously increases/decreases volume

② Radio mode:


- Press: Select a radio station
- Press and hold: Continuously seek up/down

CD, DVD, MP3/WMA/AAC disc, Bluetooth[®], iPod or USB mode:

- Press: Select a track/file/video
- Press and hold: Quickly move up/down through tracks/files/videos. (MP3/WMA/AAC disc or USB)

③ "MODE" switch

- Turns the power on, selects audio source
- Press and hold this switch to mute or pause the current operation. To cancel the mute or pause, press and hold.

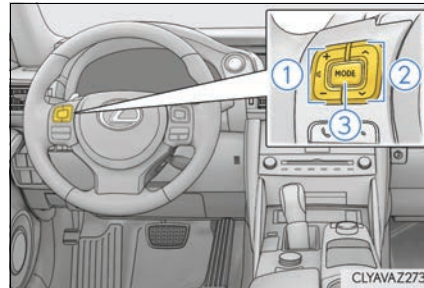

WARNING

 To reduce the risk of an accident

Exercise care when operating the audio switches on the steering wheel.

USB/AUX Ports


Connect an iPod, USB memory device or portable audio player to the USB/AUX port as indicated below. Select "iPod", "USB", "AUX" or "A/V" on the audio source selection screen and the device can be operated via Lexus Display Audio system.

Connecting using the USB/AUX port

■ iPod

Open the cover and connect an iPod using an iPod cable.

Turn on the power of the iPod if it is not turned on.

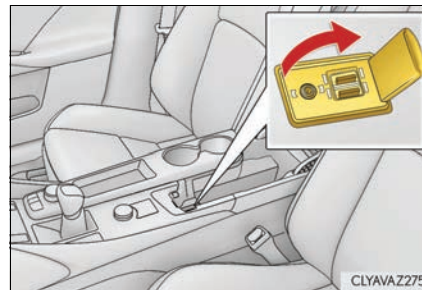

■ USB memory

Open the cover and connect the USB memory device.

Turn on the power, if applicable, of the USB memory device if it is not turned on.

■ Portable audio player

Open the cover and connect the portable audio player.

Turn on the power of the portable audio player if it is not turned on.


Using a 4-pole AUX cable

To view a video on an iPod video or VTR, it is necessary to use a 4-pole AUX cable to connect the portable audio device.

When connecting a portable audio device to the AUX port, use a 4-pole AUX cable with a plug that matches the exact layout shown in the illustration.

- ① Connected device (portable audio device, etc.)
- ② Left audio
- ③ Right audio
- ④ Ground
- ⑤ Video

When using an iPod video, a cable that has a 4-pole AUX plug and a USB connector is necessary. Connect the plug and connector to the AUX and USB ports.

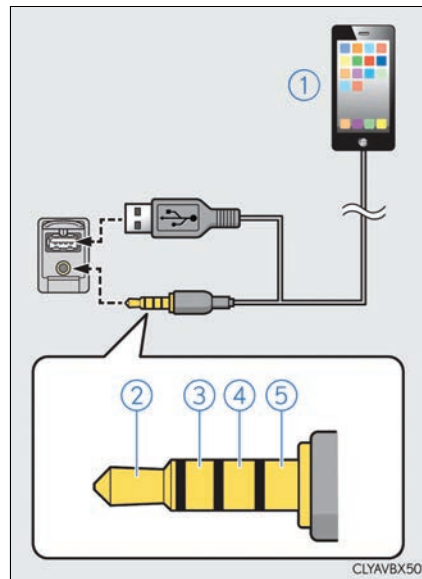

 When using a 4-pole AUX cable

If a 4-pole AUX cable with a different layout is used, audio and/or video may not be output properly.

**WARNING** **While driving**

Do not connect a device or operate the device controls.
Failure to do so may lead to an accident.

**NOTICE** **To prevent damage to the device or its terminals**

Depending on the size and shape of the device that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the device or the terminal, etc.

Setup menu

The Lexus Display Audio system can be adjusted to the desired settings.

Display "Setup" screen

Go to "Setup": "MENU" button → "Setup"

- ① Change the settings for operation sounds, screen animation, etc. (→P. 383)
- ② Adjust the settings for voice guidance volume. (→P. 386)
- ③ Change the settings for registering, removing, connecting and disconnecting Bluetooth® devices. (→P. 431)
- ④ Change the settings for FM radio, iPod, etc. (→P. 391)
- ⑤ Change the settings for vehicle customization. (→P. 679)
- ⑥ Change the settings for phone sound, phonebook, etc. (→P. 448)




General settings

Settings are available for adjusting the operation sounds, screen animation, etc.

Screen for general settings

Go to “General Settings”: “MENU” button → “Setup” → “General”

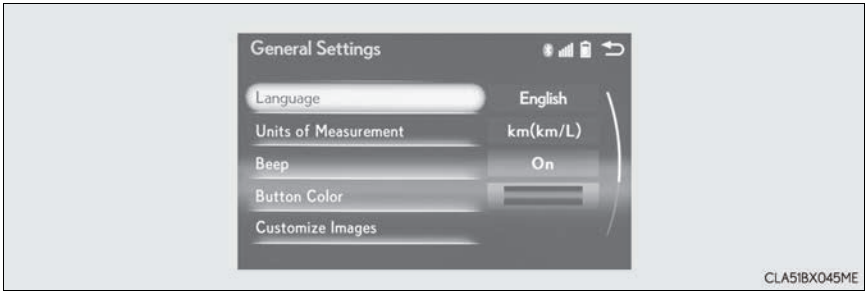

Button	Function
“Language”*	Change language. The selectable languages may differ depending on the model or region.
“Units of Measurement”	Change the distance unit.
“Beep”	Set the beep sound on/off.
“Button Color”	Change the button color.
“Customize Images”	Change the startup image and screen off image. (→P. 384)
“Animation”	Set the animation effect on/off.
“Delete Personal Data”	Delete personal data (→P. 385)
“Software Update”	Update program versions. For details, contact your Lexus dealer.
“Software Information”	Display the open source license.

*: If equipped

Customizing images

- 1 Go to "Customize Images": "MENU" button → "Setup" → "General" → "Customize Images"
- 2 Select "Set Images" and then select the desired image.
 - ① Set as startup image.
 - ② Set as screen off image.
 - ③ Set as startup image and screen off image.



■ Adding an image

- 1 Connect a USB memory device. (→P. 429)
- 2 Select "Copy from USB" on the "Customize Images" screen and then select the desired image.
- 3 Move the controller to the left and then select "Copy".
Up to 10 images can be downloaded.

■ Deleting images

Select "Delete Images" on the "Customize Images" screen and then select the desired images.

■ USB memory

When saving the images to a USB memory device, name the folder that the images are saved to "Image".

● Compatible device formats

The following device format can be used:

- The image's file format must be JPEG
- USB communication format: USB2.0 FS (480 Mbps)
- File system format: FAT16/32 (Windows)
- Correspondence class: Mass storage class

● JPEG file compatibility

Compatible image size: Maximum 10 MB



NOTICE

■ To prevent damage to the USB memory device or its terminals
→P. 428

Deleting personal data

- 1 Go to "Delete Personal Data": "MENU" button → "Setup" → "General" → "Delete Personal Data"

- 2 Select "Delete".

Check carefully beforehand, as data cannot be retrieved once deleted.

The following personal data will be deleted or changed to its default settings.


- Phonebook data
- Voice tag
- Call history data
- Favorite data
- Bluetooth® devices data
- Phone sound settings
- Detailed Bluetooth® settings
- Audio/video setting
- Customized image data
- FM info setting
- Software update history
- Software update detail information
- Phone display setting
- Contact/call history setting

Voice settings

You can adjust the guidance volume setting.

Go to "Voice Settings": "MENU" button → "Setup" → "Voice"

- ① Adjust the voice guidance volume setting.

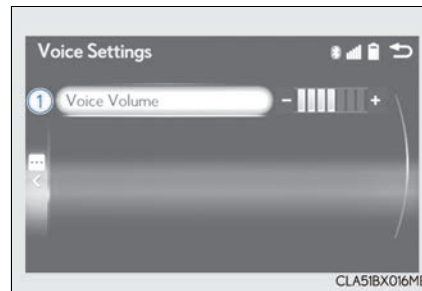

■ Return to the default settings

Move the controller to the left and select "Default".


Display settings

Settings are available for adjusting the contrast and brightness of the screen. The display can also be turned off.

Screen for display settings

Go to "Display": "MENU" button → "Display"

- ① Turn off screen.
- ② Adjust screen quality.
- ③ Adjust screen quality of the rear view monitor camera.
- ④ Change to day mode.

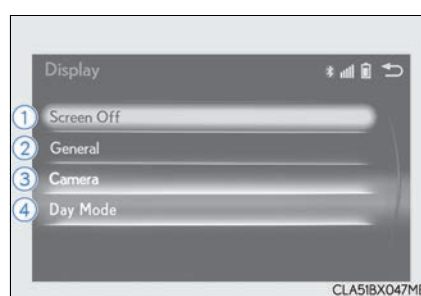

Screen off

This setting turns the screen off. To turn it on, press any button such as the "AUDIO" button or "MENU" button.

If a screen off image has been set, the set image will be displayed.

Day mode

When the headlights are turned on, the screen dims.

However, the screen can be switched to day mode by selecting "Day Mode".

The screen will stay in day mode when the headlights are turned on until "Day Mode" is selected again.

Adjusting the screen quality

- 1** Select "General" or "Camera" on the "Display" screen or select "Display" on audio menu screen. (→P. 400)
- 2** Adjust the display as desired by turning the controller clockwise (+) or counterclockwise (-).

To select "Contrast", "Brightness", "Color" or "Tone", move the controller to the left. ("Color" and "Tone" are available when "Display" on each audio menu screen or the audio settings screen for each audio source is selected.)

■ Changing the sample image (when "General" is selected)

Move the controller to the right and select the desired sample image.

Selecting the audio source

Switching between audio sources, such as the radio and CD, is explained in this section.

Changing audio source

- 1 Press the "AUDIO" button to display the "Source" screen.
If the "Source" screen is not displayed, press the button again.
- 2 Select the desired audio source.
The audio source can be selected by pressing the "RADIO" or "MEDIA" button.

Using the steering wheel switches to change audio sources

Press the "MODE" switch when the audio system is turned on. The audio source changes each time the "MODE" switch is pressed.

■ Rearranging the list

The listing order of the source list can be rearranged.

- 1 Move the controller to the left while on the "Source" screen.
- 2 Select "Audio Source Select".
- 3 Select an item you wish to move and then select where to move the item to.

Optimal use of the audio system

On the “Sound Settings” screen, sound quality (Treble/Mid/Bass), volume balance and DSP settings can be adjusted.


How to adjust the sound settings and sound quality

Go to “Sound Settings”: Move the controller to the left on the audio top screen → “Sound Settings”

To change between the sound setting screen and DSP setting screen, move the controller to the right then select the desired screen.


► “Sound Settings”

- ① ② ③ Adjusts the treble, mid or bass.
- ④ Adjusts the front/rear audio balance.
- ⑤ Adjusts the left/right audio balance.

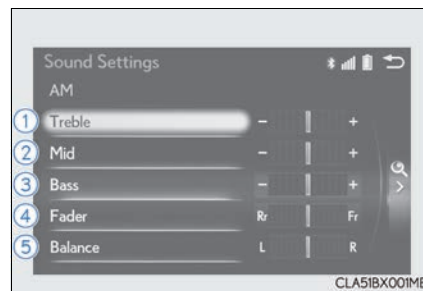

► “DSP”

- ① Sets the automatic sound leveliser (ASL) on/off
- ② Sets the surround function on/off

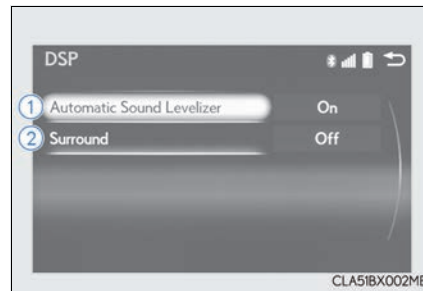

■ The sound quality level is adjusted individually

The treble, mid and bass levels can be adjusted for each audio mode separately.

■ About Automatic Sound Leveliser (ASL)


ASL automatically adjusts the volume and tone quality according to the vehicle speed.

Audio settings

Screen for audio settings

Go to "Audio Settings": "MENU" button → "Setup" → "Audio"

► Type A

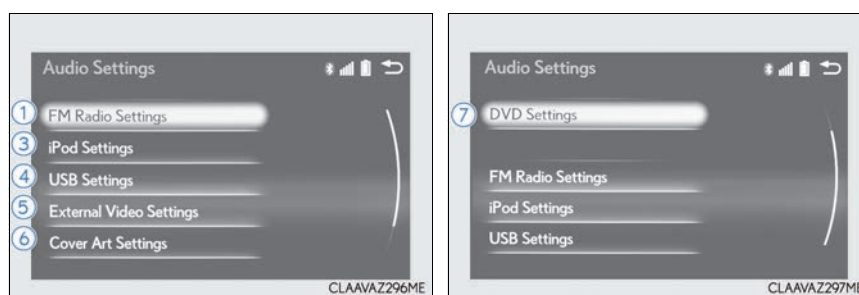

- ① Change FM radio settings (→P. 393)
- ③ Change iPod settings (→P. 395)
- ④ Change USB settings (→P. 395)
- ⑤ Change external video settings (→P. 396)
- ⑥ Change the cover art settings (→P. 396)
- ⑦ Change DVD settings (if equipped) (→P. 397)

► Type B




- ① Change FM radio settings (→P. 393)
- ② Change DAB settings (if equipped) (→P. 394)
- ③ Change iPod settings (→P. 395)
- ④ Change USB settings (→P. 395)
- ⑤ Change external video settings (→P. 396)
- ⑥ Change the cover art settings (→P. 396)
- ⑦ Change DVD settings (if equipped) (→P. 397)


Changing FM radio settings

To display the radio settings screen in a different way, select “FM Radio Settings” on the audio menu screen. (→P. 400)

► Type A

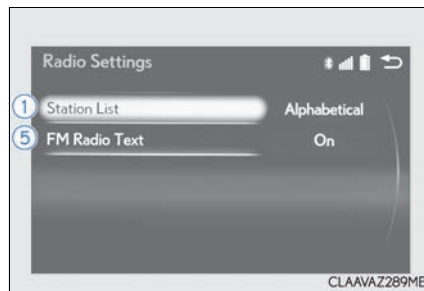

► Type B

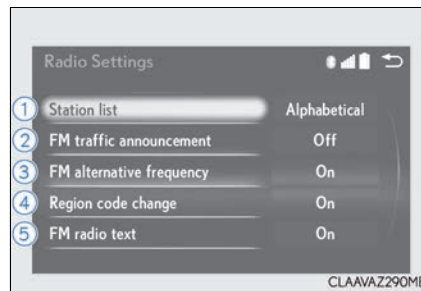

- ① Change the order of the station list
- ② Select to set the traffic announcement interrupt operation on/off (if equipped)
When traffic announcement is set to on, the radio will begin seeking a TP station. (→P. 407)
- ③ Select to set the alternative frequency network following operation on/off (if equipped)
When alternative frequency is set to on, a station providing good reception is automatically selected if current reception worsens.
- ④ Select to set the region code change operation on/off (if equipped)
When region code change operation is set to on, programs will switch over to a broadcasting station within the same local program network.
- ⑤ Select to set the FM Radio text feature on/off

Changing DAB settings (if equipped)

To display the DAB settings screen in a different way, select "DAB Settings" on the audio menu screen. (→P. 400)

- ① Update the DAB station list

- ② Select to set the L-band on/off

When set to off, the physical channel range for tune operations is limited to Band III except preset operations.

When set to on, the physical channel range for tune operations is Band III and L-band.


- ③ Select to set traffic announcement operation on/off

When traffic announcement is set to on, the tuner will automatically seek a station that regularly broadcasts traffic information and the station will broadcast when the traffic information program starts.

- ④ Select to set alternative frequency net work following operation on/off

When alternative frequency is set to on, a station providing good reception is automatically selected if current reception worsens.

- ⑤ Select to set the DAB radio text feature on/off

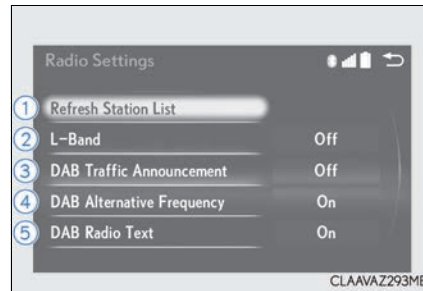


Changing iPod settings

To display the iPod settings screen in a different way, select “iPod Settings” on the audio menu screen. (→P. 400)

- ① Change the screen size (video mode)*
- ② Change the cover art settings (→P. 396)
- ③ Adjust the screen quality (video mode) (→P. 387)*
- ④ Change video sound input port*

*: If equipped

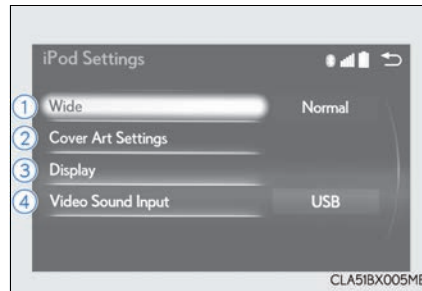


Changing USB settings

To display the USB settings screen in a different way, select “USB Settings” on the audio menu screen. (→P. 400)

- ① Change the screen size (video mode)*
- ② Change the cover art settings (→P. 396)
- ③ Adjust the screen quality (video mode) (→P. 387)*


*: If equipped

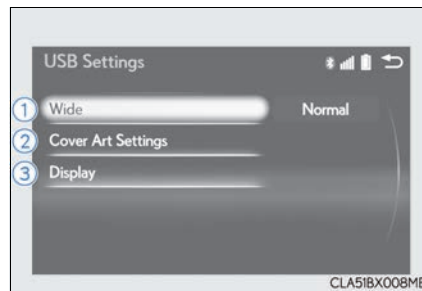

Changing external video settings

To display the external video settings screen in a different way, select “External Video Settings” on the audio menu screen. (→P. 400)


- ① Change the screen size
- ② Change the video signal
- ③ Adjust the screen quality (→P. 387)

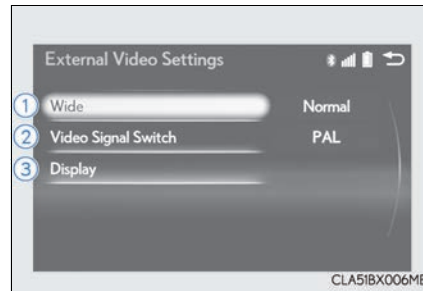

Changing the cover art settings

To display the cover art settings screen in a different way, select “Cover Art Settings” on the audio menu screen. (→P. 400)

- ① Select to set the cover art display of USB mode on/off.
- ② Select to set the cover art display of iPod mode on/off.

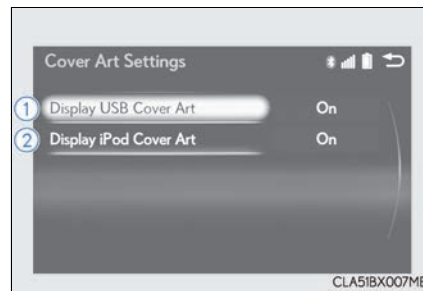

Changing the initial DVD settings (if equipped)

To display the DVD settings screen in a different way, select "DVD Settings" on the audio menu screen. (→P. 400)


- ① Change the initial audio language
- ② Change the initial subtitle language
- ③ Change the initial menu language
- ④ Select to set the angle mark on/off
- ⑤ Change the parental lock (→P. 397)
- ⑥ Select to set auto start on/off



Discs that are inserted while the vehicle is in motion will automatically start playing.

- ⑦ Change the sound dynamic range

The difference between the lowest volume and the highest volume can be adjusted.

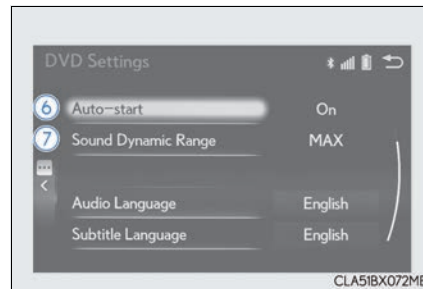

■ Setting parental lock

- ① Select "Parental Lock" on the "DVD Settings" screen.
- ② Input the 4-digit personal code on the "Key Code" screen.
If you enter the wrong numbers, select X to delete numbers.
- ③ Select a parental level (1 to 8).

■ Entering a language code

If you select "Other" on the "Audio Language" screen, "Subtitle Language" screen or "Menu Language" screen, you can select a language by entering the 4-digit language code if that language is available.

Input the 4-digit language code and then select "OK".

● Language codes

Code	Language	Code	Language	Code	Language
0514	English	0207	Bulgarian	0712	Galician
0618	French	0208	Bihari	0714	Guarani
0405	German	0209	Bislama	0721	Gujarati
0920	Italian	0214	Bengali, Bangla	0801	Hausa
0519	Spanish	0215	Tibetan	0809	Hindi
2608	Chinese	0218	Breton	0818	Croatian
1412	Dutch	0301	Catalan	0821	Hungarian
1620	Portuguese	0315	Corsican	0825	Armenian
1922	Swedish	0319	Czech	0901	Interlingua
1821	Russian	0325	Welsh	0905	Interlingue
1115	Korean	0401	Danish	0911	Inupiak
0512	Greek	0426	Bhutani	0914	Indonesian
0101	Afar	0515	Esperanto	0919	Icelandic
0102	Abkhazian	0520	Estonian	0923	Hebrew
0106	Afrikaans	0521	Basque	1001	Japanese
0113	Amharic	0601	Persian	1009	Yiddish
0118	Arabic	0609	Finnish	1023	Javanese
0119	Assamese	0610	Fiji	1101	Georgian
0125	Aymara	0615	Faroese	1111	Kazakh
0126	Azerbaijani	0625	Frisian	1112	Greenlandic
0201	Bashkir	0701	Irish	1113	Cambodian
0205	Byelorussian	0704	Scottish-Gaelic	1114	Kannada
1119	Kashmiri	1415	Norwegian	1914	Shona
1121	Kurdish	1503	Occitan	1915	Somali
1125	Kirghiz	1513	(Afan) Oromo	1917	Albanian
1201	Latin	1518	Oriya	1918	Serbian

Code	Language	Code	Language	Code	Language
1214	Lingala	1601	Panjabi	1919	Siswati
1215	Laothian	1612	Polish	1920	Sesotho
1220	Lithuanian	1619	Pashto, Pushto	1921	Sundanese
1222	Latvian, Lettish	1721	Quechua	1923	Swahili
1307	Malagasy	1813	Rhaeto- Romance	2001	Tamil
1309	Maori	1814	Kirundi	2005	Telugu
1311	Macedonian	1815	Romanian	2007	Tajik
1312	Malayalam	1823	Kinyarwanda	2008	Thai
1314	Mongolian	1901	Sanskrit	2009	Tigrinya
1315	Moldavian	1904	Sindhi	2011	Turkmen
1318	Marathi	1907	Sango	2012	Tagalog
1319	Malay	1908	Serbo- Croatian	2014	Setswana
1320	Maltese	1909	Sinhalese	2015	Tongan
1325	Burmese	1911	Slovak	2018	Turkish
1401	Nauru	1912	Slovenian	2019	Tsonga
1405	Nepali	1913	Samoa	2020	Tatar
2023	Twi	2209	Vietnamese	2515	Yoruba
2111	Ukrainian	2215	Volapük	2621	Zulu
2118	Urdu	2315	Wolof	0921	Inuktitut
2126	Uzbek	2408	Xhosa	2107	Uighur
2601	Zhuang				

Audio menu screen operation

You can change the settings and control functions for each audio source.



Audio menu screen

Go to audio menu screen: Move the controller to the left on the audio top screen


■ Radio mode

▶ FM or AM radio (Type A)

▶ FM or AM radio (Type B)

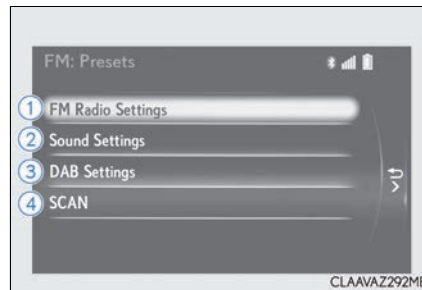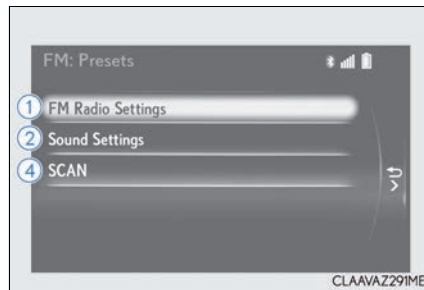


- ① Changes FM radio settings (→P. 393)
- ② Changes sound settings (→P. 390)
- ③ Change DAB settings (if equipped) (→P. 387)
- ④ Scans for receivable stations
 - ▶ DAB (if equipped)

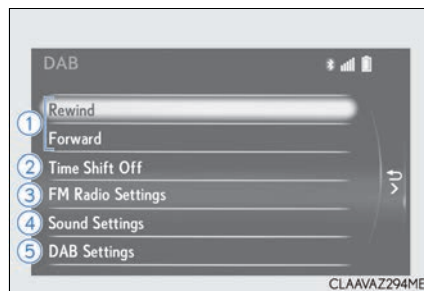

- ① Adjust the playback offset time on time shift mode
- ② Cancel time shift operation
- ③ Change FM radio settings (→P. 393)
- ④ Change sound settings (→P. 390)
- ⑤ Change DAB settings (→P. 394)

■ Media mode

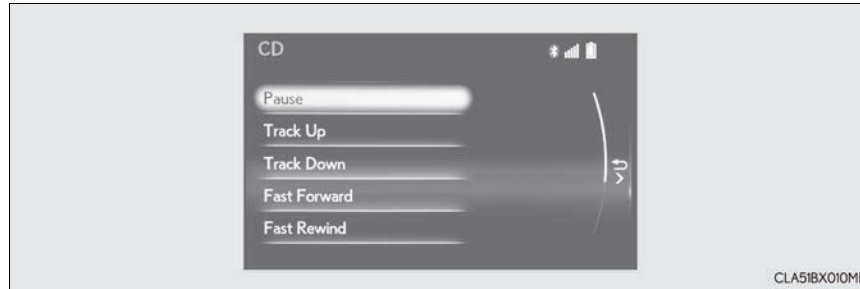

Button	Function	Target audio source
"Play"	Plays or pauses a track/file/video	All media (except A/V)
"Pause"		
"Stop"	Stops the video	DVD, Video CD
"Track Up"	Selects a track/file	Audio CD, MP3/WMA/AAC disc, iPod, USB audio/video, Bluetooth®
"Track Down"		
"File Up"		
"File Down"		
"Folder Up"	Selects a folder/album	MP3/WMA/AAC disc, USB audio
"Folder Down"		
"Next page"	Selects a page	Video CD
"Previous page"		
"Fast Forward"	Selects and hold: Fast-forward or rewind a track/file/video	All media (except A/V)
"Fast Rewind"		
"Repeat"	Selects a repeat mode. (→P. 403)	Audio CD, MP3/WMA/AAC disc, iPod, USB audio, Bluetooth®
"Random"	Selects a random/shuffle play mode. (→P. 403)	Audio CD, MP3/WMA/AAC disc, iPod, USB audio, Bluetooth®
"Shuffle"		
"Top Menu"	Displays the DVD menu	DVD
"Menu"		

Button	Function	Target audio source
"Return"	Displays a predetermined scene on the screen and start playing	DVD, Video CD
"Full Screen"	Selects a full screen mode	iPod, USB video, A/V
"Password"	Displays the password input screen if necessary	DVD
"Connect"	Connects a Bluetooth [®] device (→P. 430)	Bluetooth [®]
"Cover Art Settings"	Changes the cover art settings (→P. 396)	USB, iPod
"iPod Settings"	Changes iPod settings (→P. 395)	iPod
"USB Settings"	Changes USB settings (→P. 395)	USB audio/video
"A/V Settings"	Changes A/V settings (→P. 396)	A/V
"DVD Settings"	Changes DVD settings (→P. 397)	DVD
"Wide"	Changes the screen size	DVD, Video CD
"Display"	Adjusts the screen quality (→P. 387)	DVD, Video CD
"Sound Settings"	Changes sound settings (→P. 390)	All media

Repeat play

Mode	Action
"Track Repeat"	File/track repeat
"Repeat"	
"On"	
"Folder Repeat"	Folder/album repeat
"Album Repeat"	

Random/shuffle playback

Mode	Action
"1CD"	Random/shuffle play of the disc/folder/album
"Random"	
"Shuffle"	
"Folder Random"	Random/shuffle play of all folders/albums
"Album Random"	
"Album shuffle"	

Radio operation

Select “AM”, “FM” or “DAB” (if equipped) on the “Source” screen to begin listening to the radio.

Radio top screen

Pressing the “RADIO” button displays the radio top screen from any screen of the selected source.

■ Menu screen


→P. 400

Changing the top screen mode


Go to “FM: Presets” → Move the controller to the right on the radio top screen

► Type A

- ① Change the radio top screen to the preset selection screen.
- ② Change the radio top screen to the station list selection screen.
- ③ Change the radio top screen to the time shift operation screen. (DAB) (if equipped) (→P. 407)

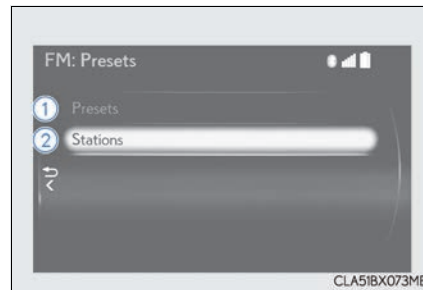

► Type B

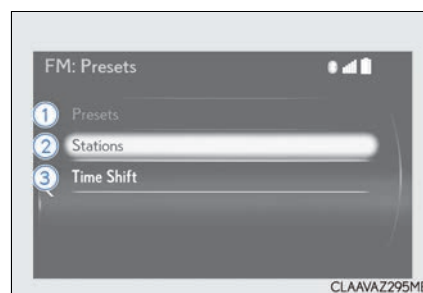

Selecting a station

Tune in to the desired station using one of the following methods.

■ Seek tuning

Press and hold then release the "< CH" or "TRACK >" button.

The radio will begin seeking up or down for a station of the nearest frequency and will stop when a station is found.

■ Manual tuning

Turn the "TUNE•SCROLL" knob.

■ Station list (preset or station list screen)

Select the desired station by pressing the "< CH" or "TRACK >" button, or turning and pressing the controller.

Setting station presets (preset screen)

Radio stations can be preset.

- 1 Search for desired stations.
- 2 Turn the controller to select one of the stations and then press the controller until you hear a beep while on the preset selection screen.

Scanning radio stations

Go to radio menu screen: Move the controller to the left on the radio top screen (→P. 400)

■ Scanning the preset radio stations

- 1 Select and hold "SCAN" on the screen until "P.SCAN" appears.
Preset stations will be played for a few seconds each.
- 2 Select "SCAN" once again when the desired station is reached.

■ Scanning all radio stations within range

- 1 Select "SCAN" on the screen.
"SCAN" appears on the screen and all stations within range will be played for a few seconds each.
- 2 Select "SCAN" once again when the desired station is reached.

Time shift operation (DAB) (if equipped)

The broadcast you are currently listening to can be re-listened to at any time.

- 1 Move the controller to the right and then select "Time shift".
- 2 Turn the right side knob (left-hand drive vehicle) or left side knob (right-hand drive vehicle) on the audio panel to set the desired offset.

An offset playback time can also be set on the menu screen.

To cancel the time shift operation while in time shift mode, move the controller to the left and select "Time shift off". If the time shift display is left showing "-0' 00"" for 6 seconds without any operation, the time shift operation will be canceled.

■ Reception sensitivity

- Maintaining perfect radio reception at all times is difficult due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains, transmitters, etc.
- The radio antenna is mounted inside the rear window. To maintain clear radio reception, do not attach metallic window tinting or other metallic objects to the antenna wire mounted inside the rear window.

■ Traffic announcement operation (if equipped)

When traffic announcement is set to on, "TP" will appear on the screen and the radio will begin seeking a TP station. If the radio seeks out a TP station, the program name will appear on the screen. If a traffic announcement station is received, the radio will be switched to the traffic information program automatically. When the program ends, the initial operation will resume.

Audio CD/DVD player operation

Insert a disc, press the "MEDIA" button or select "DISC" on the "Source" screen with a disc inserted to begin listening to a disc.

Audio disc top screen

Pressing the "MEDIA" button displays the audio disc top screen from any screen of the selected source.

■ Menu screen

→P. 400

■ Selecting a track/file

Press the "< CH" or "TRACK >" button, turn the "TUNE•SCROLL" knob to select the desired track/file number.

To fast-forward or rewind, press and hold the "< CH" or "TRACK >" button.

■ Selecting the track by the list (CD)

Move the controller to the right and then select the desired track.

■ Selecting a folder (MP3/WMA/AAC disc)

- 1 Move the controller to the right and then select "Folders".
- 2 Select the desired folder. Then select a file to begin using the selected folder.

■ Selecting a file by the selected folder (MP3/WMA/AAC disc)

- 1 Move the controller to the right and then select "Files".
- 2 Select the desired file.

■ Error messages

If the following error messages appear on the screen, refer to the table and take the appropriate measures. If the problem is not rectified, take the vehicle to your Lexus dealer.

Message	Cause	Correction procedures
"Please check disc."	- The disc is dirty or damaged. - The disc is inserted upside down. - The disc is not playable with the player.	- Clean the disc. - Insert the disc correctly. - Confirm the disc is playable with the player.
"DISC error"	There is a malfunction within the system.	Eject the disc.
"No music files found."	No playable data is included on the disc.	Eject the disc.

■ Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



CDs with copy-protection features may not play correctly.

■ Music disc player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected.

■ If a disc is left inside the Music disc player or in the ejected position for extended periods

Disc may be damaged and may not play properly.

■ Lens cleaners

Do not use lens cleaners. Doing so may damage the Music disc player.

■ MP3, WMA and AAC files

MP3 (MPEG Audio LAYER3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

This format compresses audio data to a size smaller than that of the MP3 format.

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

MP3, WMA and AAC file and media/formats compatibility are limited.

- MP3 file compatibility
 - Compatible standards
MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
 - Compatible sampling frequencies
MPEG1 LAYER3: 32, 44.1, 48 (kHz)
MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
 - Compatible bit rates (compatible with VBR)
MPEG1 LAYER3: 32-320 (kbps)
MPEG2 LSF LAYER3: 8-160 (kbps)
 - Compatible channel modes: stereo, joint stereo, dual channel and monaural
- WMA file compatibility
 - Compatible standards
WMA Ver. 7, 8, 9 (only compatible with Windows Media Audio Standard)
 - Compatible sampling frequencies
32, 44.1, 48 (kHz)
 - Compatible bit rates (only compatible with 2-channel playback)
Ver. 7, 8: CBR 48-192 (kbps)
Ver. 9: CBR 48-320 (kbps)
- AAC file compatibility
 - Compatible standards
MPEG4/AAC-LC
 - Compatible sampling frequencies
11.025/12/16/22.05/24/32/44.1/48 (kHz)
 - Compatible bit rates
16-320 (kbps)
 - Compatible channel modes: 1 ch and 2 ch
- Compatible media

Media that can be used for MP3, WMA and AAC playback are CD-Rs, CD- RWs, DVD-Rs and DVD-RWs.

Playback in some instances may not be possible if the CD-R, CD-RW, DVD-Rs or DVD-RWs is not finalized. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

- Compatible disc formats

The following disc formats can be used.

- Disc formats: CD-ROM Mode 1 and Mode 2
CD-ROM XA Mode 2, Form 1 and Form 2
DVD-ROM
- File formats: ISO9660 Level 1, Level 2, (Romeo, Joliet)
UDF (2.01 or lower)

MP3, WMA and AAC files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows.

- Maximum directory hierarchy: 8 levels (including the root)
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

- File names

The only files that can be recognized as MP3/WMA/AAC and played are those with the extension .mp3, .wma or .m4a.

- Discs containing multi-session recordings

As the audio system is compatible with multi session discs, it is possible to play discs that contain MP3, WMA and AAC files. However, only the first session can be played.

- ID3, WMA and AAC tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

AAC tags can be added to AAC files, making it possible to record the track title and artist name in the same way as with ID3 tags.

- MP3, WMA and AAC playback

When a disc containing MP3, WMA or AAC files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3, WMA or AAC file is played. To make the file check finish more quickly, we recommend you do not write any files to the disc other than MP3, WMA or AAC files or create any unnecessary folders.

Discs that contain a mixture of music data and MP3, WMA or AAC format data cannot be played.

- Extensions

If the file extensions .mp3, .wma and .m4a are used for files other than MP3, WMA and AAC files, they may be mistakenly recognized and played as MP3, WMA and AAC files. This may result in large amounts of interference and damage to the speakers.

- Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R, CD-RW, DVD-R or DVD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3, WMA and AAC files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3, WMA or AAC files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S.A. and other countries.




NOTICE

■ Discs and adapters that cannot be used

Do not use the following types of discs.

Also, do not use 8 cm (3 in.) disc adapters, DualDiscs or printable discs.

Doing so may damage the player and/or disc insert/eject function.

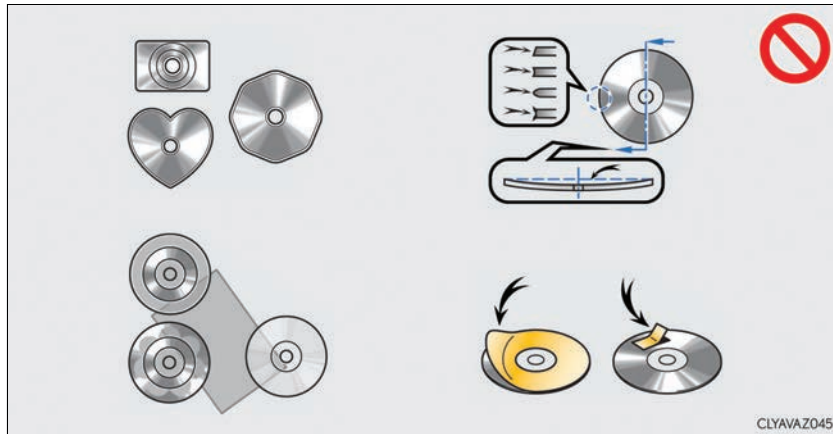

- Discs that have a diameter that is not 12 cm (4.7 in.).
- Low-quality or deformed discs.
- Discs with a transparent or translucent recording area.
- Discs that have tape, stickers or labels attached to them, or that have had the label peeled off.

■ Player precautions

Failure to follow the precautions below may result in damage to the discs or the player itself.

- Do not insert anything other than discs into the disc slot.
- Do not apply oil to the player.
- Store discs away from direct sunlight.
- Never try to disassemble any part of the player.

Video CD operation*

Press the "MEDIA" button if a disc has already been loaded in the disc slot.
Select "VCD" on the "Source" screen.

VCD top screen

Pressing the "MEDIA" button displays the VCD top screen from any screen of the selected source.

■ Menu screen

→P. 400

■ Selecting a track

- 1 Move the controller to the right, and select "Select number".
- 2 Input the number.

A track can also be selected by pressing the "< CH" or "TRACK >" button or turning the "TUNE•SCROLL" knob on the audio panel.

■ Changing sound

- 1 Move the controller to the right and then select "Change audio".
- 2 Select "Change".

Each time "Change" is selected, sound is changed.

When "Full screen" is selected, the previous screen is displayed.

■ Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



*: If equipped

**NOTICE****■ Discs and adapters that cannot be used**

→P. 412

■ Player precautions

→P. 412

DVD video operation *

For safety reasons, you can enjoy the visual contents of discs only when the vehicle is completely stopped with the engine switch in ACCESSORY or IGNITION ON mode and the parking brake applied. While driving in DVD video mode, only the DVD's audio can be heard.

When a DVD video disc is inserted while driving, the audio content of the main feature will automatically be played. However, some discs may not begin playing from the main feature.

Press the "MEDIA" button if a disc has already been loaded in the disc slot. Select "DVD" on the "Source" screen.

DVD top screen

Pressing the "MEDIA" button displays the DVD top screen from any screen of the selected source.

■ Menu screen

→P. 400

■ Searching by title

- 1 Move the controller to the right and then select "Search Title".
- 2 Input the title number.

■ Searching by chapter

Press the "< CH" or "TRACK >" button on the audio panel.

■ Changing the audio language

- 1 Move the controller to the right and then select "Change Audio".
- 2 Select "Change".

Each time "Change" is selected, the audio language is changed.

When "Full Screen" is selected, the previous screen is displayed.

■ Changing the subtitle language

- 1 Move the controller to the right and then select "Change Subtitle".
- 2 Select "Change".

Each time "Change" is selected, the subtitle language is changed.

When "Hide Subtitle" is selected, the subtitles can be hidden.

When "Full Screen" is selected, the previous screen is displayed.

*: If equipped

■ Changing the angle

- 1 Move the controller to the right and then select "Change Angle".
- 2 Select "Change".

Each time "Change" is selected, the angle is changed.

When "Full Screen" is selected, the previous screen is displayed.

■ Using the DVD menu

- 1 Move the controller to the right and then select "Operation".
- 2 Select the menu item using "↓", "↑", "→" or "←", and select "Enter".

Note that specific items or the operating method differs from one DVD to another. Refer to the manual that comes with the DVD disc.

■ Language and angle

The languages or angles available are restricted to those available on the DVD disc.

■ Error messages

If the following error messages appear on the screen, refer to the table and take the appropriate measures. If the problem is not rectified, take the vehicle to your Lexus dealer.

The error messages may differ from those shown below depending on the language selected.

Message	Cause	Correction Procedures
"Please check disc."	- The disc is dirty or damaged. - The disc is inserted upside down. - The disc is not playable with the player.	- Clean the disc. - Insert the disc correctly. - Confirm the disc is playable with the player.
"DISC error"	- There is a malfunction within the system. - Operation is stopped due to high temperature inside the player.	- Eject the disc. - Eject the disc and allow the player to cool down.
"Region Error" Code	Indicates that the DVD region code is not set properly.	Eject the disc.

■ DVD video discs

- The DVD player conforms to NTSC/PAL color TV formats. DVD video discs conforming to another format such as SECAM cannot be used.
- Region code: Some DVD video discs have a region code indicating the region in which you can use the DVD video disc.
 - "ALL": for all countries
 - "2": for GCC countries*, Middle East and South Africa
 - "3": for Southeast Asia and Macau
 - "4": for Latin America
 - "5": for Eastern Europe, Russia and Africa

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar and Kuwait

If the DVD video disc is not labeled as "ALL", "2", "3", "4" or "5", you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, "Region code error" appears on the screen. Even if the DVD video disc does not have a region code, you may not be able to use it.

■ Symbols shown on DVD video discs

Symbol	Meaning
NTSC/PAL	Indicates NTSC/PAL format of color TV
	Indicates the number of audio tracks
	Indicates the number of language subtitles
	Indicates the number of angles
	Indicates the screen display ratios available Wide screen: 16:9 Standard: 4:3
	Indicates the disc's region code ALL: for all countries Number: Region code

■ Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



Use only discs marked as shown above. The following products may not be playable on your player:

- SACD
- dts CD
- Copy-protected CD
- DVD-Audio
- DVD-RAM

■ DVD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected.

■ If discs are left inside the DVD player or in the ejected position for extended periods

Discs may be damaged and may not play properly.

■ Lens cleaners

Do not use lens cleaners. Doing so may damage the DVD player.

■ DVD video disc information**● DVD video discs**

A DVD video disc is a Digital Versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoding technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby Digital, which enables higher quality sound. Furthermore, multi-angle and multi-language features allow you enjoy the more advanced technology of DVD video.

● Viewer restrictions

This feature limits what can be viewed in conformity with the level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

Level 1: DVD video discs for children can be played.

Level 2-7: DVD video discs for children and G-rated movies can be played.

Level 8: All types of DVD video discs can be played.

● Multi-angle option

You can enjoy the same scene from different angles.

● Multi-language option

You can select the subtitle and audio languages.

- **Region codes**
Region codes are provided on DVD players and DVD discs. If a DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. (→P. 417)
- **Audio**
This DVD player can play linear PCM, Dolby Digital and MPEG audio format DVDs. Other decoded types cannot be played.
- **Title and chapter**
Video and audio programs stored on DVD video discs are divided into parts by title and chapter.
Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.
Chapter: A title is comprised of one or more chapters.

■ Sound

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.



WARNING

■ DVD video precaution

Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or startled when you change to a different audio source.

Loud sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.



NOTICE

■ Discs and adapters that cannot be used

→P. 412

■ Player precautions

→P. 412

Listening to an iPod

Connecting an iPod enables you to enjoy music from the vehicle speakers. Press the "MEDIA" button or select "iPod" on the "Source" screen.

Connecting an iPod

→P. 379

iPod top screen

Pressing the "MEDIA" button displays the iPod top screen from any screen of the selected source.

■ Menu screen

→P. 400

■ Selecting a song

Press the "< CH" or "TRACK >" button, turn the "TUNE•SCROLL" knob to select the desired song number.

To fast-forward or rewind, press and hold the "< CH" or "TRACK >" button.

■ Selecting a play mode

- 1 Move the controller to the right and then select "Browse".
- 2 Select the desired play mode, and then select a song to begin using the selected play mode.

■ Displaying the now playing list

Move the controller to the right and then select "Now Playing List".

■ About iPod



- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano, iPod touch, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- The Lightning connector works with iPhone 5s, iPhone 5c, iPhone 5, iPod touch (5th generation), and iPod nano (7th generation).
- The 30-pin connector works with iPhone 4s, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPod touch (1st through 4th generation), iPod classic, and iPod nano (1st through 6th generation).
- USB works with iPhone 5s, iPhone 5c, iPhone 5, iPhone 4s, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPod touch (1st through 5th generation), iPod classic, and iPod nano (1st through 7th generation).
- Bluetooth® technology works with iPhone 5s, iPhone 5c, iPhone 5, iPhone 4s, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPod touch (2nd through 5th generation) and iPod nano (7th generation).

■ iPod cover art

- Depending on the iPod and songs in the iPod, iPod cover art may be displayed.
- This function can be changed to on/off. (→P. 396)
- It may take time to display iPod cover art, and the iPod may not be operated while the cover art display is in process.

■ iPod functions

- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available. If a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it may resolve the problem.
- Depending on the iPod, while connected to the system, the iPod cannot be operated with its own controls. It is necessary to use the controls of the vehicle's audio system instead.
- When the battery level of an iPod is very low, the iPod may not operate. If so, charge the iPod before use.
- Compatible models (→P. 423)

■ Error messages

If the following error messages appear on the screen, refer to the table and take the appropriate measures. If the problem is not rectified, take the vehicle to your Lexus dealer.

Message	Cause/Correction procedures
"Connection error. Please consult your Owner's Manual for instructions on how to reconnect the iPod."	This indicates a problem in the iPod or its connection.
"There are no songs available for playback. Please add compatible songs to your iPod."	This indicates that there is no music data in the iPod.
"No items available."	This indicates that songs are not found in a selected playlist.
"Please check the iPod firmware version."	This indicates that the software version is not compatible. Please check the compatible models. (→P. 423)
"iPod authorisation unsuccessful."	This indicates that the Lexus Display Audio system failed to authorize the iPod. Please check your iPod.

■ iPod problems

To resolve most problems encountered when using your iPod, disconnect your iPod from the vehicle iPod connection and reset it. For instructions on how to reset your iPod, refer to your iPod Owner's Manual.

■ Compatible models

The following iPod®, iPod nano®, iPod classic®, iPod touch® and iPhone® devices can be used with this system.

● Made for

- iPod touch (5th generation)*
- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (7th generation)*
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (1st generation)*
- iPhone 5s*
- iPhone 5c*
- iPhone 5*
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

*: iPod video not supported

Depending on differences between models or software versions, etc., some models might be incompatible with this system.



NOTICE

■ To prevent damage to the iPod or its terminals

- Depending on the size and shape of the iPod that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the iPod or the terminal, etc.
- Do not leave the iPod in the vehicle. The temperature inside the vehicle may become high.
- Do not push down on or apply unnecessary pressure to the iPod while it is connected.
- Do not insert foreign objects into the port.

Using USB memory device

Connecting a USB memory device enables you to enjoy music from the vehicle speakers.

Select "USB1" or "USB2" on the "Source" screen.

Connecting a USB memory device

→P. 379

USB top screen

Pressing the "MEDIA" button displays the USB top screen from any screen of the selected source.

USB audio

Moving the controller to the right and selecting "Play Music" while the USB video screen is displayed changes to USB audio mode.

■ Menu screen

→P. 400

■ Selecting a file

Press the "< CH" or "TRACK >" button, turn the "TUNE•SCROLL" knob to select the desired file number.

To fast-forward or rewind, press and hold the "< CH" or "TRACK >" button.

■ Selecting a play mode

- 1 Move the controller to the right and select "Browse".
- 2 Select the desired play mode, and select a file to begin the selected play mode.

■ Displaying the now playing list

Move the controller to the right and select "Now Playing List".

USB video (if equipped)

Moving the controller to the right and selecting "Play Video" while the USB audio screen is displayed changes to USB video mode.

This function cannot be used while USB photo or MirrorLink™ is in use.

■ Menu screen

→P. 400

■ Selecting a file

Press the "< CH" or "TRACK >" button, turn the "TUNE•SCROLL" knob to select the desired file number.

To fast-forward or rewind, press and hold the "< CH" or "TRACK >" button.

■ Selecting a folder

- 1 Move the controller to the right and select "Browse".
- 2 Select the desired folder, then select a file to begin using the selected folder.

■ Displaying the now playing list

Move the controller to the right and select "Now Playing List".

■ USB memory functions

- Depending on the USB memory device that is connected to the system, the device itself may not be operable and certain functions may not be available. If the device is inoperable or a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it may resolve the problem.
- If the USB memory device still does not begin operation after being disconnected and reconnected, format the device.

■ Error messages for USB memory

If the following error messages appear on the screen, refer to the table and take the appropriate measures. If the problem is not rectified, take the vehicle to your Lexus dealer.

Message	Cause/Correction procedures
"Connection error. Consult your owner's manual for instructions on how to reconnect the USB device."	This indicates a problem with the USB memory device or its connection.
"There are no files available for playback. Add compatible files to your USB device."	This indicates that no MP3/WMA/AAC files are included on the USB memory device.
"No video files found."	This indicates that no video files are included in the USB memory.

■ USB memory

● Compatible devices

USB memory devices that can be used for MP3, WMA and AAC (audio mode) or MP4, WMV and AVI (video mode) playback.

● Compatible device formats

The following device format can be used:

- USB communication format: USB2.0 FS (480 Mbps)
 - File system format: FAT16/32 (Windows)
 - Correspondence class: Mass storage class
- MP3, WMA and AAC files written to a device with any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels
- Maximum number of folders in a device: 3000 (including the root)
- Maximum number of files in a device: 9999
- Maximum number of files per folder: 255

● MP3, WMA and AAC files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format. This format compresses audio data to a size smaller than that of the MP3 format.

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

MP3, WMA and AAC file and media/formats compatibility are limited.

● MP3 file compatibility

- Compatible standards
MP3 (MPEG1 AUDIO LAYER III, MPEG2 AUDIO LAYER III)
- Compatible sampling frequencies
MPEG1 AUDIO LAYER III: 32, 44.1, 48 (kHz)
MPEG2 AUDIO LAYER III: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)
MPEG1 AUDIO LAYER III: 32-320 (kbps)
MPEG2 AUDIO LAYER III: 8-160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

● WMA file compatibility

- Compatible standards
WMA Ver. 7, 8, 9 (only compatible with Windows Media Audio Standard)
- Compatible sampling frequencies
32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)
Ver. 7, 8: CBR 48-192 (kbps)
Ver. 9: CBR 48-320 (kbps)

- AAC file compatibility
 - Compatible standards
MPEG4/AAC-LC
 - Compatible sampling frequencies
11.025/12/16/22.05/24/32/44.1/48 (kHz)
 - Compatible bit rates
16-320 (kbps)
 - Compatible channel modes: 1 ch and 2 ch
- MP4, WMV and AVI files

The following resolutions can be used:
128x96, 160x120, 176x144 (QCIF), 320x240 (QVGA), 352x240 (SIF),
352x288 (CIF), 640x480 (VGA), 720x480 (NTSC), 720x576 (PAL)
- File names

The only files that can be recognized as MP3/WMA/AAC and played are those with the extension .mp3, .wma or .m4a.
- ID3, WMA and AAC tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

AAC tags can be added to AAC files, making it possible to record the track title and artist name in the same way as with ID3 tags.
- MP3, WMA and AAC playback
 - When a device containing MP3, WMA or AAC files is connected, all files in the USB memory device are checked. Once the file check is finished, the first MP3, WMA or AAC file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3, WMA or AAC files or create any unnecessary folders.
 - When a USB memory device is connected and the audio source is changed to USB memory mode, the USB memory device will start playing the first file in the first folder. If the same device is removed and reconnected (and the contents have not been changed), the USB memory device will resume play from the same point in which it was last used.
- Extensions

If the file extensions .mp3, .wma and .m4a are used for files other than MP3, WMA and AAC files, they will be skipped (not played).
- Playback
 - To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
 - There is a wide variety of freeware and other encoding software for MP3, WMA and AAC files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
 - Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

**NOTICE****■ To prevent damage to the USB memory device or its terminals**

- Depending on the size and shape of the USB memory that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the USB memory or the terminal, etc.
- Do not leave the USB memory device in the vehicle. The temperature inside the vehicle may become high.
- Do not push down on or apply unnecessary pressure to the USB memory device while it is connected.
- Do not insert foreign objects into the port.

Using the AUX port

To use the AUX port, connect a portable player, press the “MEDIA” button or select “AUX” or “A/V” on the “Source” screen.

Connecting a portable player

→P. 379

Top screen

Pressing the “MEDIA” button displays the top screen from any screen of the selected source.

■ Menu screen

→P. 400

■ Operating portable players connected to the audio system

Volume can be adjusted using the vehicle’s audio controls. All other adjustments must be made on the portable player itself.

■ When using a portable player connected to the power outlet

Noise may occur during playback. Use the power source of the portable player.



NOTICE

■ To prevent damage to the portable player or its terminal

- Depending on the size and shape of the portable player that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the portable player or the terminal, etc.
- Do not leave portable player in the vehicle. The temperature inside the vehicle may become high.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected.
- Do not insert foreign objects into the port.


Steps for using Bluetooth® devices

The following can be performed using Bluetooth® wireless communication:

- A portable audio player can be operated and listened to via the Lexus Display Audio system
- Hands-free phone calls can be made via a cellular phone

In order to use wireless communication, register and connect a Bluetooth® device by performing the following procedures.

Device registration/connection flow

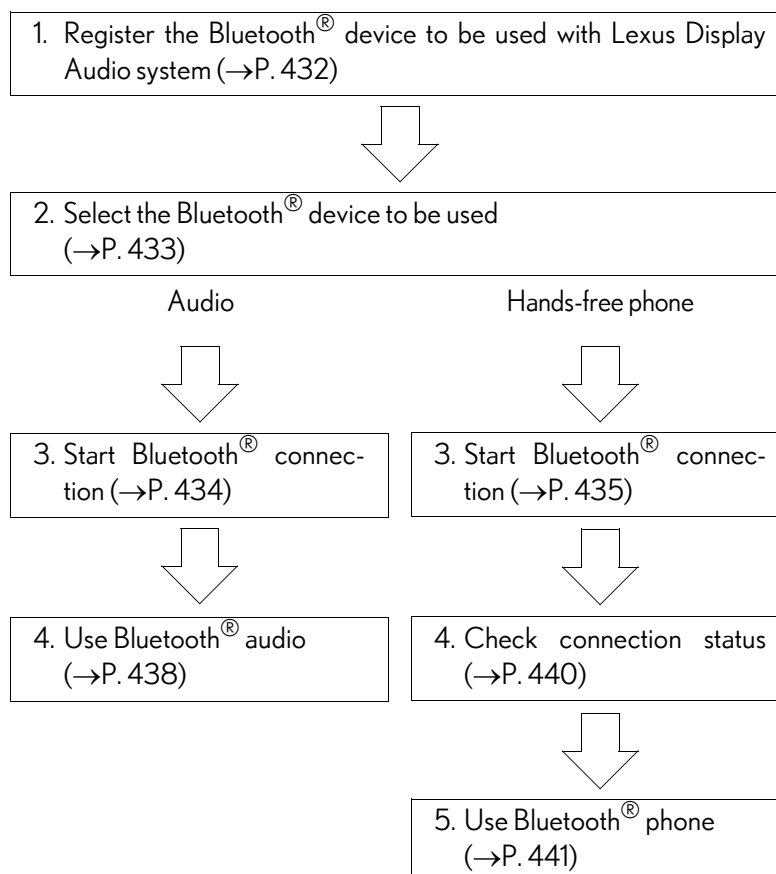

“Bluetooth* Setup” screen

Go to “Bluetooth* Setup”: “MENU” button → “Setup” → “Bluetooth*”

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ When displaying “Bluetooth* Setup” screen from the “Bluetooth* Audio” screen

- 1 Display the “Bluetooth* Audio” screen. (→P. 438)
- 2 Move the controller to the left and select “Connect”.

■ When displaying “Bluetooth* Setup” screen from the phone top screen

- 1 Display the phone top screen. (→P. 439)
- 2 Move the controller to the left and select “Connect Phone” (“Connect telephone”).

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Registering a Bluetooth® device

Bluetooth® compatible phones (HFP) and portable audio players (AVP) can be registered simultaneously. You can register up to 5 Bluetooth® devices.

How to register a Bluetooth® device

- 1 Turn the Bluetooth® connection setting of your device set to on.
- 2 Go to "Bluetooth* Setup": "MENU" button → "Setup" → "Bluetooth*"
- 3 Move the controller to the left and then select "Add Device"

- 4 When this screen is displayed, search for the device name displayed on this screen on your Bluetooth® device.


For operation of the Bluetooth® device, see the manual that comes with your Bluetooth® device.

- 5 Register the Bluetooth® device using your Bluetooth® device.

A PIN code are not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the device, you may need to select Yes to register, or No to cancel on the device.

If an error message is displayed, follow the guidance on the screen to try again.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

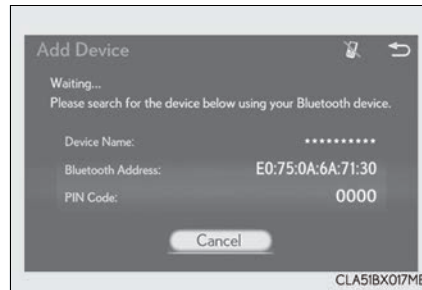

Removing a Bluetooth® device

- 1 Go to "Bluetooth* Setup": "MENU" button → "Setup" → "Bluetooth*"
- 2 Move the controller to the left and then select "Remove Device".
- 3 Select the device to remove.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Selecting a Bluetooth® device

If multiple Bluetooth® devices are registered, follow the procedure below to select the Bluetooth® device to be used. You may only use one device at a time.

How to select a Bluetooth® device

- 1 Go to "Bluetooth* Setup": "MENU" button → "Setup" → "Bluetooth*"
- 2 Select the device to connect.
- 3 Select "Connect All", "Connect as a phone" ("Connect as a telephone") or "Connect as Audio Player".

"Connect All" means connect both the phone and audio functions of one device.

If the desired Bluetooth® device is not displayed, register the device.
(→P. 432)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Connecting a Bluetooth® audio player

There are 2 portable audio player connection settings available: connecting from the vehicle and connecting from the portable player.

Connecting method is set to "Vehicle"

When the portable audio player is in standby for a connection, it will be automatically connected whenever the engine switch is in either ACCESSORY or IGNITION ON mode.

Connecting method is set to "Device"

Operate the portable player and connect it to the Bluetooth® audio system.

- 1 Go to "Bluetooth* Setup": "MENU" button → "Setup" → "Bluetooth*"
- 2 Select the device to connect.
- 3 Select "Connect All" or "Connect as Audio Player".

If the desired Bluetooth® device is not displayed, register the device.
(→P. 432)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Connecting a Bluetooth® phone

There are two connecting methods available: automatic and manual.

Auto connection

When you register a phone, auto connection will be activated. Always set it to this mode and leave the Bluetooth® phone in a place where a connection can be established.

When the engine switch is turned to ACCESSORY or IGNITION ON mode, the system will search for a nearby cellular phone you have registered.

Next, the system automatically connects with the most recent phone that was connected. The connected result is displayed.

Manual connection

When auto connection has failed or "Bluetooth* Power" is turned off, you must connect the Bluetooth® device manually.

- 1 Go to "Bluetooth* Setup": "MENU" button → "Setup" → "Bluetooth*"
- 2 Select the device to connect.
- 3 Select "Connect All", "Connect as a phone" ("Connect as a telephone") or "Connect as Audio Player".

If the desired Bluetooth® device is not displayed, register the device.
(→P. 432)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ Reconnecting a Bluetooth® phone

If the system cannot connect due to poor signal strength with the engine switch in ACCESSORY or IGNITION ON mode, the system will automatically attempt to reconnect.

■ Connecting a phone while Bluetooth® audio is playing

- Bluetooth® audio will stop temporarily.
- It may take time to connect.

Displaying a Bluetooth® device details

You can confirm and change the registered device details.

Bluetooth® device registration status


- 1 Go to "Bluetooth* Setup": "MENU" button → "Setup" → "Bluetooth*"
- 2 Select the desired device and then select "Device Info".

- ① Change the name of the device
- ② Change the connection method
 "Vehicle": Connect the audio system to the portable audio player.
 "Device": Connect the portable audio player to the audio system
- ③ Device address
- ④ Device phone number (if equipped)

Depending on the model of phone, the number may not be displayed.

- ⑤ Compatibility profile of the device

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

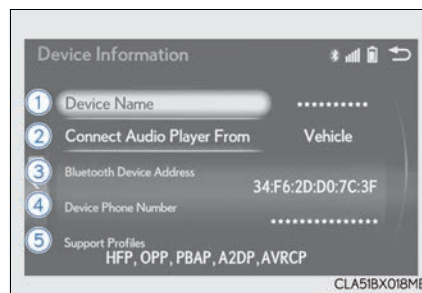

Restoring the default settings

Move the controller to the left and select "Default" on the "Device Information" screen.

Detailed Bluetooth® settings

You can confirm and change the detailed Bluetooth® settings.

How to check and change detailed Bluetooth® settings

- 1 Go to "Bluetooth* Setup": "MENU" button → "Setup" → "Bluetooth*"
- 2 Move the controller to the left and then select "System Settings".

① Select to set the Bluetooth® function on/off.

② Change the name of the device.

③ Change the PIN-code.

You can change the PIN-code that is used to register your Bluetooth® devices in the system.

④ Device address

⑤ Select to set the display of the phone status on/off



You can set the system to show the status confirmation display when connecting a phone.

⑥ Select to set the display of the audio player status on/off

You can set the system to show the status confirmation display when connecting an audio player.

⑦ Compatibility profile of the system

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

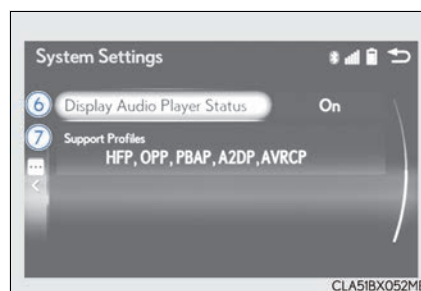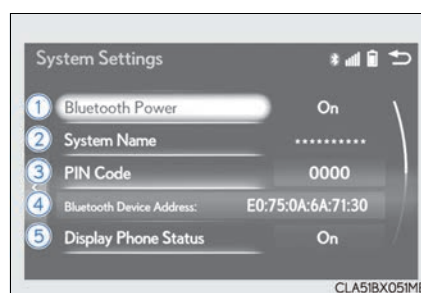

5

Lexus Display Audio system

Restoring the default settings

Move the controller to the left and select "Default" on the "System Settings" screen.

Listening to Bluetooth® Audio

The Bluetooth® audio system enables the user to enjoy music played on a portable player from the vehicle speakers via wireless communication.

When a Bluetooth® device cannot be connected, check the connection status on the "Bluetooth* Audio" screen. If the device is not connected, either register or reconnect the device. (→P. 432, 434)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Bluetooth® audio top screen

Pressing the "MEDIA" button displays the Bluetooth® audio top screen from any screen of the selected source.

■ Menu screen

→P. 400

■ Selecting a song

Press the "< CH" or "TRACK >" button, turn the "TUNE•SCROLL" knob to select the desired song number.

To fast-forward or rewind, press and hold the "< CH" or "TRACK >" button.

■ Selecting a play mode

- 1 Move the controller to the right and then select "Browse".
- 2 Select the desired play mode, and then select a song to begin using the selected play mode.

■ Displaying the now playing list

Move the controller to the right and then select "Now Playing List".

Using a Bluetooth® Phone

The hands-free system is a function that allows you to use your cellular phone without touching it.

This system supports Bluetooth®. Bluetooth® is a wireless data system that allows the cellular phone to wirelessly connect to the hands-free system and make/receive calls.


Before making a phone call, check the connection status, battery charge, call area and signal strength. (→P. 440)

If a Bluetooth® device cannot be connected, check the connection status. If the device is not connected, either register or reconnect it. (→P. 432, 435)

Phone top screen

To display the screen shown below, press the off-hook switch on the steering wheel or select "Phone" ("Telephone") on the "MENU" screen.

- ① Phone name
- ② Bluetooth® connection status (→P. 440)
- ③ Displays the call history screen (→P. 443)
- ④ Displays the favorites screen (→P. 443)
- ⑤ Displays the contacts screen (→P. 441)
- ⑥ Displays the dial pad screen (→P. 441)

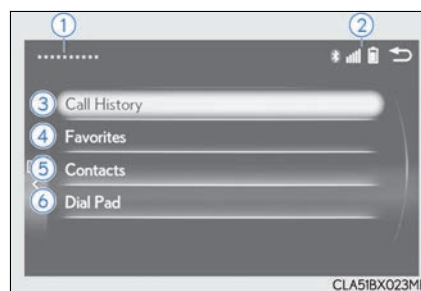

5

Lexus Display Audio system


◆ Phone switch (→P. 447)

◆ Microphone

The vehicle’s built-in microphone is used when talking on the phone.

The person to whom you are speaking to can be heard from the front speakers.


To use the hands-free system, you must register your Bluetooth® phone in the system. (→P. 432)

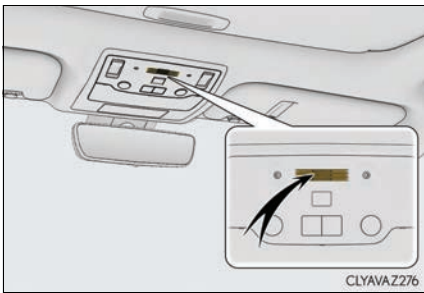

Status display

You can check indicators such as signal strength and battery charge on any screen.

- ① Connection status
- ② Signal strength
- ③ Battery charge

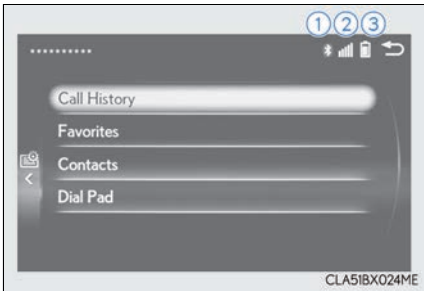

Indicators	Conditions		
Connection status	Good	Poor	Not connected
	 (Blue)	 (Gray)	
Signal strength	Excellent		Poor
			
Battery charge	Full		Empty
			

Making a call

Once a Bluetooth® phone is registered, you can make a call using the following procedure:

Dialing

- 1 Go to "Dial Pad": "MENU" button → "Phone" ("Telephone") → "Dial Pad"
- 2 Input a phone number. (→P. 376)
- 3 Press the off-hook switch on the steering wheel or select .

Dialing from the phonebook

You can dial a number from the phonebook data imported from your cellular phone. The system has one phonebook for each registered phone. Up to 2500 contacts may be stored in each phonebook. (→P. 442)

- 1 Go to "Contacts": "MENU" button → "Phone" ("Telephone") → "Contacts"
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the off-hook switch on the steering wheel or press the controller.

When the phonebook is empty

You can transfer the phone numbers in a Bluetooth® phone to the system. Operation methods differ between PBAP (Phone Book Access Profile) compatible and PBAP incompatible Bluetooth® phones. If the cellular phone does not support either PBAP or OPP (Object Push Profile) service, you cannot transfer contacts.

- 1** Press the off-hook switch on the steering wheel.
If the phonebook is empty, a message will be displayed.
 - ▶ For a PBAP compatible Bluetooth® phone and “Automatic Transfer” is off
- 2** To enable automatic transfer of new contacts from a cellular phone every time it is connected, select “Always”. (→P. 450)
Select “Once” if you want to transfer new contacts from a cellular phone.
 - ▶ For a PBAP incompatible and OPP compatible Bluetooth® phone
- 2** Select “Transfer” and operate your cellular phone to transfer new contacts from a cellular phone.
Select “Add” if you want to add a new contact manually.

Dialing from favorites

You can make a call using numbers registered in the favorites.

- 1 Go to "Favorites": "MENU" button → "Phone" ("Telephone") → "Favorites"
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the off-hook switch on the steering wheel or press the controller.

Dialing from history

You can make a call using the call history.

- 1 Go to "Call History": "MENU" button → "Phone" ("Telephone") → "Call History"
- 2 Select the desired entry from the list.
- 3 Press the off-hook switch on the steering wheel or select .

■ Call history list

- If you make a call to or receive a call from a number registered in the phonebook, the name is displayed in the call history.
- If you make multiple calls to the same number, only the last call made is displayed in the call history.

■ International calls

Depending on the mobile phone in use, you may not be able to make international calls.

■ Calling by using the latest call history entry

- 1 Press the off-hook switch on the steering wheel to display the phone top screen.
- 2 Press the switch again to display the "Call History" screen.
- 3 Press the switch again to select the latest call history entry.

Receiving a call

When a call is received, the following screen is displayed together with a sound.

To answer the phone

Press the off-hook switch on the steering wheel or select .



To refuse a call

Press the on-hook switch on the steering wheel or select .

■ International calls


Depending on the cellular phone in use, received international calls may not be displayed correctly.

Speaking on the phone

The following screen is displayed when speaking on the phone.

To adjust the transmit volume

Select "Transmit Volume". To restore default volume, move the controller to the left on the "Transmit Volume" screen and then select "Default".

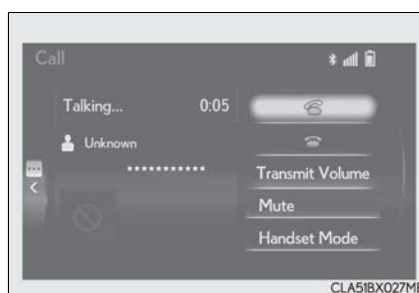

To adjust in call volume

Move the controller to the left and then select "In-call Volume". You can also adjust the volume using the "PWR•VOL" knob or the steering switches.

To prevent the other party from hearing your voice

Select "Mute".

Inputting tones

When using phone services such as an answering service or a bank, you can store phone numbers and code numbers in the contacts using "p" or "w" symbols (eg. 056133 w 0123p#1).

- ▶ Contact including a phone number only

1 Move the controller to the left and then select "0-9".

2 Input the number.

- ▶ Phone number containing a "p" symbol

When the "p" symbol is dialed in an outgoing call, there will be a pause for 2 seconds before the following digits are dialed automatically.

- ▶ Phone number containing a "w" symbol

When the "w" symbol is dialed in an outgoing call, you need to go to the "Release Tones" screen to dial the following digits. Move the controller to the left and then select "Release Tones".

To transfer a call

Select "Handset Mode" to change from a hands-free call to a cellular phone call or vice versa.

To hang up

Press the on-hook switch on the steering wheel or select .

Call waiting


When a call is interrupted by a third party while talking, an incoming call message will be displayed.

To talk with the other party:

Press the off-hook switch on the steering wheel or select .

To refuse the call:

Press the on-hook switch on the steering wheel or select .

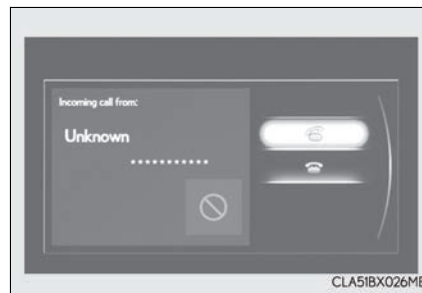

Every time you press the off-hook switch on the steering wheel or select  during call waiting, you will be switched to the other party.

■ Transferring calls

- It is not possible to transfer from hands-free to the cellular phone while driving.
- If you transfer from the cellular phone to hands-free, the hands-free screen will be displayed, and you can operate the system using the screen.
- Transfer method and operation may vary according to the cellular phone used.
- For operation of the cellular phone in use, see the phone's manual.

■ Call waiting operation

Call waiting operation may differ depending on your phone company and cellular phone.

Using the steering wheel switches

The steering wheel switches can be used to operate a connected cellular phone.

Operating a phone using the steering wheel switches

① Volume switch

During an incoming call: Adjusts the ring tone volume

During speaking on the phone: Adjusts in call volume.

The voice guidance volume cannot be adjusted using this button.

② Off-hook switch

- Start call
- Receiving
- Phone top screen display


③ On-hook switch

- End call
- Refuse call

④ Talk switch

Press: Turns the speech command system on

Press and hold: Turns the speech command system off

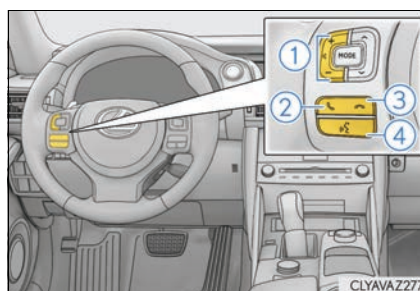


Bluetooth® phone settings

You can adjust the hands-free system to your desired settings.

“Phone Settings” (“Telephone settings”) screen


Go to “Phone Settings” (“Telephone settings”): “MENU” button → “Setup” → “Phone” (“Telephone”)

- ① Register and connect a Bluetooth® device. (→P. 432)
- ② Adjust the call volume. (→P. 449)
- ③ Change the contact/call history settings. (→P. 450)
- ④ Change the phone display settings. (→P. 449)

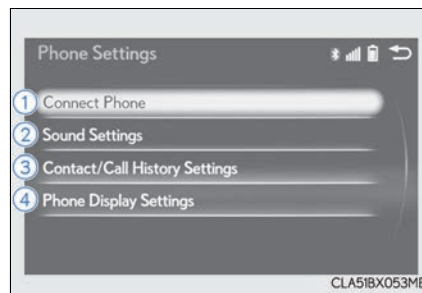


Sound settings

- ① Change the ring tone type
- ② Adjust the ring tone volume
- ③ Adjust in call tone volume

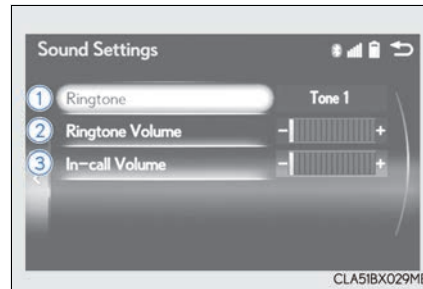

Phone display settings

- ① Change the incoming call display
- ② Set the phonebook/history transfer status notification display on/off

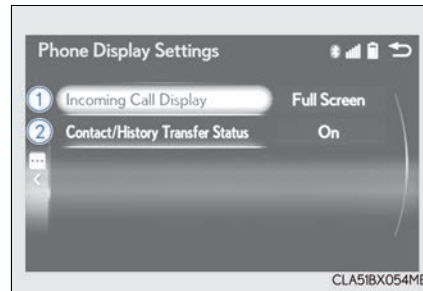

■ To return to the default volume settings

Move the controller to the left and then select "Default".

Contact settings

Individual phonebooks from up to 5 phones can be registered to the system. The data for 2500 contacts (up to 4 numbers per contact) can be registered into the system's phonebook.

"Contact/Call Hist. Settings" ("Contact/call history settings") screen

Go to "Contact/Call Hist. Settings" ("Contact/call history settings"): "MENU" button → "Setup" → "Phone" ("Telephone") → "Contact/Call History Settings"

- ① Select to set the automatic phonebook download on/off

With this setting on, phonebook data will be automatically transferred.

Depending on the cellular phone, call history will be also transferred.

- ② Update phonebook (PBAP incompatible Bluetooth® phones, or compatible phones with "Automatic Transfer" off)

- ③ Change the sort contacts mode

- ④ Add a favorite (→P. 452)




- ⑤ Delete a favorite (→P. 452)

- ⑥ Select to set the display of contact images on/off

- ⑦ Delete call history. (PBAP incompatible Bluetooth® phones, or compatible phones with "Automatic Transfer" off)

- ⑧ Add a new contact (PBAP incompatible Bluetooth® phones, or compatible phones with "Automatic Transfer" off)

Input the name, phone number and phone number type to add a new contact.

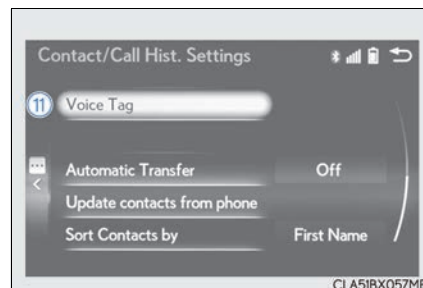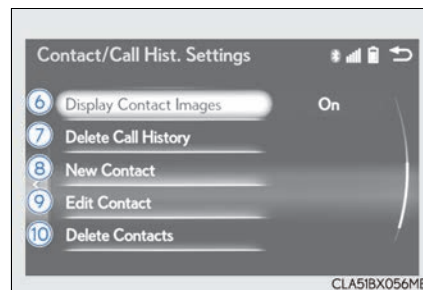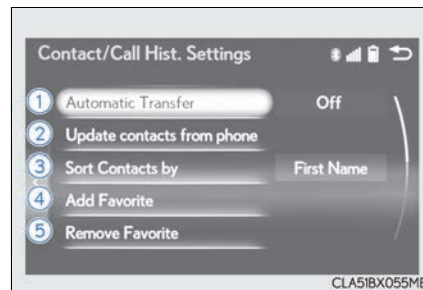

- ⑨ Edit a contact (PBAP incompatible Bluetooth® phones, or compatible phones with "Automatic Transfer" off)
Select the desired contact to edit.
- ⑩ Delete contacts (→P. 452) (PBAP incompatible Bluetooth® phones, or compatible phones with "Automatic Transfer" off)
- ⑪ Edit a voice tag (→P. 470)

■ Return to the default settings

Move the controller to the left and select "Default".


Transferring a phone number

You can transfer the phone numbers in your Bluetooth® phone to the system. Operation methods differ between PBAP compatible and PBAP incompatible Bluetooth® phones. If your cellular phone does not support either PBAP or OPP services, you cannot transfer contacts.

Go to "Transfer Contact": "MENU" button → "Setup" → "Phone" ("Telephone") → "Contact/Call History Settings" → "Update contacts from phone" ("Update contacts from telephone")

- ▶ For PBAP compatible Bluetooth® phones when "Automatic Transfer" is set to on
Start the update automatically.
- ▶ For PBAP compatible Bluetooth® phones when "Automatic Transfer" is set to off and PBAP incompatible Bluetooth® phones

- ① Select to transfer the contact from the connected cellular phone and replace the current one.
- ② Select to transfer the desired contact data from the connected cellular phone to add to the current one.

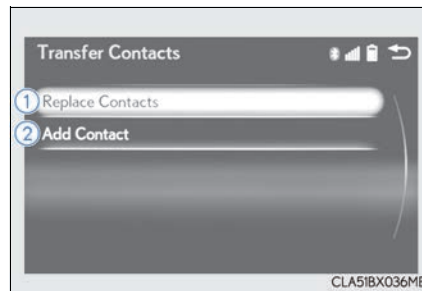

Registering favorites

You can register the desired contact from the phonebook. Up to 15 contacts per phone can be registered.

- 1 Go to "Add Favorite": "MENU" button → "Setup" → "Phone" ("Telephone") → "Contact/Call History Settings" → "Add Favorite"
- 2 Choose the contact to register.

Removing favorites

- 1 Go to "Remove Favorite": "MENU" button → "Setup" → "Phone" ("Telephone") → "Contact/Call History Settings" → "Remove Favorite"
- 2 Select the desired contacts.
You can select all contacts by selecting "Select All".
- 3 Move the controller to the left and select "Remove".

Deleting the contacts data

- 1 Go to "Delete Contacts": "MENU" button → "Setup" → "Phone" ("Telephone") → "Contact/Call History Settings" → "Delete Contacts"
- 2 Select the desired contacts.
You can select all contacts by selecting "Select All".
- 3 Move the controller to the left and select "Delete".

■ Phonebook data

Phonebook data is managed separately for every registered phone. When one phone is connected, you cannot read the registered data of the other phones.

■ When transferring contacts

Transfer contacts while the engine is running.

If the cellular phone is OPP or PBAP compatible, you may need to input "1234" on the cellular phone for OBEX certification.

■ When you have selected "Replace Contacts" or "Add Contact" to transfer contacts

If the cellular phone does not support OPP service, you cannot use these functions. You can transfer the phonebook data only by operating your phone.

■ Transferring contacts while Bluetooth® audio is playing

Bluetooth® audio will disconnect. It will reconnect automatically when data transfer finishes. It may not reconnect depending on the phone which is connected.

What to do if... (Troubleshooting)

If there is a problem with the hands-free system or a Bluetooth® device, first check the table below.

- ▶ When using the hands-free system with a Bluetooth® device

The hands-free system or Bluetooth® device does not work.
The Bluetooth® version of the connected cellular phone may be older than the specified version. → Use a cellular phone with Bluetooth® version 2.0 or higher (Recommended: Ver. 3.0 with EDR or higher). (→P. 457)

- ▶ When registering/connecting a cellular phone

A cellular phone cannot be registered.
An incorrect passcode was entered on the cellular phone. → Enter the correct passcode on the cellular phone.
The registration operation has not been completed on the cellular phone side. → Complete the registration operation on the cellular phone (approve registration on the phone).
Old registration information remains on either this system or the cellular phone. → Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system. (→P. 432)
A Bluetooth® connection cannot be made.
Another Bluetooth® device is already connected. → Manually connect the cellular phone you wish to use to this system. (→P. 435)
Bluetooth® function is not enabled on the cellular phone. → Enable the Bluetooth® function on the cellular phone.
"Please check your phone." message is displayed.
Bluetooth® function is not enabled on the cellular phone. → Enable the Bluetooth® function on the cellular phone.
Old registration information remains on either this system or the cellular phone. → Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system. (→P. 432)

► When making/receiving a call

A call cannot be made/received.

Your vehicle is in a "No service" area.

→ **Move to where "No service" no longer appears on the display.**

► When using the phonebook

Phonebook data cannot be transferred manually/automatically.

Automatic phonebook transfer function on this system is set to off.

→ **Set automatic phonebook transfer function on this system to on. (→P. 450)**

Passcode has not been entered on the cellular phone.

→ **Enter the passcode on the cellular phone if requested (default passcode: 1234).**

Transfer operation on the cellular phone has not completed.

→ **Complete transfer operation on the cellular phone (approve transfer operation on the phone).**

Phonebook data cannot be edited.

Automatic phonebook transfer function on this system is set to on.

→ **Set automatic phonebook transfer function on this system to off. (→P. 450)**

► In other situations

Even though all conceivable measures have been taken, the symptom status does not change.

The cellular phone is not close enough to this system.

→ **Bring the cellular phone closer to this system.**

The cellular phone is the most likely cause of the symptom.

→ **Turn the cellular phone off, remove and reinstall the battery pack, and then restart the cellular phone.**

→ **Enable the cellular phone's Bluetooth® connection.**

→ **Stop the cellular phone's security software and close all applications.**

→ **Before using an application installed on the cellular phone, carefully check its source and how its operation might affect this system.**

Bluetooth®

■ When using the Bluetooth® audio system

- In the following situations, the system may not function.
 - If the portable audio player is turned off
 - If the portable audio player is not connected
 - If the portable audio player's battery is low
- There may be a delay if a cellular phone connection is made during Bluetooth® audio play.
- Depending on the type of portable audio player that is connected to the system, operation may differ slightly and certain functions may not be available.
- This system is not guaranteed to operate with all Bluetooth® devices.

■ When using the hands-free system

- The audio system is muted when making a call.
- If both parties speak at the same time, it may be difficult to hear.
- If the received call volume is overly loud, an echo may be heard.
If the Bluetooth® phone is too close to the system, quality of the sound may deteriorate and connection status may deteriorate.
- In the following situations, it may be difficult to hear the other party:
 - When driving on unpaved roads
 - When driving at high speeds
 - If a window or roof is open
 - If the air conditioning is blowing directly on the microphone
 - If there is interference from the network of the cellular phone
- Depending on the type phone, certain functions may not be available.
- This system is not guaranteed to operate with all Bluetooth® devices.

■ Conditions under which the system will not operate

- If using a cellular phone that does not support Bluetooth®
- If the cellular phone is turned off
- If you are outside of cellular phone service coverage
- If the cellular phone is not connected
- If the cellular phone's battery is low
- When outgoing calls are controlled, due to heavy traffic on phone lines, etc.
- When the cellular phone itself cannot be used
- When transferring phonebook data from the cellular phone

■ Bluetooth® antenna

The antenna is built into the display.

If the portable audio player is behind the seat or in the glove box or console box, or is touching or covered by metal objects, the connection status may deteriorate.

If the cellular phone is behind the seat or in the console box, or touching or covered by metal objects, the connection status may deteriorate.

■ Battery charge/signal status

- This display may not correspond exactly with the portable audio player or cellular phone itself.
- This system does not have a charging function.
- The portable audio player or cellular phone battery will be depleted quickly when the device is connected to Bluetooth®.

■ When using the Bluetooth® audio and hands-free system at the same time

The following problems may occur.

- The Bluetooth® audio connection may be interrupted.
- Noise may be heard during Bluetooth® audio playback.

■ About the contact in this system

The following data is stored for every registered cellular phone. When another phone is connecting, you cannot read the registered data.

- Contact data
- Call history
- Favorite

When removing a Bluetooth® phone from the system, the above-mentioned data is also deleted.

■ About Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by DENSO TEN Limited is under license. Other trademarks and trade names are those of their respective owners.



■ Compatible models

The Bluetooth® audio system supports portable audio players with the following specifications

- Bluetooth® specifications:
Ver. 2.0, or higher (Recommended: Ver. 3.0 + EDR or higher)
- Profiles:
 - A2DP (Advanced Audio Distribution Profile) Ver. 1.0, or higher (Recommended: Ver. 1.2 or higher)
This is a profile to transmit stereo audio or high quality sound to the audio system.
 - AVRCP (Audio/Video Remote Control Profile) Ver. 1.0 or higher (Recommended: Ver. 1.4 or higher)
This is a profile to allow remote control the A/V equipment.

However, please note that some functions may be limited depending on the type of portable audio player connected.

The hands-free system supports cellular phones with the following specifications.

- Bluetooth® specification:
Ver. 2.0 or higher (Recommended: Ver. 3.0 +EDR or higher)
- Profiles:
 - HFP (Hands Free Profile) Ver. 1.0 or higher (Recommended: Ver. 1.6 or higher)
This is a profile to allow hands-free phone calls using a cellular phone or head set. It has outgoing and incoming call functions.
 - OPP (Object Push Profile) Ver. 1.1 or higher (Recommended: Ver. 1.2)
This is a profile to transfer phonebook data. When a Bluetooth® compatible cellular phone has both PBAP and OPP, OPP cannot be used.
 - PBAP (Phone Book Access Profile) Ver. 1.0 or higher (Recommended: Ver. 1.1)
This is a profile to transfer phonebook data.

If the cellular phone does not support HFP, you cannot register it with the hands-free system. OPP or PBAP services must be selected individually.

■ Reconnecting the portable audio player

If the portable audio player is disconnected due to poor reception when the engine switch is in ACCESSORY or IGNITION ON mode, the system automatically reconnects the portable audio player.

If you have switched off the portable audio player yourself, follow the instructions below to reconnect:

- Select the portable audio player again
- Enter the portable audio player

■ When you sell your car

Be sure to delete your personal data. (→P. 385)

■ Certification

- For vehicles sold in Dominican Republic

CAUTION: Radio Frequency Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20cm and more between the radiator and person's body in normal use position.

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► For vehicles sold in Taiwan

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

商品名稱：一體機

型號：FT0042A

額定電壓：12V

額定輸入電流：4.5A

生產國別：日本

進口者名稱：和泰汽車股份有限公司

進口者地址：台北市松江路121號8-14樓

進口者電話：886-2-25062121、0800-036-036(Toll free)

限用物質含有情況

設備名稱：一體機，型號（型式）：FT0042A						
單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ⁺⁶)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
面板	—	○	○	○	○	○
外殼	○	○	○	○	○	○
播放器	—	○	○	○	○	○
電路板	—	○	○	○	○	○
內部零件(信號線, 電源線等)	○	○	○	○	○	○
備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。 備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 備考3. “—” 係指該項限用物質為排除項目。						

► For vehicles sold in Korea

해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다.

이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

 WARNING

■ **While driving**

Do not operate the portable audio player, cellular phone or connect a device to the Bluetooth® system.

■ **Caution regarding interference with electronic devices**

- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

 NOTICE

■ **When leaving the vehicle**


Do not leave your portable audio player or cellular phone in the vehicle. The inside of the vehicle may become hot, causing damage to the portable audio player or cellular phone.

"Information" screen

Display "Information" screen

Go to "Information": "MENU" button → "Info"

- ① Display the fuel consumption.
(→P. 141)
- ② Display the "MirrorLink™" screen.
(→P. 464)
- ③ Display the "USB Photo" screen.
(if equipped) (→P. 468)

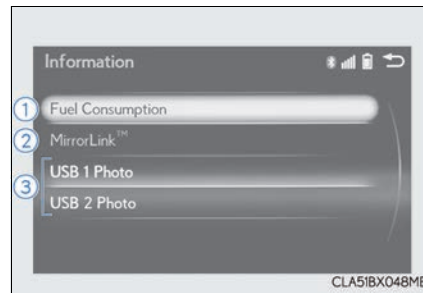

MirrorLink™

The MirrorLink™ function enables operations of some smartphone content via the Lexus Display Audio system.

Depending on differences between models, target regions or software versions, etc., some models might be incompatible with this system.

Connect a smartphone to USB port using a USB cable.

For safety reasons, the safe driving screen is displayed while driving depending on the application.

Connecting a smartphone

→P. 379

Using MirrorLink™ function

- 1 Go to "MirrorLink™": "MENU" button → "Info" → "MirrorLink™"
- 2 Select the desired application on the application list screen.

■ MirrorLink™ screen

Follow the specific operation procedures for the smartphone application.

① Control area


Press the back button on the Lexus Display Audio controller to turn the control area display on/off.

② Return application list screen

If you select the other application, the new application screen will be displayed.

③ Displays software buttons that function as the buttons on the smartphone.

④ Change the other audio source (Radio, Disc, etc.).

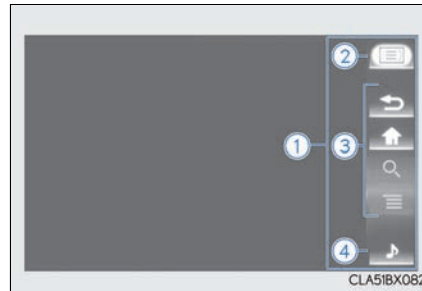

Menu screen

To display the left menu screen, turn the controller to the left while the MirrorLink™ screen is being displayed.

- ① Select a device
- ② Change the screen size
- ③ Adjust the display settings



■ Selecting a MirrorLink™ device

If more than one MirrorLink™ device is available, select the desired device.

- ❶ Select "Please select MirrorLink™ device" on the left menu screen.
- ❷ Select "MirrorLink™ 1" or "MirrorLink™ 2".

■ Operational conditions

- When MirrorLink is activated, previous applications, run with a USB, are closed, and vice versa.
- Compatible devices
Smartphones, which passed the Car Connectivity Consortium certification program ver1.1 or later. Confirm with the smartphone manufacture or the distributor for the MirrorLink™ compatibility.
- Compatible applications
Applications, which are certified by Car Connectivity Consortium as MirrorLink™ Base-Certified or Drive-Certified applications.

■ About MirrorLink™

MirrorLink is a registered trademark of Car Connectivity Consortium, Inc.

■ When using MirrorLink™

- Check that the smartphone screen is unlocked. Unlock the smartphone screen before connecting it to the Lexus Display Audio system. (Some smartphones may not be able to be connected via MirrorLink™ if the screen is locked.)
- Make sure that the smartphone has been connected via Bluetooth®. (Some smartphones may not be able to perform hands-free calls using the MirrorLink™ function if it has not been connected to the vehicle via Bluetooth®.)
- If a MirrorLink™ application cannot be started, check that the MirrorLink™ application certificate has not expired. The certificates of MirrorLink™ applications have an expiration date. (An internet connection is required to automatically update the certificate.) If a MirrorLink™ application becomes unavailable, it may be due to the certificate expiring. In this case, the certificate must be updated manually. Check with the smartphone manufacturer or application developer for how to update the certificate.
- Make sure the volume of the smartphone is set to an appropriate level. If the MirrorLink™ application volume is excessively low even when the volume of the Lexus Display Audio system is increased, check the volume of the smartphone and increase it as necessary.



WARNING

■ While driving

Do not connect smartphone or operate the controls.



NOTICE

■ To avoid damaging the smartphone

- Depending on the size and shape of the smartphone that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the smartphone or the terminal, etc.
- Do not leave your smartphone in the vehicle. The temperature inside may rise to a level that could damage the smartphone.
- Do not push down on or apply unnecessary pressure to the smartphone device while it is connected.
- Do not insert foreign objects into the port.

USB photo*

Connecting a USB memory device enables you to enjoy photos on the Lexus Display Audio display.

USB photo screen

Go to "USB Photo": "MENU" button → "Info" → "USB 1 Photo" or "USB 2 Photo"


Connecting a USB memory device

→P. 379

Menu screen

Move the controller to the left to display the menu screen.

- ① Change the full screen mode.
- ② Select to set the slide show display on/off.
- ③ Start the slide show at a selected folder.
- ③ Change the play speed.
- ④ Change the play mode.

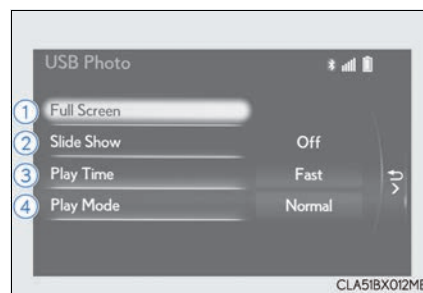

Selecting a folder and a file

- 1 Move the controller to the right and select "Browse".
- 2 Select the desired folder, and then select a desired file to begin using the selected folder.

*: If equipped

■ USB memory functions

→P. 425

■ USB memory**● Compatible devices**

USB memory device that can be used for JPEG display.

● Compatible device formats

The following device format can be used:

- USB communication format: USB2.0 FS (480 Mbps)
- File system format: FAT16/32 (Windows)
- Correspondence class: Mass storage class

● JPEG file compatibility

- Compatible image size: Maximum 10MB
- Compatible pixel size: Maximum 10,000,000 pixels

**NOTICE****■ To prevent damage to the USB memory device or its terminals**

→P. 429

Speech command system

Using the speech command system enables you to make a call to contacts that have a voice tag.

Editing a voice tag

You can register desired contacts to enable the speech command system. Up to 50 contacts per phone can be registered.


- 1 Go to "Voice Tags": "MENU" button → "Setup" → "Phone" ("Telephone") → "Contact/Call History Settings" → "Voice Tag" → "New" or "Edit"
- 2 Select the desired contact.
- 3 Move the controller to the left and then select "REC".
- 4 Say the registered voice tag.
To play the registered voice, select "Play".

■ Deleting a voice tag

- 1 Display the "Voice Tags" screen.
- 2 Select "Delete" and then the desired contact.
- 3 Move the controller to the left and then select "Delete".

Using the speech command system

- 1 Press the talk switch.
To cancel the speech command system, press and hold the talk switch.
- 2 After a beep sounds, say the desired contact name.
When the icon is displayed, you can speak a command.
- 3 If more than 1 contact name is displayed, select the desired contact name.

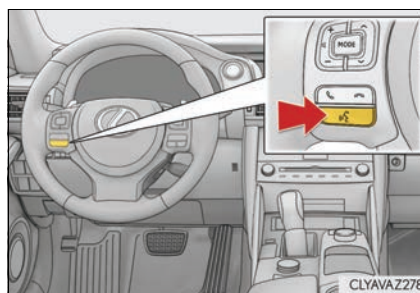

If more than 1 phone number is displayed, select the desired phone number.

When the off-hook switch on the steering wheel is pressed, the system calls the first phone number entry of the first contact.

■ **Microphone**

→P. 440

■ **Speech commands may not be recognized if:**

- Spoken too quickly
- Spoken at a low or high volume
- Passengers are talking while speech commands are spoken

Interior features

6


6-1. Basic operation of the Remote Touch screen	
Remote Touch.....	474
10.3-inch display	477
6-2. Using the air conditioning system	
Automatic air conditioning system	479
Heated steering wheel/ seat heaters/ seat ventilators	491
6-3. Using the interior lights	
Interior lights list.....	493
• Interior lights	494
• Personal lights	494
6-4. Using the storage features	
List of storage features	496
• Glove box	497
• Console box.....	497
• Cup holders/ Bottle holders	498
Trunk features.....	500
6-5. Using the other interior features	
Other interior features	503
• Sun visors	503
• Vanity mirrors	503
• Clock	504
• Power outlet.....	505
• Armrest.....	506
• Rear sunshade	506
• Assist grips	508
• Coat hooks.....	508
Garage door opener	509

Remote Touch*

The Remote Touch can be used to operate the Remote Touch screens.

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

The illustration below is for left-hand drive vehicles.

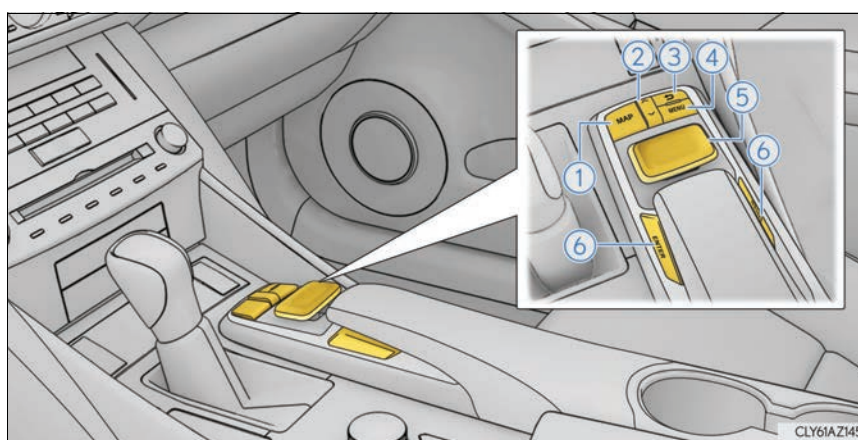

① "MAP" button

Press this button to display the vehicle's current position.

② "∧∨" button

Press this button to change map scale and scroll through lists.

③ Back button

Press to display the previous screen.

④ "MENU" button

Press this button to display the "Menu" screen. (→P. 476)

⑤ Remote Touch knob

Move in the desired direction to select a function, letter and screen button.
Press the knob to enter the selected function, letter or screen button.


⑥ "ENTER" button

Press to enter the selected function, letter or screen button.

*: If equipped

Remote Touch operation

- ① Select: Move the Remote Touch knob in the desired direction.
- ② Enter: Push the Remote Touch knob or an "ENTER" button.

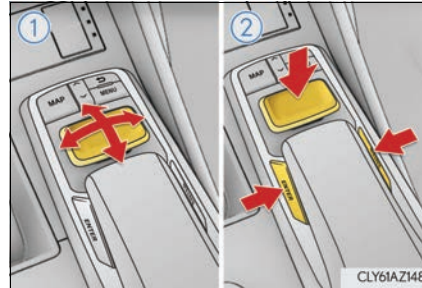

■ Screen display during low temperatures

When the ambient temperature is extremely low, screen response may be delayed even if the Remote Touch is operated.

⚠ WARNING

■ When using the Remote Touch

- Do not allow fingers, fingernails or hair to become caught in the Remote Touch as this may cause an injury.
- Be careful when selecting the Remote Touch in extreme temperatures as it may become very hot or cold due to the temperature inside the vehicle.

⚠ NOTICE

■ To prevent damage to the Remote Touch


- Do not allow the Remote Touch to come into contact with food, liquid, stickers or lit cigarettes as doing so may cause it to change color, emit a strange odor or stop functioning.
- Do not subject the Remote Touch to excessive pressure or strong impact as the knob may bend or break off.
- Do not allow coins, contact lenses or other such items to become caught in the Remote Touch as this may cause it to stop functioning.
- Items of clothing may rip if they become caught on the Remote Touch knob.
- If your hand or any object is on the Remote Touch knob when the engine switch is in ACCESSORY mode, the Remote Touch knob may not operate properly.

“Menu” screen

Press the “MENU” button on the Remote Touch to display the “Menu” screen.
The display may differ depending on the type of the system.

When the split-screen display is selected, the “Menu” screen will be displayed on the main display. (→P. 477)

► Type A

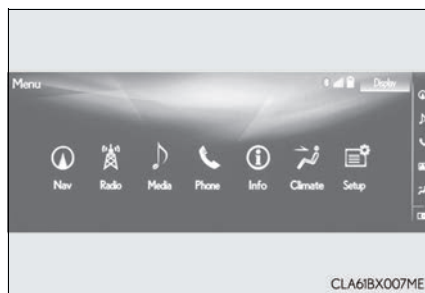

► Type B



Switch	Function
	Select to display the map screen or the navigation menu screen.*
	Select to display the radio control screen.*
	Select to display the media control screen.*
	Select to display the hands-free operation screen.*
	Select to display the “Information” screen or the fuel consumption screen.* (→P. 141)
	Select to display the air conditioning control screen. (→P. 479)
	Select to display the “Setup” screen.*
“Display”	Select to adjust the contrast and brightness of the screens, turn the screen off, etc.*
	Select to display the “Dest” screen.*

*: Refer to the “Navigation System Owner’s Manual”.

10.3-inch display*

10.3-inch display operation

■ Full screen display

The following functions can be displayed full screen:


- Initial screen
- "Menu" screen (→P. 476)
- Map screen^{*1}
- Audio screen^{*1,2}
- Fuel consumption screen^{*2} (→P. 141)
- Air conditioning control screen^{*2} (→P. 479)

^{*1}: Refer to the "Navigation System Owner's Manual".

^{*2}: Except for Macau

■ Split-screen display

Different information can be displayed on the left and right of the screen. For example, audio screen can be displayed and operated while the fuel consumption information screen is being displayed. The large screen on the left of the display is called the main display, and the small screen to the right is called the side display.

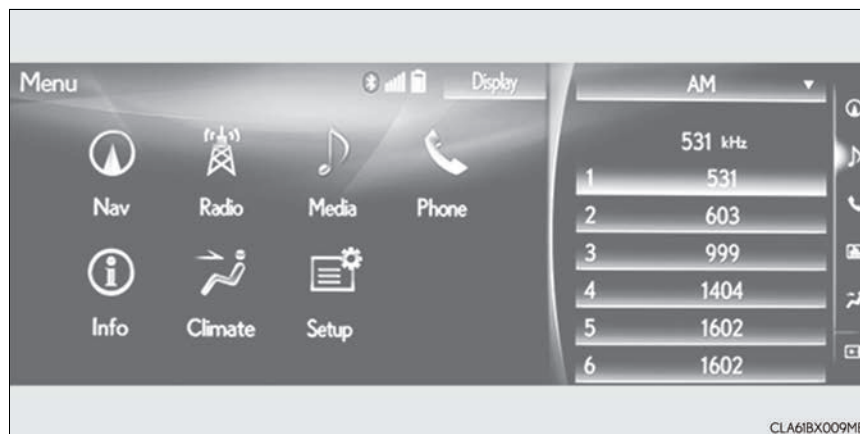

6

Interior features

*: If equipped

Split-screen display operation

■ Selecting the operation screen

When selecting the main display, move the Remote Touch knob to the left.
When selecting the side display, move the Remote Touch knob to the right.

■ Main display


For details about the functions and operation of the main display, refer to the respective section and "Navigation System Owner's Manual".

■ Side display

► Basic screens

To change the screen displayed on the side display, use the screen buttons on the right side of the display.

- ① Navigation system^{*1}
- ② Audio^{*1}
- ③ Phone^{*1}
- ④ Vehicle information (→P. 145)
- ⑤ Air conditioning system (→P. 484)
- ⑥ Select to hide the side display. If the item displayed on the main display is full screen display compatible (→P. 477), it will be displayed full screen.^{*2}

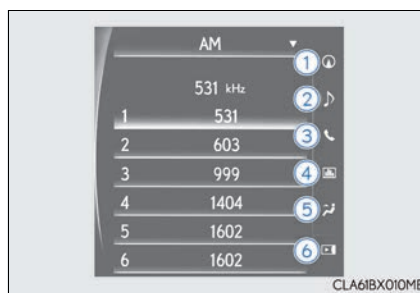

► Interruption screens

Each of the following screens is displayed automatically in accordance with conditions.

- Lexus parking assist-sensor (→P. 315)
- Phone^{*1}
- Driving mode (→P. 353)

^{*1}: Refer to the "Navigation System Owner's Manual".

^{*2}: Except for Macau

Automatic air conditioning system

Air outlets and fan speed are automatically adjusted according to the temperature setting.

Vehicles with a Lexus Display Audio system: Press the "MENU" button on the Lexus Display Audio controller, then select "Climate" to display the air conditioning operation screen.

For details on the Lexus Display Audio controller, refer to "Lexus Display Audio controller" on P. 374.

Vehicles with a navigation system: Press the "MENU" button on the Remote Touch, then select  to display the air conditioning control screen.


Vehicles with a navigation system (10.3-inch display): The air conditioning system can be displayed and operated on the side display. (→P. 478)

The illustrations below are for left-hand drive vehicles.

The button positions and shapes will differ for right-hand drive vehicles.

Also, the display and button positions will differ depending on the type of the system.

Air conditioning controls

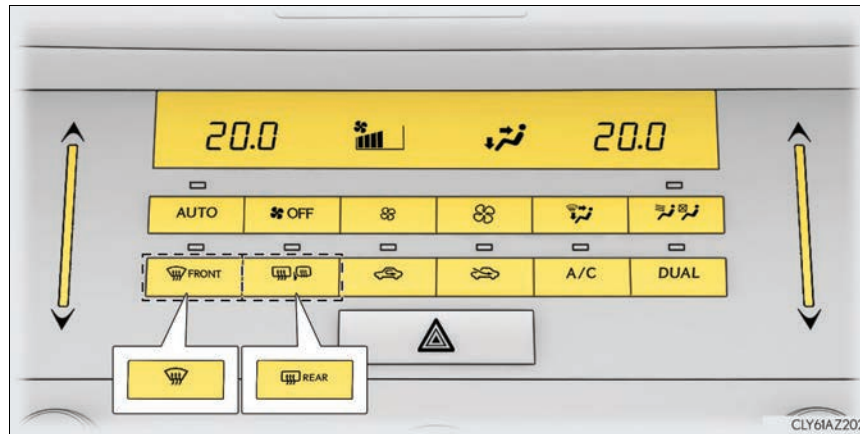


■ Adjusting the temperature setting

To adjust the temperature setting, touch and slide your finger up or down on the sensor.

The temperature setting can also be adjusted by touching the sensor. When the temperature setting is changed, a buzzer sounds.

If **A/C** is not pressed, the system will blow ambient temperature air or heated air.

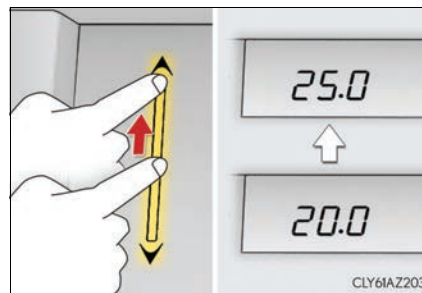

■ Fan speed setting

Press **[Fan Speed Up]** to increase the fan speed.


Press **[Fan Speed Down]** to decrease the fan speed.

■ Change the airflow mode

To change the airflow, press .

▶ With a Lexus Display Audio

▶ With a navigation system

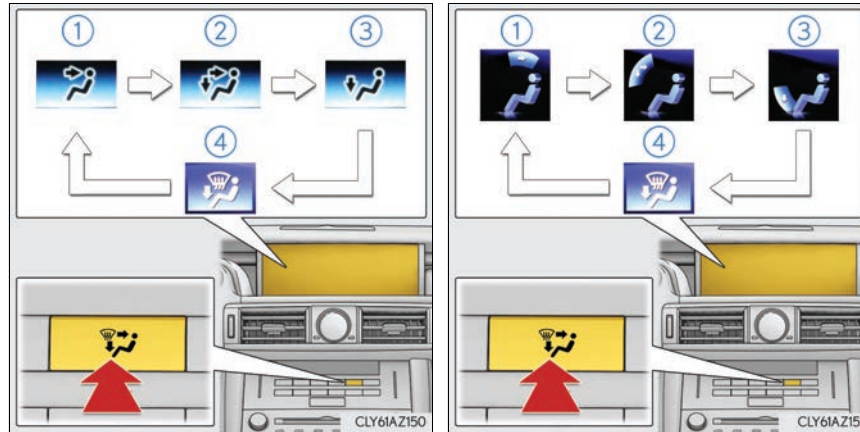

The air outlets used are switched each time the button is pressed.

- ① Air flows to the upper body.
- ② Air flows to the upper body and feet.
- ③ Air flows to the feet.
- ④ Air flows to the feet and the windshield defogger operates

■ S-FLOW mode (if equipped)

When there are no passengers in the rear seats, airflow can be directed to the front seats only to reduce the air conditioning effect on the rear seats.

However, depending on both the temperature inside and outside the vehicle, airflow may be directed to the rear seats even though S-FLOW mode is on to maintain comfort inside the vehicle.

Press .

The indicator comes on when S-FLOW mode is on.

Press  again to resume airflow to the rear seats.

■ Other functions

- Switching between outside air and recirculated air modes (→P. 485)
- Defogging the windshield (→P. 486)
- Defogging the rear window and outside rear view mirrors (if equipped) (→P. 486)
- Defogging the rear window (if equipped) (→P. 486)

Air conditioning control screen

- With a Lexus Display Audio

(Type A)



(Type B)



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select to set auto mode on/off
- ④ Select to set eco mode on/off (→P. 489)
- ⑤ Select to set cooling and dehumidification function on/off
If the "A/C" indicator is turned off, the system will blow ambient temperature air or heated air.
- ⑥ Adjust the temperature for driver and passenger seats separately ("DUAL" mode) (→P. 485)
- ⑦ Display the option control screen (→P. 484)
- ⑧ Select the air flow mode
- ⑨ Adjust the right-hand side temperature setting
- ⑩ Changing the fan speed setting during the automatic mode operation (→P. 487)

► With a navigation system

(Type A)



(Type B)




- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select the air flow mode
- ④ Adjust the right-hand side temperature setting
- ⑤ Display the option control screen (→P. 484)
- ⑥ Select to set automatic mode on/off
- ⑦ Select to set cooling and dehumidification function on/off
If the "A/C" indicator is turned off, the system will blow ambient temperature air or heated air.
- ⑧ Adjust the temperature for driver and passenger seats separately ("DUAL" mode) (→P. 485)
- ⑨ Select to set eco mode on/off (→P. 489)
- ⑩ Changing the fan speed setting during the automatic mode operation (→P. 487)

■ Option control screen

Select  on the air conditioning control screen to display the option control screen. The functions can be switched on and off.

► With a Lexus Display Audio

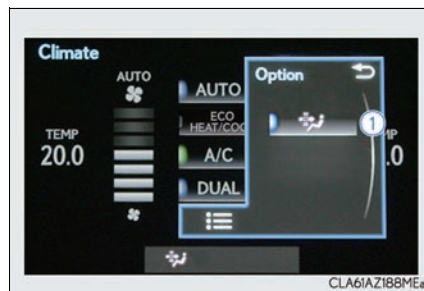


► With a navigation system



① Removing pollen from the air (Pollen removal mode) (→P. 486)

■ Side display operation screen (Vehicles with a 10.3-inch display)

- ① Select the air flow mode
- ② Adjust the left-hand side temperature setting
- ③ Adjust the fan speed setting
- ④ Adjust the right-hand side temperature setting
- ⑤ Select to set auto mode on/off
- ⑥ Select to set cooling and dehumidification function on/off

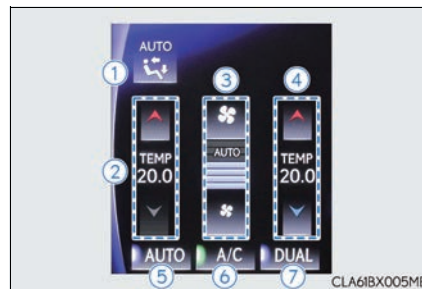

If the "A/C" indicator is turned off, the system will blow ambient temperature air or heated air.

- ⑦ Adjust the temperature for driver and passenger seats separately ("DUAL" mode) (→P. 485)

Using automatic mode

- 1 Press , or select "AUTO" on the air conditioning control screen.
- 2 Adjust the temperature setting.
- 3 To stop the operation, press .

■ Automatic mode indicator

If the fan speed setting or air flow modes are operated, the automatic mode indicator goes off. However, automatic mode for functions other than that operated is maintained.

■ Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)

To turn on the "DUAL" mode, perform any of the following procedures:

- Press  or select "DUAL" on the air conditioning control screen.
- Select "DUAL" on the side display operation screen. (Vehicles with a 10.3-inch display)
- Adjust the passenger's side temperature setting.

The indicator comes on when the "DUAL" mode is on.

While in "DUAL" mode, the temperature of the rear air outlets is set at the right-hand side temperature setting.

Other functions

■ Switching between outside air and recirculated air modes

Press  to change to recirculated air mode.

Press  to change to outside air mode.

The indicator above the selected button comes on.

■ Pollen removal mode

Pollen is removed from the air and the air flows to the upper part of the body.

Select  on the option control screen.

When the pollen removal mode is on,  is displayed on the air conditioning control screen.

In order to prevent the windshield from fogging up when the outside air is cold, the dehumidification function may operate.

The pollens are filtered out even if the pollen removal mode is turned off.

■ Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Press  ().

Set the outside/recirculated air mode button to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows early, turn the air flow and temperature up.

To return to the previous mode, press  () again when the windshield is defogged.

■ Defogging the rear window and outside rear view mirrors (if equipped)

Defoggers are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

Press .

The defoggers will automatically turn off after a period of time.

■ Defogging the rear window (if equipped)

Press  to defog the rear window.

The defogger will automatically turn off after a period of time.


■ Windshield wiper de-icer (if equipped)

This feature is used to prevent ice from building up on the windshield and wiper blades.

Turns on/off.

The indicator comes on when the windshield wiper de-icer is on.

The windshield de-icer will automatically turn off after a period of time.

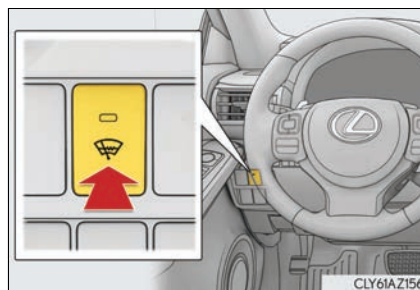

■ Blower customization (if equipped)

Fan speed setting during the automatic mode operation can be customized.

To change the fan speed setting mode, select "FAST/ECO" on the air conditioning control screen.


Each time "FAST/ECO" is selected, the fan speed setting mode changes as follows.

"NORMAL" → "ECO" → "FAST" → "NORMAL"

Air outlets


■ Location of air outlets

The air outlets and air volume changes according to the selected airflow mode.

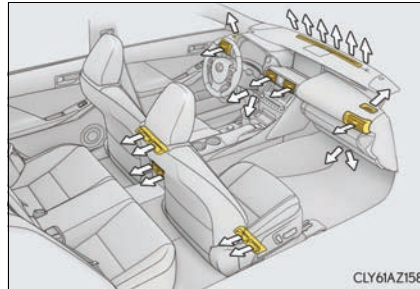


■ Adjusting the position of and opening and closing the air outlets

► Front

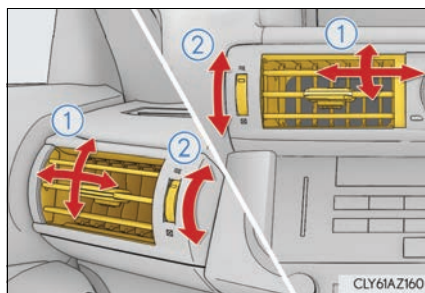

► Rear

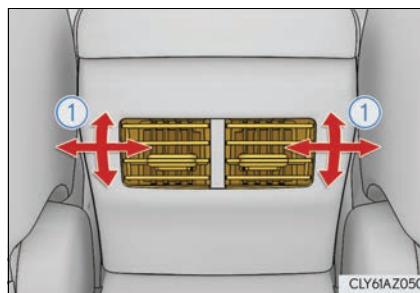

- ① Direct air flow to the left or right, up or down
To close the vent, move the knob to the most outside position. (rear outlets)
- ② Turn the knob to open or close the vent

■ Registering air conditioning settings to electronic keys (vehicles with driving position memory)

- Unlocking the vehicle using an electronic key and turning the engine switch to IGNITION ON mode will recall that key's registered air conditioning settings.
- When the engine switch is turned off, the current air conditioning settings will automatically be registered to the electronic key that was used to unlock the vehicle.
- The system may not operate correctly if more than one electronic key is in the vicinity or if the smart entry & start system is used to unlock a passenger door.
- The doors that can recall the air conditioning setting* when unlocked using the smart entry & start system can be changed. For details, contact your Lexus dealer.

*: The doors that can recall the driving position memory are changed at the same time.

■ Using automatic mode

Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after  is pressed or "AUTO" is selected.

■ Fogging up of the windows

The windows will easily fog up when the humidity in the vehicle is high. Turning  ("A/C") on will dehumidify the air from the outlets and defog the windshield effectively.

- If you turn  ("A/C") off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

■ When driving on dusty roads

Close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake mode be set to outside air mode and the fan speed to any setting except off.

■ Outside/recirculated air mode

- Setting to the recirculated air mode temporarily is recommended in preventing dirty air from entering the vehicle interior and helping to cool the vehicle when the outside air temperature is high.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

■ Operation of the air conditioning system in Eco drive mode

In Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:

- Engine speed and compressor operation controlled to restrict heating/cooling capacity
- Fan speed restricted when automatic mode is selected

To improve air conditioning performance, perform the following operations:

- Adjust the fan speed
- Turn off Eco drive mode

■ When the outside temperature falls to nearly 0°C (32°F)

The dehumidification function may not operate even when  is pressed or "A/C" is selected.

■ Ventilation and air conditioning odors

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
 - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
 - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

■ Air conditioning filter

→P. 572


■ Customization

Settings (e.g. A/C Auto switch operation) can be changed.
(Customizable features: →P. 685)

⚠ WARNING

■ To prevent the windshield from fogging up

- Do not use  () during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.
- Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.

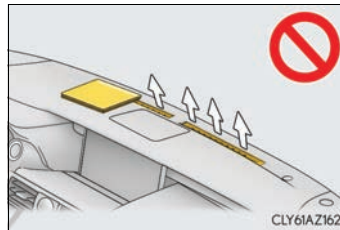

■ To prevent burns

Do not touch the rear view mirror surfaces when the outside rear view mirror defoggers are on.

⚠ NOTICE

■ To prevent battery discharge

Do not leave the air conditioning system on longer than necessary when the engine is off.

Heated steering wheel^{*} / seat heaters^{*} / seat ventilators^{*}

Heated steering wheel and seat heaters heat the side grips of the steering wheel and seats, respectively. Seat ventilators maintain good airflow by blowing air from the seats.

⚠ WARNING

- Care should be taken to prevent injury if anyone in the following categories comes in contact with the steering wheel and seats when the heater is on:
 - Babies, small children, the elderly, the sick and the physically challenged
 - Persons with sensitive skin
 - Persons who are fatigued
 - Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)
- Observe the following precautions to prevent the minor burns or overheating,
 - Do not cover the seat with a blanket or cushion when using the seat heater.
 - Do not use seat heater more than necessary.


⚠ NOTICE

- Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.
- To prevent battery discharge, do not use the functions when the engine is off.

Heated steering wheel

Turn the heated steering wheel on/off

The indicator light comes on when the heated steering wheel is operating.

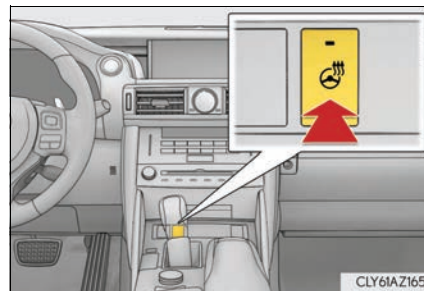


- The heated steering wheel can be used when the engine switch is in IGNITION ON mode.
- The heated steering wheel will automatically turn off after about 30 minutes.

*: If equipped

Seat heaters

Each time the switch is pressed, the intensity of the seat heater changes and the level indicator lights (amber) light as follows:

Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

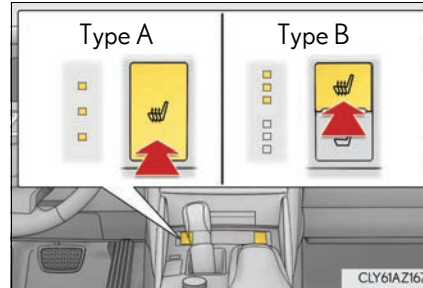

■ The seat heaters can be used when

The engine switch is in IGNITION ON mode.

■ Seat heater timer control

To enable seat heater timer control, press and hold the driver and front passenger seat heater switches at the same time until a buzzer sounds once. If a seat heater is turned on while seat heater timer control is enabled, the intensity of the seat heater will automatically change from Hi→Mid→Lo.


The timing of the change in seat heater intensity differs depending on the temperature inside the cabin, etc. when the seat heater is operating.

To disable seat heater timer control, press and hold the driver and front passenger seat heater switches at the same time until a buzzer sounds twice.

Seat ventilators

Each time the switch is pressed, the intensity of the seat ventilator changes and the level indicator lights (green) light as follows:

Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

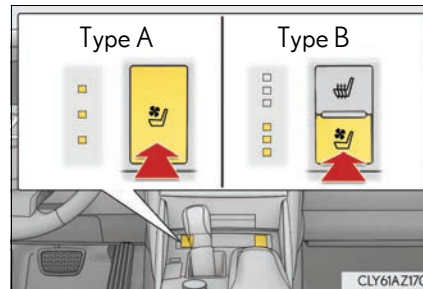


■ The seat ventilators can be used when

The engine switch is in IGNITION ON mode.

■ Air conditioning system-linked control mode

When a seat ventilator is set to Hi, the fan speed of the seat ventilator may increase according to the fan speed of the air conditioning system.


Interior lights list

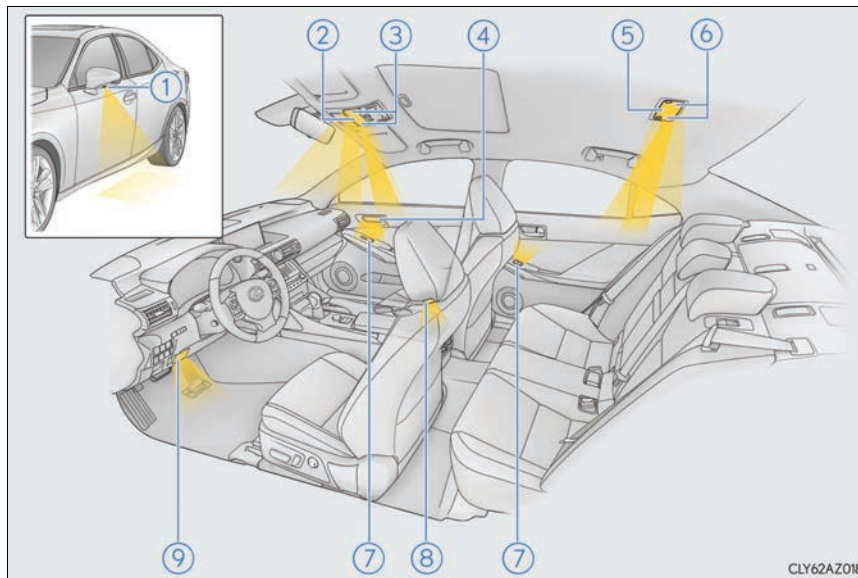

- | | |
|-----------------------------------|----------------------------------|
| ① Outer foot lights | ⑥ Rear personal lights (→P. 494) |
| ② Front interior light (→P. 494) | ⑦ Power window switch lights |
| ③ Front personal lights (→P. 494) | ⑧ Door courtesy lights |
| ④ Inside door handle lights | ⑨ Footwell lights |
| ⑤ Rear interior light (→P. 494) | |


Interior lights

- ① Turns the light on/off
- ② Turns the door position on/off

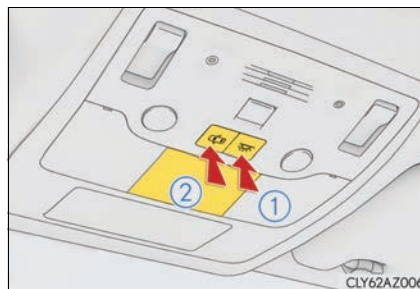
**Personal lights**

Turns the light on/off

► Front

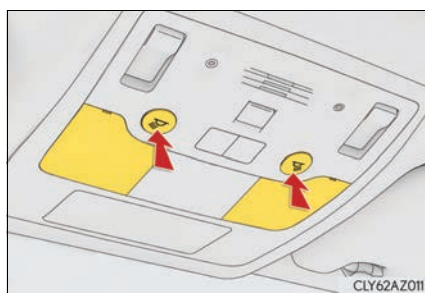

► Rear

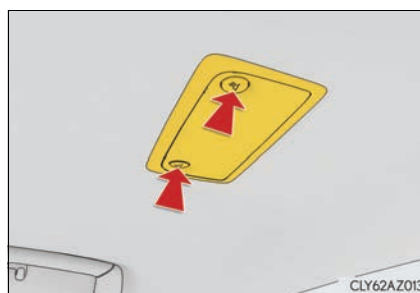


- **The interior lights and personal lights can be operated when**
The interior lights and personal lights can be used regardless of the engine switch mode. However, when the engine switch is turned off, they can be used only when the battery protection function is not operating.
- **Battery protection function**
To prevent the battery from being discharged, approximately 20 minutes after the engine switch is turned off, the power supplied to the interior lights, personal lights, and other lights will be cut off automatically. (If the interior lights, etc. are left on when the engine switch is turned off, they will be turned off automatically.)
To turn the interior lights, etc. back on, turn the engine switch to ACCESSORY or IGNITION ON mode or operate the interior light switch until the interior lights turn on.
If any of the lights are illuminated automatically due to the illuminated entry system, the battery protection function will be canceled.
- **Illuminated entry system**
The lights automatically turn on/off according to engine switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.
- **Customization**
Setting (e.g. the time elapsed before lights turn off) can be changed.
(Customizable features: →P. 679)

 NOTICE

To prevent battery discharge, do not leave the lights on longer than necessary when the engine is off.

List of storage features

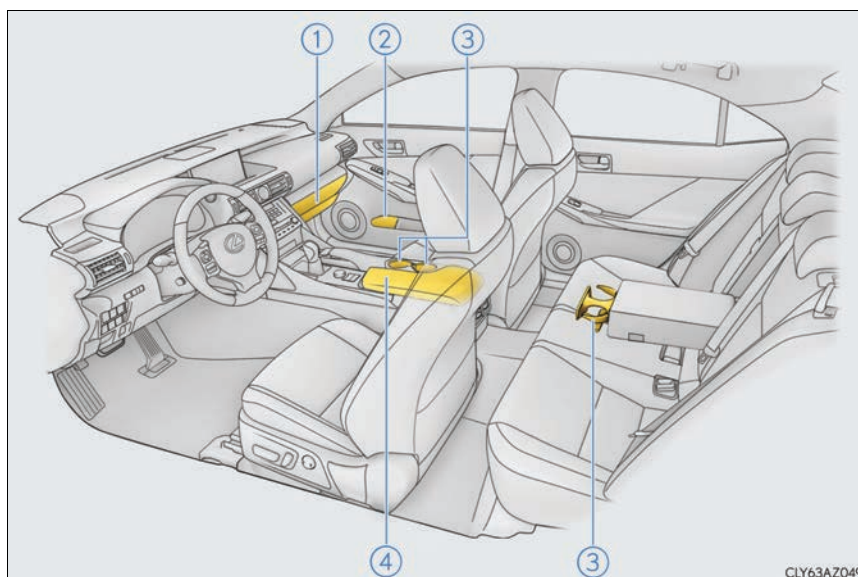


- | | | | |
|------------------|-----------|---------------|-----------|
| ① Glove box | (→P. 497) | ③ Cup holders | (→P. 498) |
| ② Bottle holders | (→P. 498) | ④ Console box | (→P. 497) |

WARNING


- Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:
 - Glasses may be deformed by heat or cracked if they come into contact with other stored items.
 - Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.
- When driving or when the storage compartments are not in use, keep the lids closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by an open lid or the items stored inside.

Glove box

- ① Open (press the button)
- ② Unlock with the mechanical key
- ③ Lock with the mechanical key

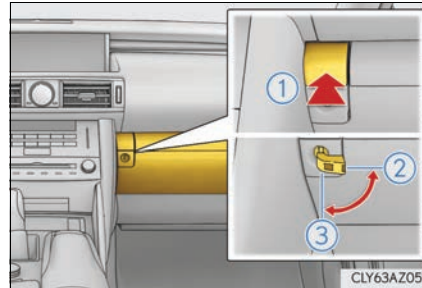


- The glove box light turns on when the engine switch is in ACCESSORY or IGNITION ON mode.
- The trunk opener main switch is located in the glove box. (→P. 162)
- The insert inside the glove box can be removed.

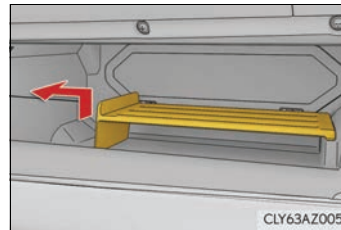

Console box

Push the knob.


Lift by hand to fully open the console box.

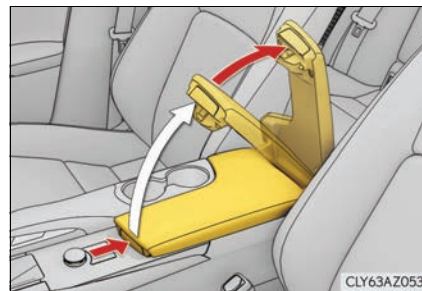


Cup holders/Bottle holders

■ Cup holders

► Front

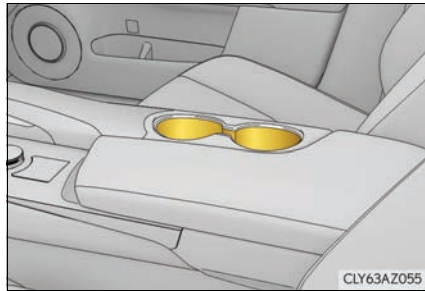


► Rear

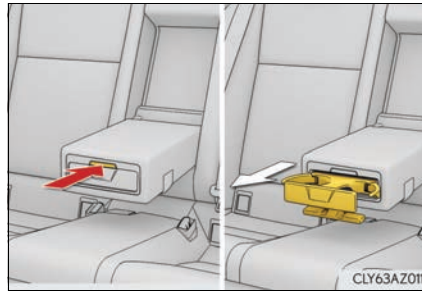

To open, pull down the armrest and press the button and release the rear cup holder on the armrest.

■ Bottle holders

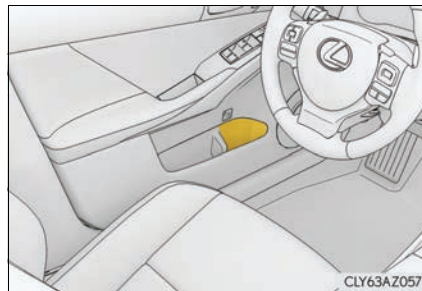

- When storing a bottle, close the cap.
- The bottle may not be stored depending on its size or shape.
- The rubber mats at the bottom of the front cup holders can be removed.

 WARNING

- Do not place anything other than cups or aluminum cans in the cup holders and bottle in the bottle holders. Other items may be thrown out of the holders in the event of an accident or sudden braking, causing injury.
- To prevent burns, cover hot drinks when placed in the cup holders.

 NOTICE


To prevent damage to the rear cup holder, stow the cup holder before stowing the armrest.

Trunk features

Cargo hooks

Raise the hooks when needed.

The cargo hooks are provided for securing loose items.

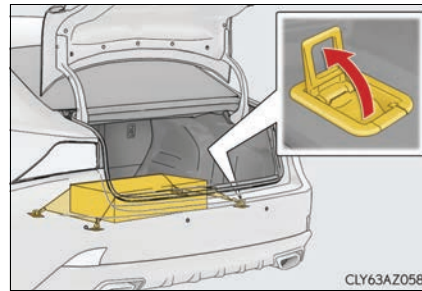


WARNING

To avoid injury, always return the cargo hooks to their stowed positions when not in use.


First-aid kit storage belt

- ① Loosen the belt
- ② Tighten the belt

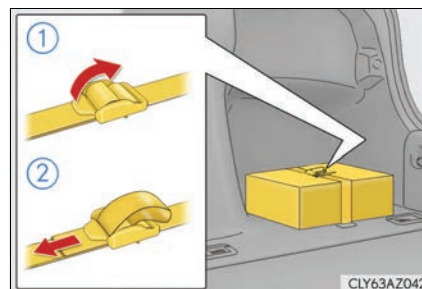


Luggage mat

- 1 Hold the hook and lift up the luggage mat.

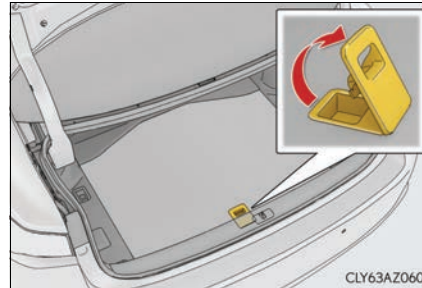


- 2 Secure the luggage mat using the hook.

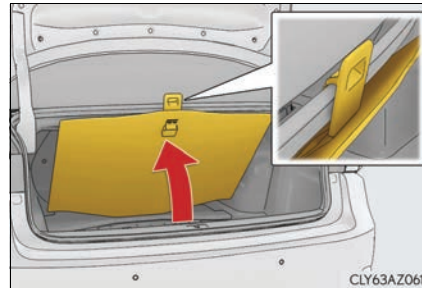**NOTICE**

When closing the trunk, do not leave the luggage mat lever hooked on the edge of the trunk. The luggage mat may get damaged.


Luggage under tray (vehicles without a spare tire)

Lift up the luggage mat and secure it by using the hook.

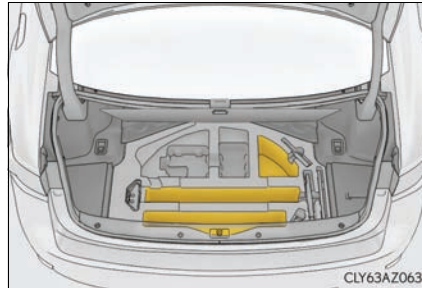


Warning reflector storage belt

- ① Loosen the belt
- ② Tighten the belt

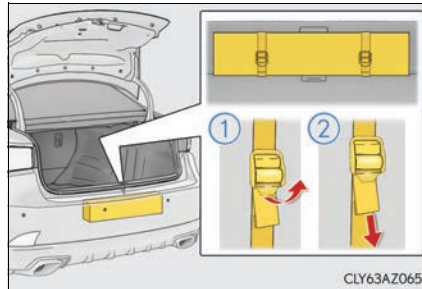

To prevent damage to the warning reflector storage belt when it is not in use, fold the belt (as shown in ①) and secure it with the clip (②).

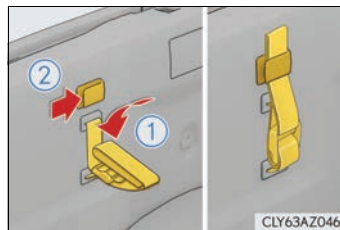

⚠ WARNING

■ When stowing the warning reflector


Make sure that the warning reflector is stowed securely.

In the event of sudden braking, if the warning reflector is not securely stowed, it may come loose, possibly leading to an accident resulting in death or serious injury.

Other interior features

Sun visors


- ① To set the visor in the forward position, flip it down.
- ② To set the visor in the side position, flip down, unhook, and swing it to the side.

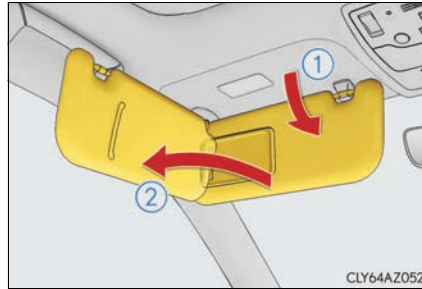

Vanity mirrors

Slide the cover to open.

The light turns on when the cover is opened.

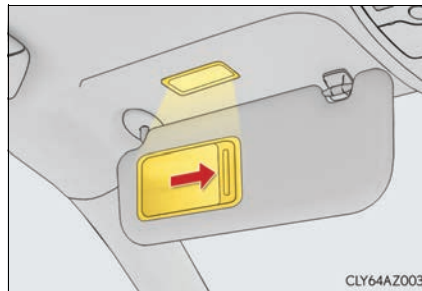


Clock

- ▶ Vehicles with a Lexus Display Audio system

The clock can be adjusted by pressing the buttons.


- ① Pressing and holding will move the clock hands backward.
- ② Pressing and holding will move the clock hands forward.

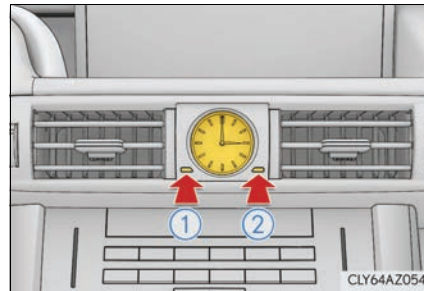

- ▶ Vehicles with a navigation system

The GPS clock's time is automatically adjusted by utilizing GPS time information.


For details, refer to "Navigation System Owner's Manual".

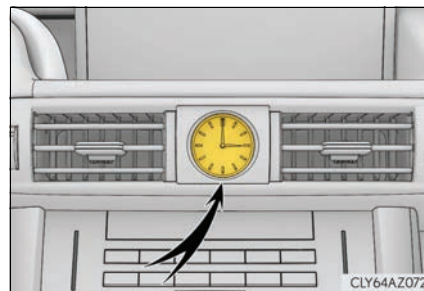

Power outlet

The power outlet can be used for 12 V accessories that run on less than 10 A.

Open the lid.

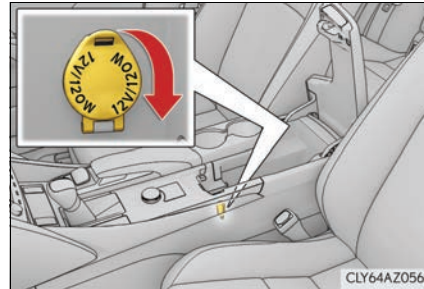

■ The power outlet can be used when

The engine switch is in ACCESSORY or IGNITION ON mode.

■ Using the power outlet (Vehicles with Stop & Start system)

When the engine restarts after having been stopped by the Stop & Start system, the power outlet may be temporarily unusable, but this is not a malfunction.

■ When turning the engine switch off

Disconnect electrical devices with charging functions, such as mobile battery packs.

If such devices are left connected, the engine switch may not be turned off normally.




NOTICE

- To avoid the damaging the power outlet, close the power outlet lid when the power outlet is not in use. Foreign objects or liquids that enter the power outlet may cause a short circuit.
- To prevent blown fuse, do not use an accessory that uses more than 12 V 10 A.
- To prevent battery discharge, do not use the power outlet longer than necessary when the engine is off.

Armrest

Fold down the armrest for use.

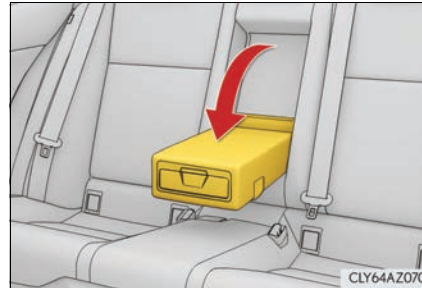


NOTICE

To prevent damage to the armrest, do not apply too much load on the armrest.

Rear sunshade (if equipped)

The rear sunshade can be raised and lowered.

Raise/lower

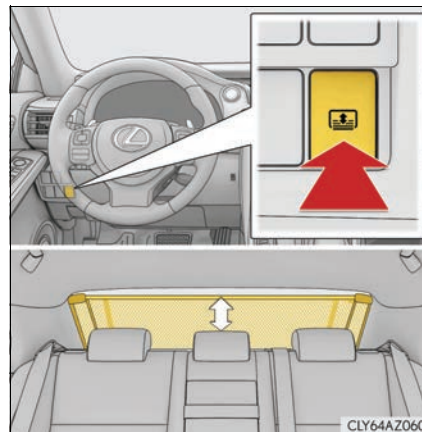

- The rear sunshade can be used when the engine switch is in IGNITION ON mode.
- The rear sunshade can be operated for approximately 1 minute even after the engine switch is turned to ACCESSORY mode or turned off.
- Reverse operation feature: To ensure adequate rear visibility, the rear sunshade automatically lowers when the shift lever is shifted to R.

However, the rear sunshade is raised again if any of the following occurs:

- The button is pressed again.*
- The shift lever is shifted into P.
- The shift lever is shifted out of R, and the vehicle reaches a speed of 15 km/h (9 mph).

If the engine is off when the rear sunshade has been lowered due to the reverse operation feature, it will not be raised even when the engine is turned on again and the vehicle reaches a speed of 15 km/h (9 mph). To raise the sunshade again, press the button.

*: Occasionally, the reverse function may not be carried out after the switch has been pressed. Repeat the above operation to operate the function.



WARNING

When the rear sunshade is being operated, do not place fingers or other objects in the fastener section or in the opening. They may get caught, causing injury.



NOTICE

- To prevent battery discharge, do not operate the rear sunshade when the engine is off.
- Observe the following precautions to ensure normal operation of the rear sunshade.
 - Do not place excessive load on the motor or other components of the rear sunshade.
 - Do not place objects where they may hinder opening and closing operations.
 - Do not attach items to the rear sunshade.
 - Keep the opening clean and clear of obstructions.
 - Do not operate the rear sunshade continuously for long periods of time.

Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.



WARNING


Do not use the assist grip when getting in or out of the vehicle or rising from your seat.

NOTICE

To prevent damage to the assist grip, do not put a heavy load on the assist grip.

Coat hooks

The coat hooks are provided with the rear assist grips.

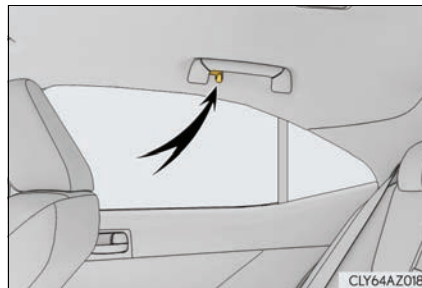

WARNING

Do not hang coat hangers or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles, causing death or serious injury.


Garage door opener*

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, and security systems, and other devices.

Programming the HomeLink®

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

- ① HomeLink® indicator light
 - ② Garage door operation indicators
 - ③ HomeLink® icon
 - ④ Buttons
- Illuminates while HomeLink® is operating.

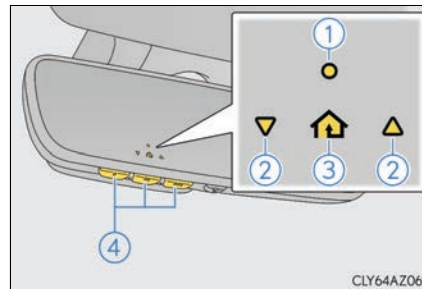

■ Before programming HomeLink®

- During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the “Learn” or “Smart” button on the garage door opener motor.

6

Interior features

*: If equipped


■ Programming HomeLink®

- 1 Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).

Perform 3 within 60 seconds of 1, or the indicator light will stop flashing and programming will not be able to be completed.


- 2 Point the remote control transmitter for the device at the rear view mirror, 25 to 75 mm (1 to 3 in.) from the HomeLink® buttons.

Keep the HomeLink® indicator light in view while programming.

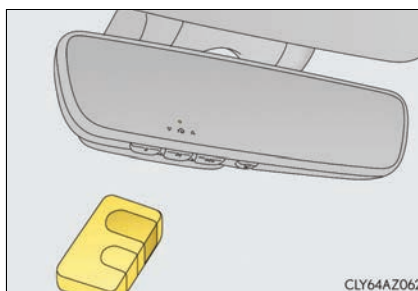

► Garage door type A

- 3 Press and hold the handheld transmitter button until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

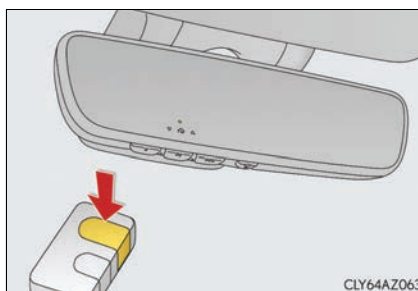

► Garage door type B (Programming an entry gate/Programming the HomeLink®)

- 3 Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).
- 4 Test the HomeLink® operation by pressing the newly programmed button and observing the indicator light:
 - Device with fixed code: If the indicator light is solid/continuous, programming has been completed and your garage door or other device should operate when the HomeLink® button is pressed and released.


- Device with rolling code: If the indicator light flashes rapidly, your garage door opener motor (or other device) is equipped with a rolling code. Complete the programming process by firmly pressing and holding the programmed HomeLink® button for 2 seconds and then release the button.
- If the garage door or other device does not operate, proceed to “Programming a rolling code system”.

- 5 Repeat the steps above to program another device for any of the remaining HomeLink® buttons.


■ Programming a rolling code system

- 1 Locate the “Learn” or “Smart” button on the garage door opener motor in the garage.

This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner’s manual supplied with the garage door opener motor for details.

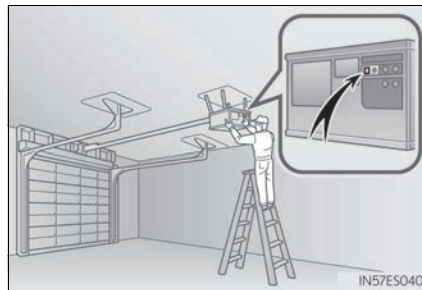


- 2 Press and release the “Learn” or “Smart” button.
Perform 3 within 30 seconds after performing 2.

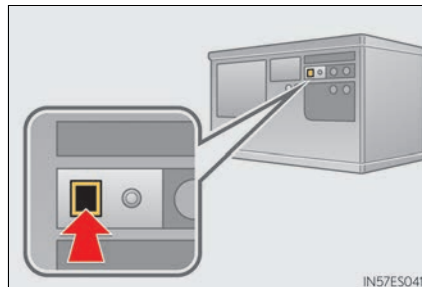

- 3 Press and hold the desired HomeLink® button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming.

If the garage door opener motor operates when the HomeLink® button is pressed, the garage door opener motor recognizes the HomeLink® signal.

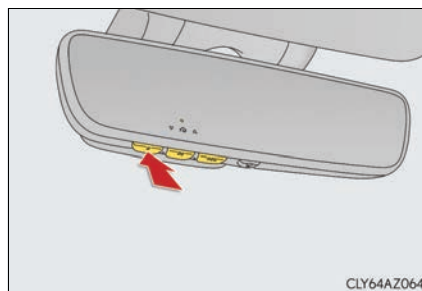

■ **Enabling 2-way communication with a garage door (only available for compatible devices)**

When enabled, 2-way communication allows you to check the status of the opening and closing of a garage door through indicators in your vehicle.

2-way communication is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to www.HomeLink.com.)

- 1 Within 5 seconds after programming the garage door opener has been completed, if the garage door opener motor is trained to HomeLink[®], both garage door operation indicators will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

If the indicators do not flash, perform 2 and 3 within the first 10 presses of the HomeLink[®] button after programming has been completed.

- 2 Press a programmed HomeLink[®] button to operate a garage door.
- 3 Within 1 minute of pressing the HomeLink[®] button, after the garage door operation has stopped, press the "Learn" or "Smart" button on the garage door opener motor. Within 5 seconds of the establishment of 2-way communication with the garage door opener, both garage door operation indicators in the vehicle will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

■ **Reprogramming a single HomeLink[®] button**

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1 With one hand, press and hold the desired HomeLink[®] button.
- 2 When the HomeLink[®] indicator starts flashing (orange), continue to hold the HomeLink[®] button and perform "Programming HomeLink[®]" 1 (it takes 20 seconds for the HomeLink[®] indicator to start flashing).

Operating HomeLink®


Press the appropriate HomeLink® button. The HomeLink® indicator light should turn on.

Garage door operation indicators

The status of the opening and closing of a garage door is shown by the indicators.

- ① Opening
- ② Closing

This function is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to www.HomeLink.com.)

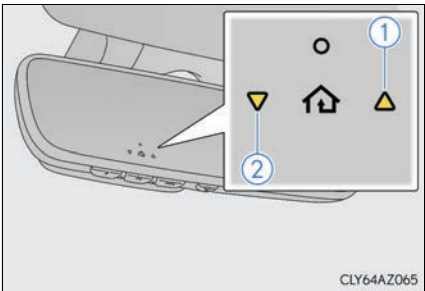

Color	Status
Orange (flashing)	Currently opening/closing
Green	Opening/closing has completed
Red (flashing)	Feedback signals cannot be received


The indicators can operate within approximately 250 m (820 ft.) of the garage door. However, if there are obstructions between the garage door and the vehicle, such as houses and trees, feedback signals from the garage door may not be received.

To recall the previous door operation status, press and release either HomeLink® buttons  and  or  and  simultaneously. The last recorded status will be displayed for 3 seconds.

Erasing the entire HomeLink® memory (all three codes)

Press and hold the 2 outside buttons for 10 seconds until the HomeLink® indicator light changes from continuously lit (orange) to rapidly flashing (green).

If you sell your vehicle, be sure to erase the programs stored in the HomeLink® memory.

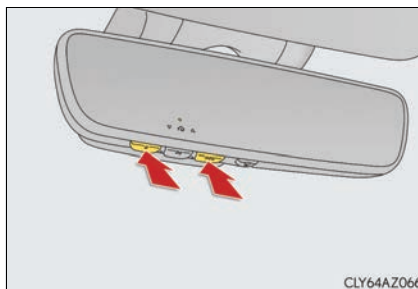

■ Codes stored in the HomeLink® memory

- The registered codes are not erased even if the battery cable is disconnected.
- If learning failed when registering a different code to a HomeLink® button that already has a code registered to it, the already registered code will not be erased.

■ Before programming

- Install a new battery in the transmitter.
- The battery side of the transmitter must be pointed away from the HomeLink®.

⚠ WARNING

■ When programming a garage door or other remote control device

The garage door or other device may operate, so ensure people and objects are out of danger to prevent potential harm.

■ Conforming to federal safety standards

Do not use the HomeLink® compatible transceiver with any garage door opener or device that lacks safety stop and reverse features as required by federal safety standards.

This includes any garage door that cannot detect an interfering object. A door or device without these features increases the risk of death or serious injury.

■ When operating or programming HomeLink®

Never allow a child to operate or play with the HomeLink® buttons.

Maintenance and care

7

7-1. Maintenance and care

Cleaning and protecting
the vehicle exterior 516

Cleaning and protecting
the vehicle interior 520

7-2. Maintenance

Maintenance
requirements 523

Scheduled maintenance 525

7-3. Do-it-yourself maintenance

Do-it-yourself service
precautions 537

Hood 539

Positioning a floor jack 540

Engine compartment 542

Tires 555

Tire inflation pressure 568

Wheels 570

Air conditioning filter 572

Electronic key battery 574

Checking and replacing
fuses 577

Light bulbs 581

Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition:

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

■ Self-restoring coat

The vehicle body has a self-restoring coating that is resistant to small surface scratches caused in a car wash etc.

- The coating lasts for 5 to 8 years from when the vehicle is delivered from the plant.
- The restoration time differs depending on the depth of the scratch and outside temperature.
The restoration time may become shorter when the coating is warmed by applying warm water.
- Deep scratches caused by keys, coins, etc. cannot be restored.
- Do not use wax that contain abrasives.

■ Automatic car washes

- Fold the mirrors before washing the vehicle. Start washing from the front of the vehicle. Make sure to extend the mirrors before driving.
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.

■ High pressure car washes

As water may enter the cabin, do not bring the nozzle tip near the gaps around the doors or perimeter of the windows, or spray these areas continuously.

■ When using a car wash

If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:

- Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P. 168)

■ Aluminum wheels

- Remove any dirt immediately by using a neutral detergent.
- Wash detergent off with water immediately after use.
- To protect the paint from damage, make sure to observe the following precautions.
 - Do not use acidic, alkaline or abrasive detergent
 - Do not use hard brushes
 - Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather

■ Bumpers

Do not scrub with abrasive cleaners.

■ Front side windows water-repellent coating

- The following precautions can extend the effectiveness of the water-repellent coating.
 - Remove any dirt, etc. from the front side windows regularly.
 - Do not allow dirt and dust to accumulate on the windows for a long period.
Clean the windows with a soft, damp cloth as soon as possible.
 - Do not use wax or glass cleaners that contain abrasives when cleaning the windows.
 - Do not use any metallic objects to remove condensation build up.
- When the water-repellent performance has become insufficient, the coating can be repaired. Contact your Lexus dealer.

■ Plated portions

If dirt cannot be removed, clean the parts as follows:

- Use a soft cloth dampened with an approximately 5% solution of neutral detergent and water to clean the dirt off.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.
- To remove oily deposits, use alcohol wet wipes or a similar product.

WARNING


■ When washing the vehicle

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components etc. to catch fire.

■ When cleaning the windshield (vehicles with rain-sensing windshield wipers)

Set the wipers to the intermittent windshield wipers. (→P. 250)

If AUTO mode is selected, the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

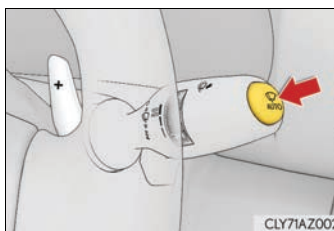

- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor
- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

■ Precautions regarding the exhaust pipes

Exhaust gases cause the exhaust pipes to become quite hot.

When washing the vehicle, be careful not to touch the pipes until they have cooled sufficiently, as touching hot exhaust pipes can cause burns.

■ Precaution regarding the rear bumper with Blind Spot Monitor (if equipped)

If the paint of the rear bumper is chipped or scratched, the system may malfunction. If this occurs, consult your Lexus dealer.

**NOTICE**

■ **To prevent paint deterioration and corrosion on the body and components (aluminum wheels etc.)**

- Wash the vehicle immediately in the following cases:
 - After driving near the sea coast
 - After driving on salted roads
 - If coal tar or tree sap is present on the paint surface
 - If dead insects, insect droppings or bird droppings are present on the paint surface
 - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
 - If the vehicle becomes heavily soiled with dust or mud
 - If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.
- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

■ **Cleaning the exterior lights**

- Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.
- Do not apply wax to the surfaces of the lights. Wax may cause damage to the lenses.

■ **When using an automatic car wash (vehicles with rain-sensing windshield wipers)**

Set the wipers to the intermittent windshield wipers. (→P. 250)

If AUTO mode is selected, the wipers may operate and the wiper blades may be damaged.

■ **When using a high pressure car wash**

- Do not bring the nozzle tip close to boots (rubber or resin manufactured cover), connectors or the following parts. The parts may be damaged if they come into contact with high-pressure water.

• Traction related parts	• Suspension parts
• Steering parts	• Brake parts
- Keep the cleaning nozzle at least 30 cm (11.9 in.) away from the vehicle body. Otherwise resin section, such as moldings and bumpers, may be deformed and damaged. Also, do not continuously hold the nozzle in the same place.
- Do not spray the lower part of the windshield continuously. If water enters the air conditioning system intake located near the lower part of the windshield, the air conditioning system may not operate correctly.

Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

Protecting the vehicle interior

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

Cleaning the areas with satin-finish metal accents

- Remove dirt using a soft cloth or synthetic chamois dampened in a baking soda (sodium bicarbonate) solution.
Use a solution of approximately 9% baking soda dissolved in water.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.

Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.
Use a diluted water solution of approximately 5% neutral wool detergent.
- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.
Allow the leather to dry in a shaded and ventilated area.

Cleaning the synthetic leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

■ Caring for leather areas

Lexus recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

■ Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

■ Seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

■ Front side windows with UV protective coating (if equipped)

The front side windows have UV protective coating. To prevent any damage to the UV protective coating, observe the following:

- If the windows are dirty, gently wipe them with a cloth soaked in water or lukewarm water as soon as possible.
- If the windows are very dirty, do not open and close them repeatedly.

■ When cleaning the carpeted portions of the glove box, console box, etc.

If a strong adhesive tape is used, there is a possibility that the surface of the carpet could be damaged.



WARNING

■ Water in the vehicle

- Do not splash or spill liquid in the vehicle.
Doing so may cause electrical components etc. to malfunction or catch fire.
- Do not get any of the SRS components or wiring in the vehicle interior wet.
(→P. 46)
An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.

■ Cleaning the interior (especially instrument panel)

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.



NOTICE

■ Cleaning detergents

- Do not use the following liquids, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
 - Audio system screen: Organic substances such as benzine or gasoline, alkaline solutions, and alcohol
 - Seats: Alkaline solutions, organic substances such as thinner or benzine, and alcohol
 - Other parts: Organic substances such as benzine or gasoline, alkaline or acidic solutions, dye, and bleach
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

■ Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

■ Water on the floor

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

■ When cleaning the inside of the windshield (vehicles with Lexus Safety System +)

Do not allow glass cleaner to contact the lens. Also, do not touch the lens. (→P. 261)

■ Cleaning the inside of the rear window

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.
- Be careful not to scratch or damage the heater wires or antenna.

■ Cleaning the front side windows

Do not use any compound or abrasive product (e.g., glass cleaner, detergent, wax) to clean the windows. It may damage the coating.

Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Lexus recommends the following maintenance:

Scheduled maintenance

- Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

The interval for scheduled maintenance is determined by the odometer reading or the time interval, whichever comes first, shown in the schedule.

Maintenance beyond the last period should be performed at the same intervals.

- Where to go for maintenance service?

It makes good sense to take your vehicle to your local Lexus dealer for maintenance service as well as other inspections and repairs.

Lexus technicians are well-trained specialists receiving the latest service information through technical bulletins, service tips and in-dealership training programs. They learn to work on Lexus before they work on your vehicle, rather than while they are working on it. Doesn't that seem like the best way?

Your Lexus dealer has invested a lot of money in special Lexus tools and service equipment. It helps them to do the job better and at less cost.

Your Lexus dealer's service department will perform all of the scheduled maintenance on your vehicle reliably and economically.

Rubber hoses (for cooling and heater system, brake system and fuel system) should be inspected by a qualified technician according to the Lexus maintenance schedule.

Rubber hoses are particularly important maintenance items. Have any deteriorated or damaged hoses replaced immediately. Note that rubber hoses will deteriorate with age, resulting in swelling, chafing or cracking.

Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools. Simple instructions for how to perform them are presented in this section.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you are an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by your Lexus dealer who will keep a record of maintenance on your vehicle. This record could be helpful should you ever require Warranty Service.

■ Does your vehicle need repairs?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driven straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal (→P. 119)

If you notice any of these clues, take your vehicle to your Lexus dealer as soon as possible. Your vehicle may need adjustment or repair.

**WARNING****■ If your vehicle is not properly maintained**

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

■ Handling of the battery

Battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P. 550)

Scheduled maintenance

Perform maintenance by the schedule as follows:

Maintenance schedule requirements

Your vehicle needs to be serviced according to the normal maintenance schedule. (See "Maintenance schedule".)



If you mainly operate your vehicle under one or more of the special operating conditions below, some of the maintenance schedule items need to be serviced more frequently in order to keep your vehicle in good condition. (See "Additional maintenance schedule".)

A. Road Condition - Operating on rough or muddy roads, or roads with melted snow - Operating on dusty roads (Roads in areas where their pavement rate is low, or a cloud of dust often arises and the air is dry)	B. Driving Condition - Except for South Africa: Heavily loaded vehicle (For example, using a car top carrier and so forth.) For South Africa: Heavily loaded vehicle (Example: Towing a trailer, using a camper, using a car top carrier, etc.) - Repeated short trips less than 8 km (5 miles) and outside temperatures remain below freezing (Engine temperature will not reach to normal temperature) - Extensive idling and/or low speed driving for a long distance such as police, professional/private use like taxi or door-to-door delivery use - Continuous high speed driving (80% or more of maximum vehicle speed) for over 2 hours
--	---

Maintenance schedule (except for South Africa)

Maintenance operations: I = Inspect, correct or replace as necessary
R = Replace, change or lubricate

SERVICE INTERVAL:		ODOMETER READING								MONTHS	
(Odometer reading or months, whichever comes first.)	x1000 km	10	20	30	40	50	60	70	80		
	x1000 miles	6	12	18	24	30	36	42	48		
BASIC ENGINE COMPONENTS											
1	Drive belts			I		I		I		I	24
2	Engine oil	Except for Macau	Replace when the maintenance reminder appears. <<See note 1.>>								reminder
		For Macau	R	R	R	R	R	R	R	R	12
3	Engine oil filter	Except for Macau	Replace when the maintenance reminder appears. <<See note 1.>>								reminder
		For Macau	R	R	R	R	R	R	R	R	12
4	Cooling and heater system <<See note 2.>>					I				I	24
5	Engine coolant (IS 300: Include intercooler coolant) <<See note 3.>>					I				I	-
6	Exhaust pipes and mountings			I		I		I		I	12
IGNITION SYSTEM											
7	Spark plugs	IS350	Replace every 100000 km (60000 miles)								
		IS300						R			-
8	Battery		I	I	I	I	I	I	I	I	12

Maintenance operations: I = Inspect, correct or replace as necessary
R = Replace, change or lubricate

SERVICE INTERVAL:		ODOMETER READING										MONTHS
(Odometer reading or months, whichever comes first.)	x1000 km	10	20	30	40	50	60	70	80			
	x1000 miles	6	12	18	24	30	36	42	48			
FUEL AND EMISSION CONTROL SYSTEMS												
9	Fuel filter <<See notes 4.>>								R	96		
10	Fuel injection system <<See notes 5, 6 and 7.>>	Add injector cleaner to the fuel tank every 10000 km (6000 miles)										
11	Air cleaner filter		I		R		I		R	I: 24 R: 48		
12	Fuel tank cap, fuel lines, connections and fuel vapor control valve <<See note 2.>>				I				I	24		
13	Charcoal canister (except for Korea)				I				I	24		
CHASSIS AND BODY												
14	Brake pedal and parking brake	I	I	I	I	I	I	I	I	6		
15	Brake linings and drums (include parking brake linings and drums)		I		I		I		I	12		
16	Brake pads and discs	I	I	I	I	I	I	I	I	6		
17	Brake fluid	I	I	I	R	I	I	I	R	I: 6 R: 24		
18	Brake pipes and hoses		I		I		I		I	12		
19	Vacuum pump for brake booster	Inspect every 200000 km (120000 miles)										
20	Steering wheel, linkage and steering gear box		I		I		I		I	12		
21	Drive shaft boots		I		I		I		I	24		
22	Suspension ball joints and dust cover		I		I		I		I	12		
23	Automatic transmission fluid				I				I	24		
24	Automatic transmission fluid cooler hoses and connections (IS300)				I				I	24		

Maintenance operations: I = Inspect, correct or replace as necessary
R = Replace, change or lubricate

SERVICE INTERVAL:		ODOMETER READING									MONTHS
(Odometer reading or months, whichever comes first.)	x1000 km	10	20	30	40	50	60	70	80		
	x1000 miles	6	12	18	24	30	36	42	48		
CHASSIS AND BODY											
25	Rear differential oil		I		R		I		R	I: 12 R: 48	
26	Front and rear suspension		I		I		I		I	12	
27	Tires and inflation pressure	I	I	I	I	I	I	I	I	6	
28	Lights, horns, wipers and washers	I	I	I	I	I	I	I	I	6	
29	Air conditioning filter	R	R	R	R	R	R	R	R	-	
30	Refrigerant amount for air conditioner		I		I		I		I	12	

NOTE:

1. Replace both the engine oil and oil filter, even when the maintenance reminder does not appear, after 12 months have passed, or when driven over 10000 km (6000 miles) since the last oil change. This may cause the maintenance reminder appear even when driven less than 10000 km (6000 miles). Replace both engine oil and oil filter every 5000 km (3000 miles) or 6 months, in which the vehicle is mainly driven in dirt or dusty roads, when the maintenance reminder does not appear.
2. After 80000 km (48000 miles) or 48 months inspection, inspect every 20000 km (12000 miles) or 12 months.
3. First replace at 160000 km (100000 miles), then replace every 80000 km (50000 miles).
4. Including the filter in fuel tank.
5. Toyota genuine fuel injector cleaner or equivalent.
6. IS350: For GCC countries* and Philippines only.
IS300: For Macau, Saudi Arabia, Bahrain, Philippines, Aruba, Peru, Costa Rica, Guatemala, Panama, El Salvador, Dominican Republic, and Curacao only.
*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait
7. IS350: Add injector cleaner to the fuel tank when maintenance reminder appears again, even before driving 10000 km (6000 miles) since the last injector maintenance.

Additional maintenance schedule (except for South Africa)

Refer to the following table for normal maintenance schedule items requiring more frequent service specific to the type of severe conditions. (For outline, see "Maintenance schedule requirements".)

A-1: Operating on rough or muddy roads, or roads with melted snow	
☐ Inspection* of brake linings and drums (include parking brake linings and drums)	Every 10000 km (6000 miles) or 6 months
☐ Inspection* of brake pads and discs	Every 5000 km (3000 miles) or 3 months
☐ Inspection* of brake pipes and hoses	Every 10000 km (6000 miles) or 6 months
☐ Inspection* of steering wheel, linkage and steering gear box	Every 5000 km (3000 miles) or 3 months
☐ Inspection* of drive shaft boots	Every 10000 km (6000 miles) or 12 months
☐ Inspection* of suspension ball joints and dust cover	Every 10000 km (6000 miles) or 6 months
☐ Inspection* of front and rear suspension	Every 10000 km (6000 miles) or 6 months
☐ Tightening of bolts and nuts on chassis and body <<See note 1.>>	Every 10000 km (6000 miles) or 6 months

*: Perform correction or replacement as necessary.

A-2: Operating on dusty roads (Roads in areas where their pavement rate is low, or a cloud of dust often arises and the air is dry)	
☐ Replacement of engine oil	Every 5000 km (3000 miles) or 6 months
☐ Replacement of engine oil filter	Every 5000 km (3000 miles) or 6 months
☐ Inspection* or replacement of air cleaner filter	I: Every 2500 km (1500 miles) or 3 months R: Every 40000 km (24000 miles) or 48 months
☐ Inspection* of brake linings and drums (include parking brake linings and drums)	Every 10000 km (6000 miles) or 6 months
☐ Inspection* of brake pads and discs	Every 5000 km (3000 miles) or 3 months
B-1: Heavily loaded vehicle (For example, using a car top carrier and so forth.)	
☐ Replacement of engine oil <<See note 2.>>	Every 5000 km (3000 miles) or 6 months
☐ Replacement of engine oil filter <<See note 2.>>	Every 5000 km (3000 miles) or 6 months
☐ Inspection* of brake linings and drums (include parking brake linings and drums)	Every 10000 km (6000 miles) or 6 months
☐ Inspection* of brake pads and discs	Every 5000 km (3000 miles) or 3 months
☐ Inspection* or replacement of automatic transmission fluid	I: Every 40000 km (24000 miles) or 24 months R: Every 80000 km (48000 miles) or 48 months
☐ Inspection* of front and rear suspension	Every 10000 km (6000 miles) or 6 months
☐ Tightening of bolts and nuts on chassis and body <<See note 1.>>	Every 10000 km (6000 miles) or 6 months

*: Perform correction or replacement as necessary.

B-2: Repeated short trips less than 8 km (5 miles) and outside temperatures remain below freezing (Engine temperature will not reach to normal temperature)	
☐ Replacement of engine oil <<See note 2.>>	Every 5000 km (3000 miles) or 6 months
☐ Replacement of engine oil filter <<See note 2.>>	Every 5000 km (3000 miles) or 6 months
B-3: Extensive idling and/or low speed driving for a long distance such as police, professional/private use like taxi or door-to-door delivery use	
☐ Replacement of engine oil <<See note 2.>>	Every 5000 km (3000 miles) or 6 months
☐ Replacement of engine oil filter <<See note 2.>>	Every 5000 km (3000 miles) or 6 months
☐ Inspection* of brake linings and drums (include parking brake linings and drums)	Every 10000 km (6000 miles) or 6 months
☐ Inspection* of brake pads and discs	Every 5000 km (3000 miles) or 3 months
☐ Inspection* or replacement of automatic transmission fluid	I: Every 40000 km (24000 miles) or 24 months R: Every 80000 km (48000 miles) or 48 months
B-4: Continuous high speed driving (80% or more of maximum vehicle speed) for over 2 hours	
☐ Inspection* or replacement of automatic transmission fluid	I: Every 40000 km (24000 miles) or 24 months R: Every 80000 km (48000 miles) or 48 months

*: Perform correction or replacement as necessary.

NOTE:

1. For seat mounting bolts, front and rear suspension member retaining bolts.
2. IS300 (for Macau only)

Maintenance schedule (for South Africa)

Maintenance operations: I = Inspect, correct or replace as necessary
R = Replace, change or lubricate

SERVICE INTERVAL:		ODOMETER READING							MONTHS
(Odometer reading or months, whichever comes first.)	x1000 km	15	30	45	60	75	90		
	x1000 miles	9	18	27	36	45	54		
BASIC ENGINE COMPONENTS									
1	Drive belts		I	I	I	I	I	I	12
2	Engine oil		Replace when the maintenance reminder appears. <<See note 1.>>						
3	Engine oil filter		Replace when the maintenance reminder appears. <<See note 1.>>						
4	Cooling and heater system			I		I		I	24
5	Engine coolant (IS 300: Include inter-cooler coolant) <<See note 2.>>			I		I		I	-
6	Exhaust pipes and mountings		I	I	I	I	I	I	12
IGNITION SYSTEM									
7	Spark plugs	IS350 <<See note 3.>>						R	-
		IS300				R			-
8	Battery		I	I	I	I	I	I	12
FUEL AND EMISSION CONTROL SYSTEMS									
9	Fuel filter <<See note 4.>>						R		96
10	Air cleaner filter		I	I	I	R	I	I	I: 24 R: 48
11	Fuel tank cap, fuel lines, connections and fuel vapor control valve			I		I		I	24
12	Charcoal canister				I			I	24
CHASSIS AND BODY									
13	Brake pedal and parking brake			I		I		I	24
14	Brake linings and drums (include parking brake linings and drums)			I		I		I	24
15	Brake pads and discs		I	I	I	I	I	I	12

Maintenance operations: I = Inspect, correct or replace as necessary
R = Replace, change or lubricate

SERVICE INTERVAL:		ODOMETER READING						MONTHS
(Odometer reading or months, whichever comes first.)	x1000 km	15	30	45	60	75	90	
	x1000 miles	9	18	27	36	45	54	
CHASSIS AND BODY								
16	Brake fluid	I	R	I	R	I	R	I: 12 R: 24
17	Brake pipes and hoses	I	I	I	I	I	I	12
18	Vacuum pump for brake booster	Inspect every 200000 km (120000 miles)						
19	Steering wheel, linkage and steering gear box	I	I	I	I	I	I	12
20	Drive shaft boots	I	I	I	I	I	I	24
21	Suspension ball joints and dust cover	I	I	I	I	I	I	12
22	Automatic transmission fluid			I			I	36
23	Automatic transmission fluid cooler hoses and connections (IS300)			I			I	36
24	Rear differential oil	I	R	I	R	I	R	I: 12 R: 48
25	Front and rear suspension	I	I	I	I	I	I	12
26	Tires and inflation pressure	I	I	I	I	I	I	12
27	Lights, horns, wipers and washers	I	I	I	I	I	I	12
28	Air conditioning filter	R	R	R	R	R	R	-
29	Refrigerant amount for air conditioner	I	I	I	I	I	I	12

NOTE:

1. Replace both the engine oil and oil filter, even when the maintenance reminder does not appear, after 12 months have passed, or when driven over 15000 km (9000 miles) since the last oil change. This may cause the maintenance reminder appear even when driven less than 15000 km (9000 miles). Replace both engine oil and oil filter every 7500 km (4500 miles) or 6 months, in which the vehicle is mainly driven in dirt or dusty roads, when the maintenance reminder does not appear.
2. First replace at 160000 km (100000 miles), then replace every 80000 km (50000 miles).
3. It is possible to replace every 100000 km (60000 miles).
4. Including the filter in fuel tank.

Additional maintenance schedule (for South Africa)

Refer to the following table for normal maintenance schedule items requiring more frequent service specific to the type of severe conditions. (For outline, see "Maintenance schedule requirements".)

A-1: Operating on rough or muddy roads, or roads with melted snow	
☐ Inspection* of brake linings and drums (include parking brake linings and drums)	Every 15000 km (9000 miles) or 12 months
☐ Inspection* of brake pads and discs	Every 7500 km (4500 miles) or 6 months
☐ Inspection* of brake pipes and hoses	Every 7500 km (4500 miles) or 6 months
☐ Inspection* of steering wheel, linkage and steering gear box	Every 7500 km (4500 miles) or 6 months
☐ Inspection* of drive shaft boots	Every 7500 km (4500 miles) or 12 months
☐ Inspection* of suspension ball joints and dust cover	Every 7500 km (4500 miles) or 6 months
☐ Inspection* of front and rear suspension	Every 7500 km (4500 miles) or 6 months
☐ Tightening of bolts and nuts on chassis and body <<See note.>>	Every 15000 km (9000 miles) or 12 months

*: Perform correction or replacement as necessary.

A-2: Operating on dusty roads (Roads in areas where their pavement rate is low, or a cloud of dust often arises and the air is dry)	
☐ Replacement of engine oil	Every 7500 km (4500 miles) or 6 months
☐ Replacement of engine oil filter	Every 7500 km (4500 miles) or 6 months
☐ Inspection* or replacement of air cleaner filter	I: Every 7500 km (4500 miles) or 12 months R: Every 60000 km (36000 miles) or 48 months
☐ Inspection* of brake linings and drums (include parking brake linings and drums)	Every 15000 km (9000 miles) or 12 months
☐ Inspection* of brake pads and discs	Every 7500 km (4500 miles) or 6 months
☐ Replacement of air conditioning filter	Every 7500 km (4500 miles)
B-1: Heavily loaded vehicle (Example: Towing a trailer, using a camper, using a car top carrier, etc.)	
☐ Inspection* of brake linings and drums (include parking brake linings and drums)	Every 15000 km (9000 miles) or 12 months
☐ Inspection* of brake pads and discs	Every 7500 km (4500 miles) or 6 months
☐ Inspection* or replacement of automatic transmission fluid	I: Every 45000 km (27000 miles) or 36 months R: Every 90000 km (54000 miles) or 72 months
☐ Inspection* of front and rear suspension	Every 7500 km (4500 miles) or 6 months
☐ Tightening of bolts and nuts on chassis and body <<See note.>>	Every 15000 km (9000 miles) or 12 months

*: Perform correction or replacement as necessary.

B-3: Extensive idling and/or low speed driving for a long distance such as police, professional/private use like taxi or door-to-door delivery use	
☐ Inspection* of brake linings and drums (include parking brake linings and drums)	Every 15000 km (9000 miles) or 12 months
☐ Inspection* of brake pads and discs	Every 7500 km (4500 miles) or 6 months
☐ Inspection* or replacement of automatic transmission fluid	I: Every 45000 km (27000 miles) or 36 months R: Every 90000 km (54000 miles) or 72 months
B-4: Continuous high speed driving (80% or more of maximum vehicle speed) for over 2 hours	
☐ Inspection* or replacement of automatic transmission fluid	I: Every 45000 km (27000 miles) or 36 months R: Every 90000 km (54000 miles) or 72 months

*: Perform correction or replacement as necessary.

NOTE:

For seat mounting bolts, front and rear suspension member retaining bolts.

Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.

Items	Parts and tools
Battery condition (→P. 550)	• Warm water • Baking soda • Grease • Conventional wrench (for terminal clamp bolts) • Distilled water
Engine/intercooler coolant level (→P. 547)	• "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology "Toyota Super Long Life Coolant" is pre-mixed with 50% coolant and 50% deionized water. • Funnel (used only for adding coolant)
Engine oil level (→P. 544)	• "Toyota Genuine Motor Oil" or equivalent • Rag or paper towel • Funnel (used only for adding engine oil)
Fuses (→P. 577)	• Fuse with same amperage rating as original
Light bulbs (→P. 581)	• Bulb with same number and wattage rating as original • Phillips-head screwdriver • Flathead screwdriver • Wrench
Radiator, condenser and intercooler radiator (→P. 549)	—
Tire inflation pressure (→P. 568)	• Tire pressure gauge • Compressed air source
Washer fluid (→P. 553)	• Water or washer fluid containing antifreeze (for winter use) • Funnel (used only for adding water or washer fluid)

 WARNING

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

■ **When working on the engine compartment**

- Keep hands, clothing and tools away from the moving fan and engine drive belt.
- Be careful not to touch the engine, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel or the battery. Fuel and battery fumes are flammable.
- Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.
- Take care because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.
If you still experience discomfort, consult a doctor.

■ **When working near the electric cooling fans or radiator grille**

Be sure the engine switch is off.
With the engine switch in IGNITION ON mode, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P. 549)

■ **Safety glasses**

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting in your eyes.

 NOTICE

■ **If you remove the air cleaner filter**

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.


■ **If the fluid level is low or high**

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.
If the reservoir needs frequent refilling, it may indicate a serious problem.


Hood

Release the lock from the inside of the vehicle to open the hood.

- 1 Pull the hood lock release lever.
The hood will pop up slightly.

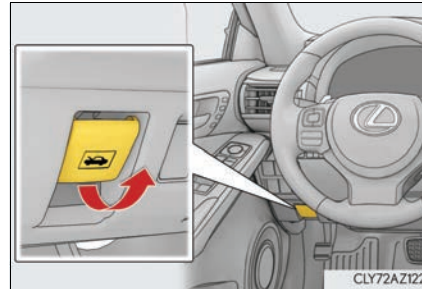

- 2 Pull up the auxiliary catch lever and lift the hood.

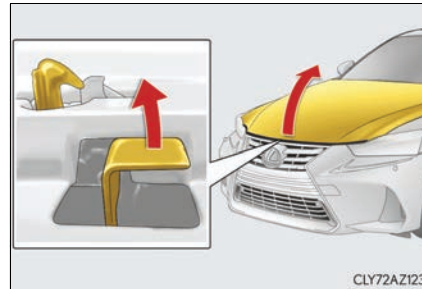

⚠ WARNING

■ Pre-driving check


Check that the hood is fully closed and locked.
If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

Positioning a floor jack

When using a floor jack, follow the instructions in the manual provided with the jack and perform the operation safely.


When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

◆ Front

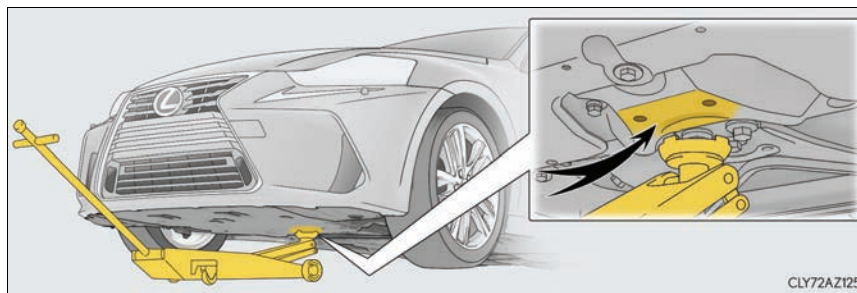


◆ Rear

- ▶ IS350/IS300 (vehicles without LSD [Limited Slip Differential])

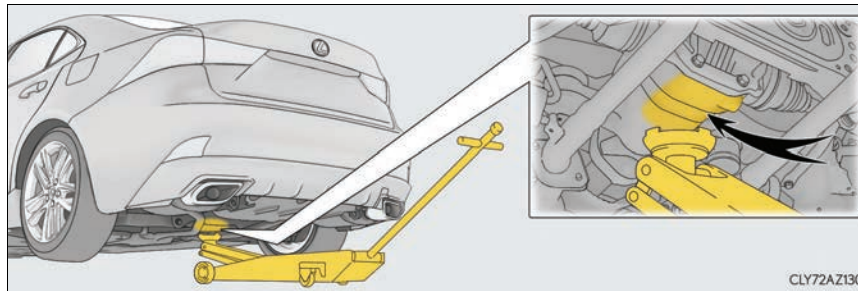


- ▶ IS350 (vehicles with LSD [Limited Slip Differential])

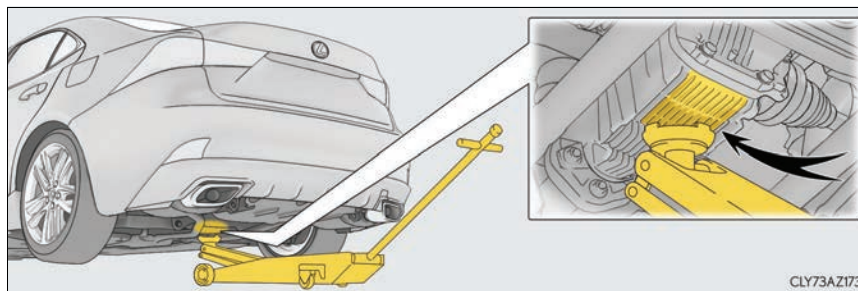

Engine compartment

► IS350

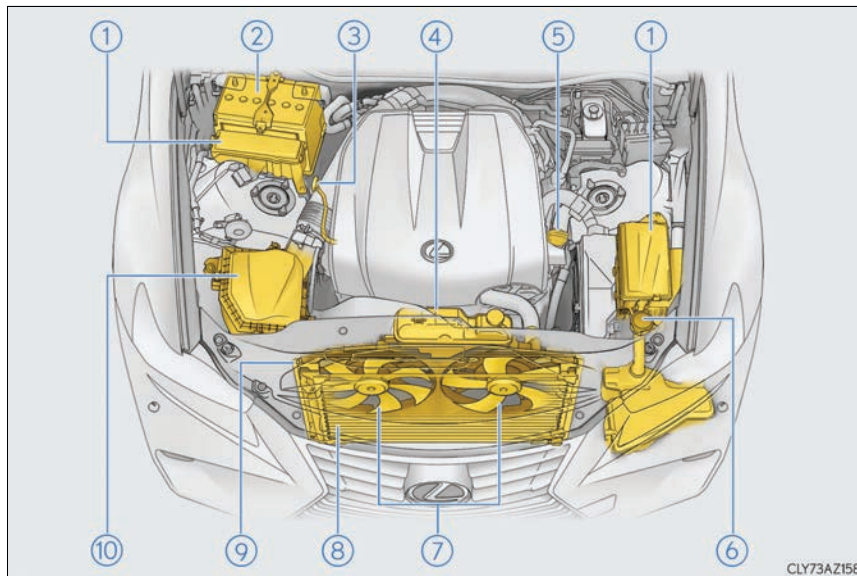


- | | |
|---------------------------------------|-------------------------------|
| ① Fuse boxes (→P. 577) | ⑥ Washer fluid tank (→P. 553) |
| ② Battery (→P. 550) | ⑦ Electric cooling fans |
| ③ Engine oil level dipstick (→P. 544) | ⑧ Condenser (→P. 549) |
| ④ Engine coolant reservoir (→P. 547) | ⑨ Radiator (→P. 549) |
| ⑤ Engine oil filler cap (→P. 545) | ⑩ Air cleaner (→P. 554) |

For right-hand drive vehicles:

The battery and the fuse box in front of the battery are located on the opposite side of the engine compartment.

► IS300

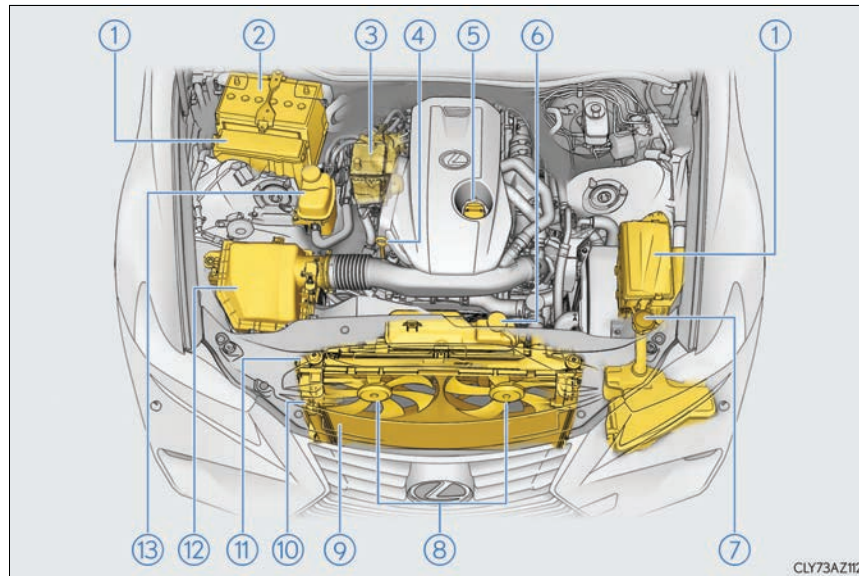

- | | | | |
|-----------------------------|-----------|---------------------------------|-----------|
| ① Fuse boxes | (→P. 577) | ⑦ Washer fluid tank | (→P. 553) |
| ② Battery | (→P. 550) | ⑧ Electric cooling fans | |
| ③ Intercooler | | ⑨ Condenser | (→P. 549) |
| ④ Engine oil level dipstick | (→P. 544) | ⑩ Intercooler radiator | |
| ⑤ Engine oil filler cap | (→P. 545) | ⑪ Radiator | (→P. 549) |
| ⑥ Engine coolant reservoir | (→P. 547) | ⑫ Air cleaner | (→P. 554) |
| | | ⑬ Intercooler coolant reservoir | (→P. 547) |

For right-hand drive vehicles:

The battery and the fuse box in front of the battery are located on the opposite side of the engine compartment.


Engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.


■ Checking the engine oil

- 1 Park the vehicle on level ground. After warming up the engine and turning off the engine, wait more than 5 minutes for the oil to drain back into the bottom of the engine.
- 2 Holding a rag under the end, pull the dipstick out.

► IS350

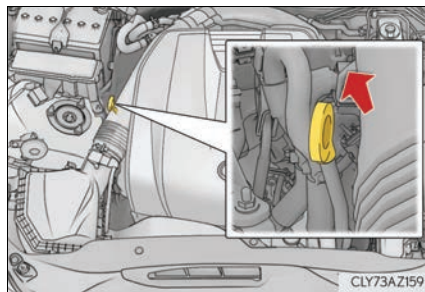


► IS300

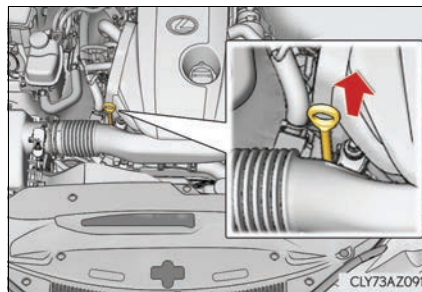

- 3 Wipe the dipstick clean.
- 4 Reinsert the dipstick fully.
- 5 Holding a rag under the end, pull the dipstick out and check the oil level.

- ① Low
- ② Normal
- ③ Excessive

The shape of the dipstick may differ depending on the type of vehicle or engine.

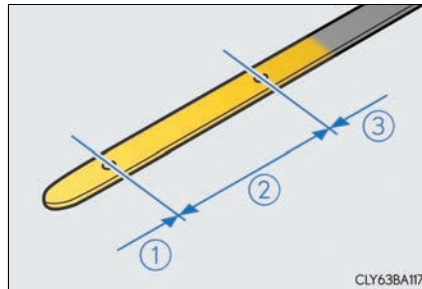


- 6 Wipe the dipstick and reinsert it fully.


■ Adding engine oil

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

► IS350

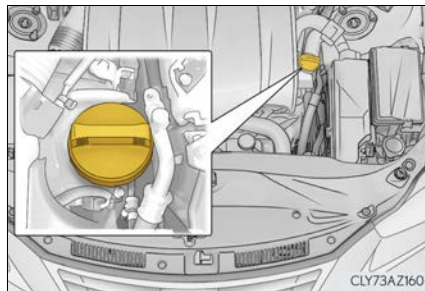

► IS300

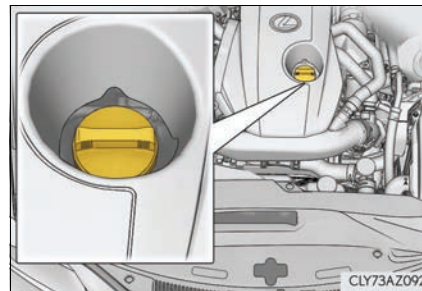

Make sure to check the oil type and prepare the items needed before adding oil.

Engine oil selection	→P. 666, 668
Oil quantity (Low → Full)	1.5 L (1.6 qt., 1.3 Imp. qt.)
Items	Clean funnel

- 1** Remove the oil filler cap by turning it counterclockwise.
- 2** Add engine oil slowly, checking the dipstick.
- 3** Install the oil filler cap by turning it clockwise.

■ Engine oil consumption

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, when towing, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

■ After changing the engine oil (on some models)

The engine oil maintenance data should be reset. Perform the following procedures:

- 1 Select  on the multi-information display. (→P. 134)
- 2 Press the  or  meter control switch on the steering wheel to select "Vehicle Settings" then "Oil Maintenance". (To confirm setting, press .)
- 3 Select "Yes" and then press .
- 4 A message is displayed on the multi-information display.

WARNING

■ Used engine oil

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground.
Call your Lexus dealer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

NOTICE

■ To prevent serious engine damage

Check the oil level on a regular basis.

■ When replacing the engine oil

- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.


Coolant

■ Engine coolant reservoir

The coolant level is satisfactory if it is between the "FULL" and "LOW" lines on the reservoir when the engine is cold.

► IS350

► IS300

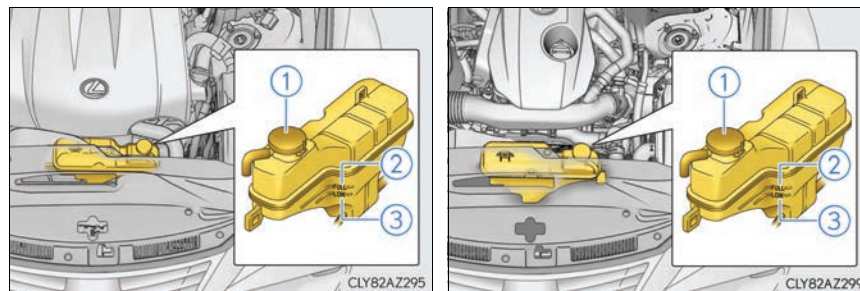

- ① Reservoir cap
- ② "FULL" line
- ③ "LOW" line


If the level is on or below the "LOW" line, add coolant up to the "FULL" line.
(→P. 655)

■ Intercooler coolant reservoir (IS300)

The coolant level is satisfactory if it is between the "F" and "L" lines on the reservoir when the engine is cold.

- ① Reservoir cap
- ② "F" line
- ③ "L" line

If the level is on or below the "L" line, add coolant up to the "F" line.
(→P. 655)

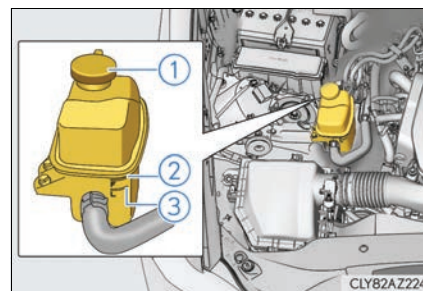

■ **Coolant selection**

Only use "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

"Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35°C [-31°F])

For more details about coolant, contact your Lexus dealer.

■ **If the coolant level drops within a short time of replenishing**

Visually check the radiator, hoses, engine coolant reservoir cap, drain cock and water pump.

If you cannot find a leak, have your Lexus dealer, test the cap and check for leaks in the cooling system.



WARNING

■ **When the engine is hot**

Do not remove the engine coolant reservoir cap, intercooler coolant reservoir cap (IS300), or coolant inlet cap. (→P. 655)

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.



NOTICE

■ **When adding coolant**

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

■ **If you spill coolant**

Be sure to wash it off with water to prevent it from damaging parts or paint.

Radiator, condenser and intercooler radiator (if equipped)

Check the radiator, condenser and intercooler radiator (if equipped) and clear away any foreign objects.

If any of the above parts are extremely dirty or you are not sure of their condition, have your vehicle inspected by your Lexus dealer.

**WARNING****■ When the engine is hot**

Do not touch the radiator, condenser or intercooler radiator (if equipped) as they may be hot and cause serious injuries, such as burns.

Battery

Check the battery as follows.

■ Caution symbols


The meaning of each caution symbol on the top of the battery are as follows:

	No smoking, no naked flames, no sparks		Battery acid
	Shield eyes		Note operating instructions
	Keep away from children		Explosive gas

■ Battery exterior

Make sure that the battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

- ① Terminals
- ② Hold-down clamp

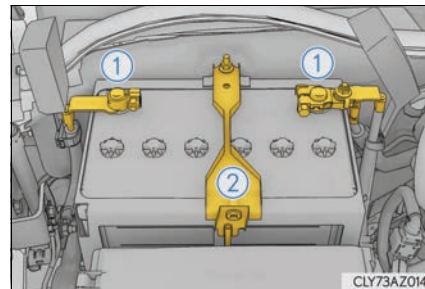


■ Checking battery fluid

Check that the level is between the "UPPER LEVEL" and "LOWER LEVEL" lines.

- ① "UPPER LEVEL" line
- ② "LOWER LEVEL" line

If the fluid level is at or below the "LOWER LEVEL" line, add distilled water.

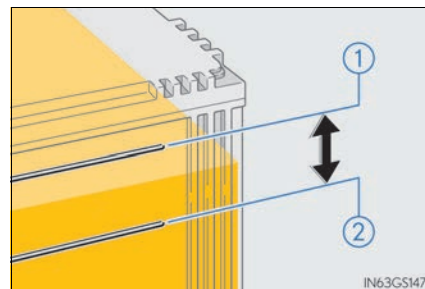


■ Adding distilled water

1 Remove the vent plug.

2 Add distilled water.

If the "UPPER LEVEL" line cannot be seen, check the fluid level by looking directly at the cell.

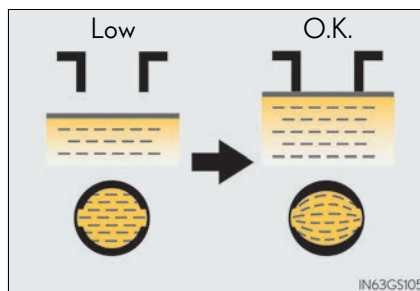

3 Put the vent plug back on and close it securely.

■ Before recharging

When recharging, the battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following before recharging:

- If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the battery.

■ After recharging/reconnecting the battery

The engine may not start. Follow the procedure below to initialize the system.

- 1 Shift the shift lever to P.
- 2 Open and close any of the doors.
- 3 Restart the engine.
 - Unlocking the doors using the smart entry & start system may not be possible immediately after reconnecting the battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
 - Start the engine with the engine switch in ACCESSORY mode. The engine may not start with the engine switch turned off. However, the engine will operate normally from the second attempt.
 - The engine switch mode is recorded by the vehicle. If the battery is disconnected and reconnected, the vehicle will return the engine switch mode to the status it was in before the battery was disconnected. Make sure to turn off the engine before disconnecting the battery. Take extra care when connecting the battery if the engine switch mode prior to the battery being disconnected is unknown.

If the engine will not start even after multiple attempts at all the methods contact your Lexus dealer.

**WARNING****■ Chemicals in the battery**

Batteries contain poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the battery:

- Do not cause sparks by touching the battery terminals with tools.
- Do not smoke or light a match near the battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

■ Where to safely charge the battery

Always charge the battery in an open area. Do not charge the battery in a garage or closed room where there is insufficient ventilation.

■ Emergency measures regarding electrolyte

- If electrolyte gets in your eyes
Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte
Drink a large quantity of water or milk. Get emergency medical attention immediately.

■ When there is insufficient battery fluid

Do not use if there is insufficient fluid in the battery. There is a possible danger that the battery may explode.

**NOTICE****■ When recharging the battery**


Never recharge the battery while the engine is running. Also, be sure all accessories are turned off.

■ When adding distilled water

Avoid overfilling. Water spilled during battery recharging may cause corrosion.

Washer fluid

If any washer does not work or the warning message appears on the multi-information display, the washer tank may be empty. Add washer fluid.

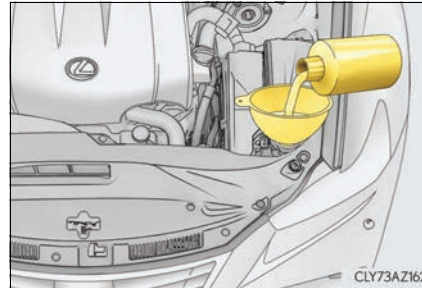

WARNING

■ When adding washer fluid

Do not add washer fluid when the engine is hot or running as washer fluid contains alcohol and may catch fire if spilled on the engine etc.

NOTICE

■ Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces, as well as damaging the pump leading to problems of the washer fluid not spraying.


■ Diluting washer fluid

Dilute washer fluid with water as necessary.
Refer to the freezing temperatures listed on the label of the washer fluid bottle.

Air cleaner filter

Check the air cleaner filter as follows:



- 1 Release the clips.

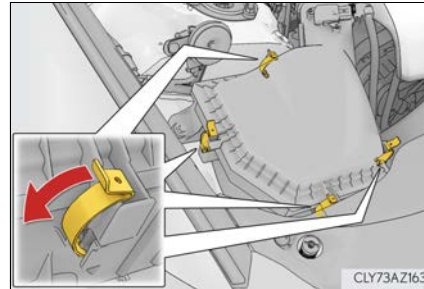

- 2 Lift the cover and take out the air cleaner filter.

► IS350

► IS300

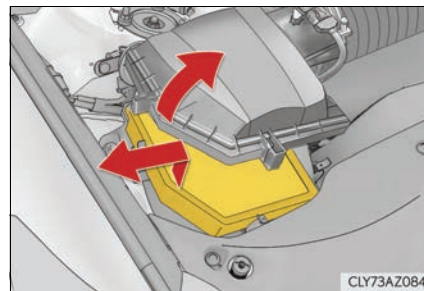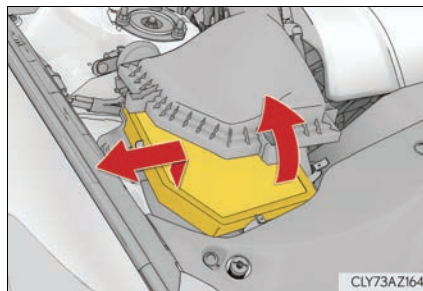

Inspect the outer surface of the filter, and replace the filter if it is extremely dirty. If the filter is only moderately dusty, use compressed air to blow dust out of the filter.

WARNING

■ To prevent inhaling dust

Wear a respirator when using compressed air to clean the air cleaner filter.

NOTICE

■ To prevent damaging the engine

Do not drive with the air cleaner filter removed. Doing so causes excessive engine wear.


Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

Checking tires

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear, such as excessive wear on one side of the tread.

Check the spare tire condition and pressure if not rotated.

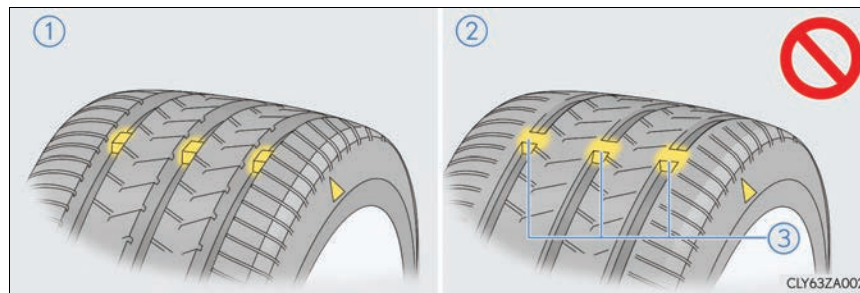

- ① New tread
- ② Worn tread
- ③ Treadwear indicator



The location of treadwear indicators is shown by a "TWI" or "Δ" mark, etc., molded into the sidewall of each tire.

Replace the tires if the treadwear indicators are showing on a tire.

Tire rotation

Rotate the tires in the order shown.

- ▶ Vehicles with front and rear tires of the same size
- ▶ Vehicles with front and rear tires of differing sizes

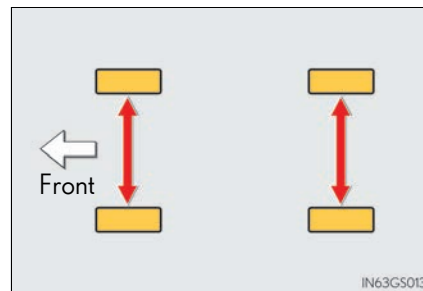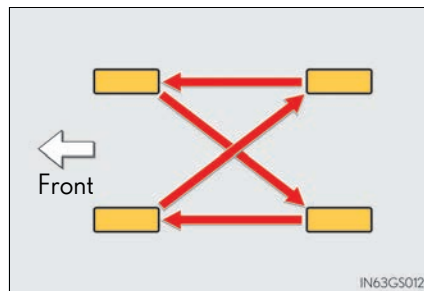

To equalize tire wear and help extend tire life, Lexus recommends that tire rotation is carried out approximately every 10000 km (6000 miles).

Do not fail to initialize the tire pressure warning system after tire rotation.

Tire pressure warning system

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

- ▶ Vehicles without a tire inflation pressure display function

If the tire pressure drops below a predetermined level, the driver is warned by a warning light. (→P. 603)

- ▶ Vehicles with a tire inflation pressure display function

- If the tire pressure drops below a predetermined level, the driver is warned by a screen display and a warning light. (→P. 622)
- The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.



◆ Installing tire pressure warning valves and transmitters

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. Have tire pressure warning valve and transmitter ID codes registered by your Lexus dealer. (→P. 558)

◆ Initializing the tire pressure warning system

■ The tire pressure warning system must be initialized in the following circumstances:

- When rotating the tires.
- When the tire inflation pressure is changed such as when changing traveling speed or load weight.
- When changing the tire size.

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.

■ How to initialize the tire pressure warning system

- 1 Park the vehicle in a safe place and turn the engine switch off.


Initialization cannot be performed while the vehicle is moving.

- 2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 673, 675)

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

- 3 Turn the engine switch to IGNITION ON mode.

- 4 Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

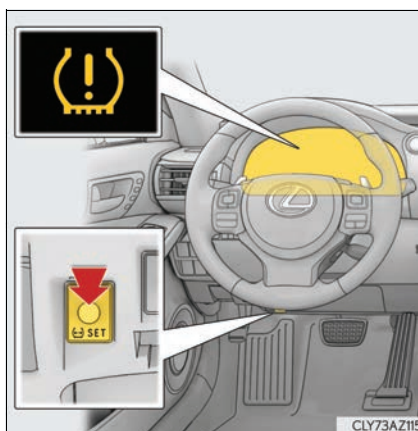

- 5 Wait for a few minutes with the engine switch in IGNITION ON mode and then turn the engine switch off.

◆ Registering ID codes

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code. Have the ID code registered by your Lexus dealer.

■ When to replace your vehicle's tires

Tires should be replaced if:

- The treadwear indicators are showing on a tire.
- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult your Lexus dealer.

■ Replacing tires and wheels

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 10 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.

■ Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

■ Routine tire inflation pressure checks

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

■ When rotating the tires (vehicles with a tire inflation pressure display function)

Make sure that the engine switch is off. If the tires are rotated while the engine switch is in IGNITION ON mode, the tire position information will not be updated.

If this accidentally occurs, either turn the engine switch to off and then to IGNITION ON mode, or initialize the system after checking that the tire pressure is properly adjusted.

■ Low profile tires

Generally, low profile tires will wear more rapidly and tire grip performance will be reduced on snowy and/or icy roads when compared to standard tires. Be sure to use snow tires or tire chains* on snowy and/or icy roads and drive carefully at a speed appropriate for road and weather conditions.

*: Tire chains cannot be mounted on the 18-inch tires. Snow tires should be used instead.

■ If the tread on snow tires wears down below 4 mm (0.16 in.)

The effectiveness of the tires as snow tires is lost.

■ Situations in which the tire pressure warning system may not operate properly

- In the following cases, the tire pressure warning system may not operate properly.
 - If non-genuine Lexus wheels are used.
 - A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
 - A tire has been replaced with a tire that is not of the specified size.
 - Tire chains etc. are equipped.
 - An auxiliary-supported run-flat tire is equipped.
 - If a window tint that affects the radio wave signals is installed.
 - If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
 - If the tire inflation pressure is extremely higher than the specified level.
 - If tires not equipped with tire pressure warning valves and transmitters are used.
 - If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer.
- Performance may be affected in the following situations.
 - Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
 - When carrying a portable radio, cellular phone, cordless phone or other wireless communication device

Vehicles with a tire inflation pressure display function: If tire position information is not correctly displayed due to the radio wave conditions, the display may be corrected by driving and changing the radio wave conditions.
- When the vehicle is parked, the time taken for the warning to start or go off could be extended.
- When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

■ The initialization operation

- Make sure to carry out initialization after adjusting the tire inflation pressure. Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.
- If you have accidentally turned the engine switch off during initialization, it is not necessary to press the reset switch again as initialization will restart automatically when the engine switch has been turned to IGNITION ON mode for the next time.
- If you accidentally press the reset switch when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.

■ Warning performance of the tire pressure warning system

The warning of the tire pressure warning system will change in accordance with the conditions under which it was initialized. For this reason, the system may give a warning even if the tire pressure does not reach a low enough level, or if the pressure is higher than the pressure that was adjusted to when the system was initialized.

■ When initialization of the tire pressure warning system has failed

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by your Lexus dealer.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not blink 3 times.
- After carrying out the initialization procedure, the tire pressure warning light blinks for 1 minute then stays on after driving for 20 minutes.

■ Certification for tire pressure warning system

- ▶ For vehicles sold in Aruba, Costa Rica, Panama, Peru and Dominican Republic
- Transmitter

FCC ID: PAXPMVC010

NOTE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- ▶ For vehicles sold in Aruba and Curacao
- Initiator

FCC ID:HYQ22AAA

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Dominican Republic
- Initiator

FCC ID:HYQ22AAA

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Singapore

Complies With
IMDA Standards
DA101418

- ▶ For vehicles sold in Taiwan
- Transmitter

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

- Initiator

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

- ▶ For vehicles sold in Korea
- Transmitter

Identification Number: PCX-PMV-C210

Equipment Name (Model Number): 특정소출력무선기기(PMV-C210)

Manufactured date: See product

Applicant: Pacific Industrial Co., Ltd.

Manufacturer: Pacific Industrial Co., Ltd.

Country of Origin: Japan

- Initiator



상호명/제조사

: DENSO CORPORATION

기자재의 명칭(모델명)

: 자계 유도식 무선기기(22AAA)


제조연월/제조국

: See lower part of the product. / Japan

식별부호

: KCC-CRM-DKR-22AAA

- For vehicles sold in the United Arab Emirates

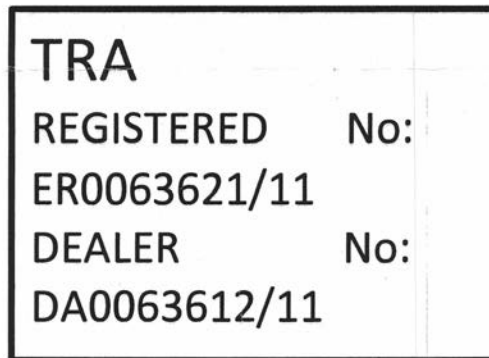

- For vehicles sold in Jordan

Type approval No.: TRC/LPD/2010/44

- For vehicles sold in South Africa

TPMS (Tire Pressure Monitoring System) Transmitter conforms to the requirement of ICASA.



- For vehicles sold in Argentina



WARNING

■ When inspecting or replacing tires

Observe the following precautions to prevent accidents.

Failure to do so may cause damage to parts of the drivetrain as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.


- Do not mix tires of different makes, models or tread patterns.
Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Lexus.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.
Do not use tires if you do not know how they were used previously.
- Vehicles with a compact spare tire: Do not tow if your vehicle has a compact spare tire installed.

■ When initializing the tire pressure warning system

Do not operate the tire pressure warning reset switch without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

■ Caution regarding interference with electronic devices (vehicles with a tire inflation pressure display function)

- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should not come within 450 mm (17.7 in.) of the tire pressure warning system initiators. The radio waves may affect the operation of such devices.

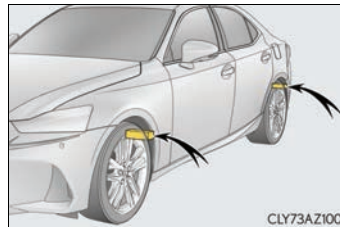

- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.
Radio waves could have unexpected effects on the operation of such medical devices.



NOTICE

■ **Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps**

- When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact your Lexus dealer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
- Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves and the tire pressure warning valves could be bound.
- When replacing tire valve caps, do not use tire valve caps other than those specified. The cap may become stuck.

■ **To avoid damage to the tire pressure warning valves and transmitters**

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Lexus dealer or other qualified service shop as soon as possible. After use of liquid sealant, make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P. 557)

■ **Driving on rough roads**

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

■ **Low profile tires**

Low profile tires may cause greater damage than usual to the tire wheel when sustaining impact from the road surface. Therefore, pay attention to the following:

- Be sure to use proper tire inflation pressure. If tires are under-inflated, they may be damaged more severely.
- Avoid potholes, uneven pavement, curbs and other road hazards. Failure to do so may lead to severe tire and wheel damage.

■ **If tire inflation pressure of each tire becomes low while driving**

Do not continue driving, or your tires and/or wheels may be ruined.

Tire inflation pressure

Make sure to maintain proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Lexus recommends that tire inflation pressure be checked once every two weeks. (→P. 673, 675)

■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel economy
- Reduced driving comfort and poor handling
- Reduced tire life due to wear
- Reduced safety
- Damage to the drivetrain

If a tire needs frequent inflating, have it checked by your Lexus dealer.

■ Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold.
If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge.
It is difficult to judge if a tire is properly inflated based only on its appearance.
- It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.
- Passengers and luggage weight should be placed so that the vehicle is balanced.

**WARNING****■ Proper inflation is critical to save tire performance**

Keep your tires properly inflated.

If the tires are not properly inflated, the following conditions may occur which could lead to an accident resulting in death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Air leaking from between tire and wheel
- Wheel deformation and/or tire damage
- Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges in the road, etc.)

**NOTICE****■ When inspecting and adjusting tire inflation pressure**

Be sure to put the tire valve caps back on.

If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset*.

Replacement wheels are available at your Lexus dealer.

*: Conventionally referred to as "offset".

Lexus does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

Aluminum wheel precautions

- Use only Lexus wheel nuts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Lexus genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

■ When replacing wheels

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed. (→P. 557)

**WARNING****■ When replacing wheels**

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

**NOTICE****■ Replacing tire pressure warning valves and transmitters**




- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by your Lexus dealer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at your Lexus dealer.
- Ensure that only genuine Lexus wheels are used on your vehicle.
Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

Air conditioning filter

The air conditioning filter must be changed regularly to maintain air conditioning efficiency.


Removal method

- 1 Turn the engine switch off.
- 2 Open the glove box. Lift up the side with the stay, disconnect the stay tabs and remove the partition by pulling horizontally.
- 3 Press the tabs and remove the filter cover.
- 4 Press the tabs and remove the filter case.

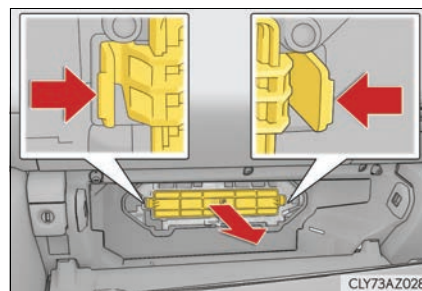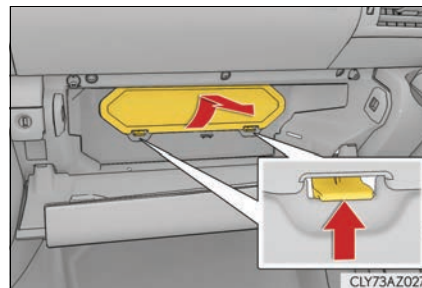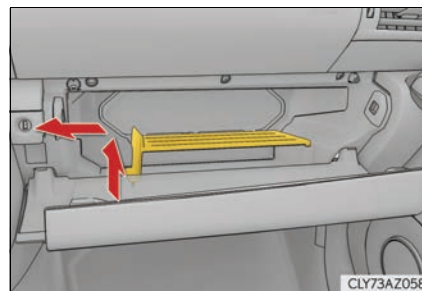

- 5 Remove the air conditioning filter from the filter case and replace it with a new one.

The "↑UP" marks shown on the filter and the filter case should be pointing up.

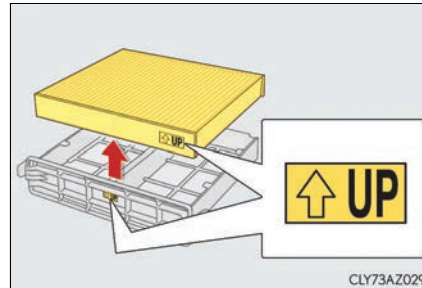

■ Checking interval

Replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (→P. 525)

■ If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.

■ Air conditioning filter with deodorizing function

When fragrances are placed in your vehicle, the deodorizing effect may become significantly weakened in a short period.

When an air conditioning odor comes out continuously, replace the air conditioning filter.



NOTICE

■ When using the air conditioning system

Make sure that a filter is always installed.

Using the air conditioning system without a filter may cause damage to the system.

Electronic key battery

Replace the battery with a new one if it is depleted.


You will need the following items:

- Flathead screwdriver
- Small flathead screwdriver
- Lithium battery CR2032

Replacing the battery


► Type A

- 1 Take out the mechanical key.

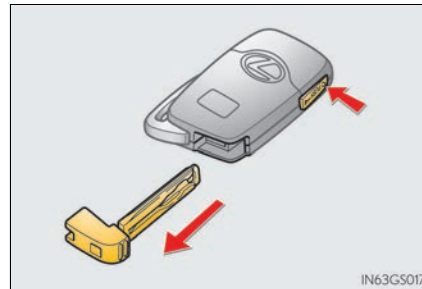


- 2 Remove the cover.

To prevent damage to the key, cover the tip of the screwdriver with a rag.

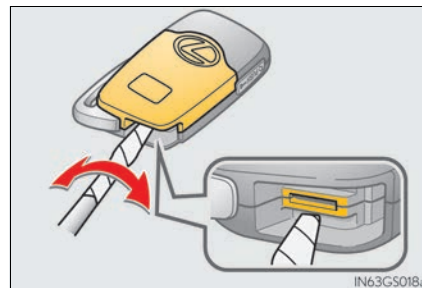


- 3 Remove the battery cover.

To prevent damage to the key, cover the tip of the screwdriver with a rag.

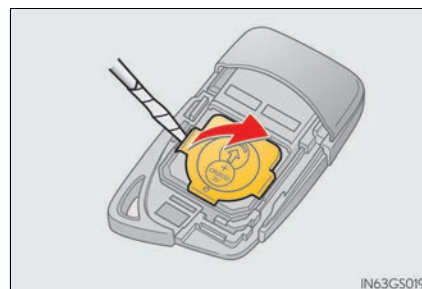


- 4** Remove the depleted battery.
Insert a new battery with the "+" terminal facing up.

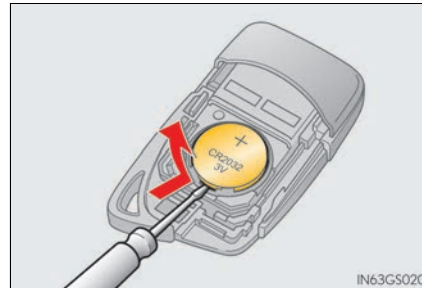


► Type B

- 1** Take out the mechanical key.

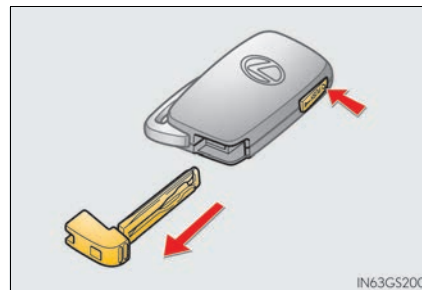


- 2** Remove the cover.
To prevent damage to the key, cover the tip of the screwdriver with a rag.

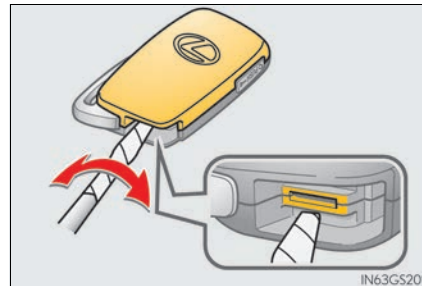

- 3** Remove the depleted battery.
Insert a new battery with the "+" terminal facing up.



廢電池請回收。

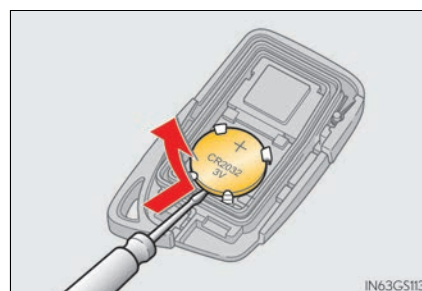

■ Use a CR2032 lithium battery

- Batteries can be purchased at your Lexus dealer, local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to local laws.

■ When the card key battery needs to be replaced (if equipped)

The battery for the card key is available only at Lexus dealers. Your Lexus dealer can replace the battery for you.

■ If the electronic key battery is depleted

The following symptoms may occur:

- The smart entry & start system and wireless remote control will not function properly.
- The operational range will be reduced.

**WARNING****■ Removed battery and other parts**

These parts are small and if swallowed by a child, they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.

**NOTICE****■ For normal operation after replacing the battery**

Observe the following precautions to prevent accidents:

- Always work with dry hands.
Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.


Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

1 Turn the engine switch off.


2 Open the fuse box cover.

► Engine compartment: type A fuse box (left-hand drive vehicles)

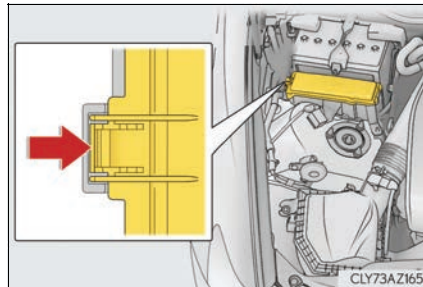


Push the tab in and lift the lid off.

► Engine compartment: type A fuse box (right-hand drive vehicles)

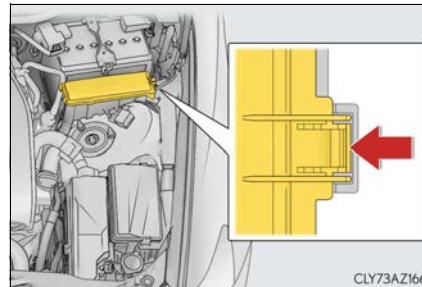


Push the tab in and lift the lid off.

► Engine compartment (type B fuse box)

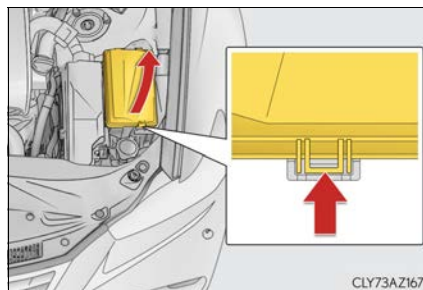


Push the tab in and lift the lid off.

- ▶ Left side instrument panel (left-hand drive vehicles)

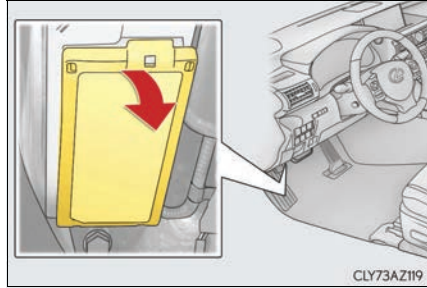

Remove the lid.


- ▶ Left side instrument panel (right-hand drive vehicles)

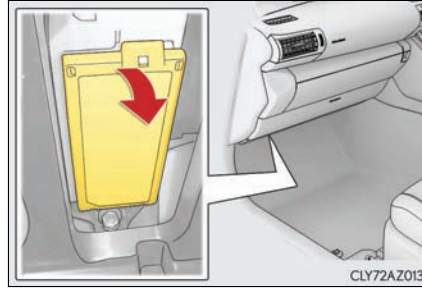

Remove the lid.

- 3 Remove the fuse with the pullout tool.

Only type A fuses can be removed using the pullout tool.

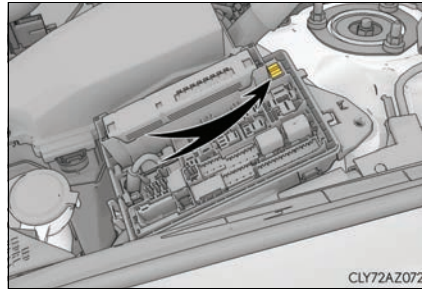

4 Check if the fuse is blown.

① Normal fuse

② Blown fuse


Type A and B:

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.


Type C and D:

Contact your Lexus dealer.


► Type A

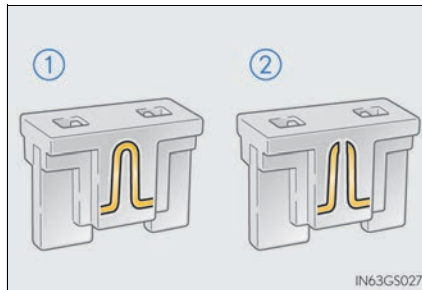


► Type B

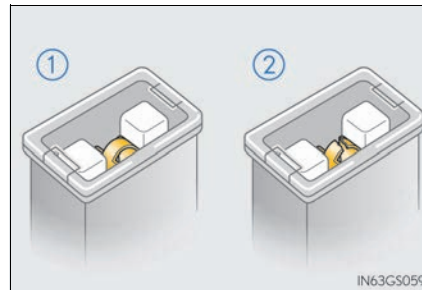

► Type C

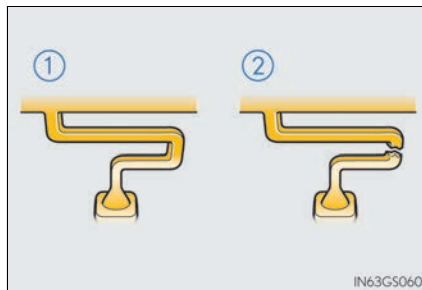

► Type D

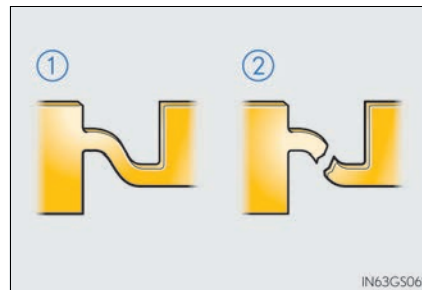

■ After a fuse is replaced

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 581)
- If the replaced fuse blows again, have the vehicle inspected by your Lexus dealer.

■ If there is an overload in a circuit

The fuses are designed to blow, protecting the wiring harness from damage.

■ When replacing light bulbs

Lexus recommends that you use genuine Lexus products designed for this vehicle. Because certain bulbs are connected to circuits designed to prevent overload, non-genuine parts or parts not designed for this vehicle may be unusable.



WARNING

■ To prevent system breakdowns and vehicle fire

Observe the following precautions.

Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Lexus fuse or equivalent.
Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuses or fuse boxes.



NOTICE

■ Before replacing fuses

Have the cause of electrical overload determined and repaired by your Lexus dealer as soon as possible.


Light bulbs

You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. As there is a danger that components may be damaged, we recommend that replacement is carried out by your Lexus dealer.

Preparing for light bulb replacement

Check the wattage of the light bulb to be replaced. (→P. 676)

Bulb locations

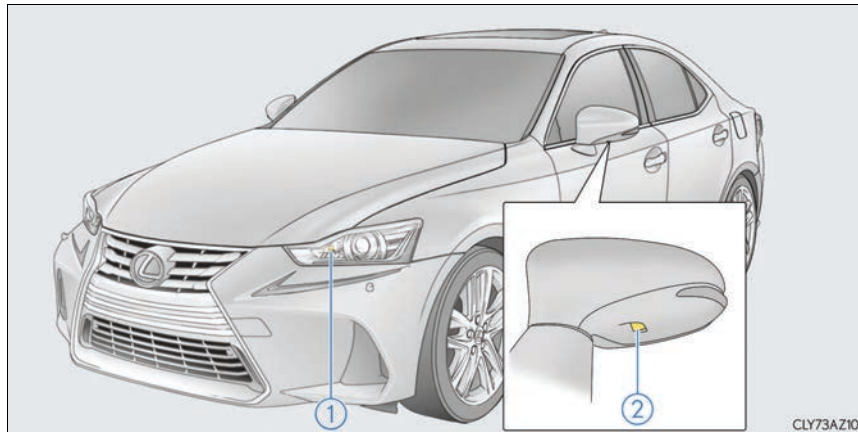


- ① Front turn signal light (bulb type)
- ② Outer foot light


Replacing light bulbs

■ Front turn signal lights (bulb type)


- 1 For the left side only: Pinch the clip to remove the washer fluid filler opening.

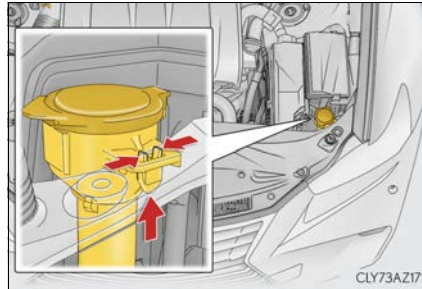

- 2 Turn the bulb base counterclockwise.

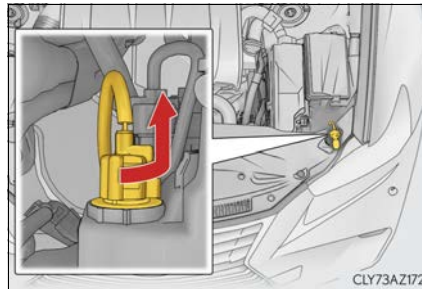


- 3 Remove the light bulb.

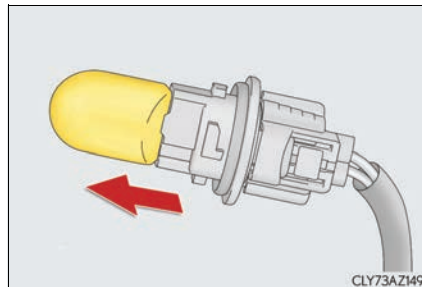

- 4 Install a new light bulb then install the bulb base to the light unit by inserting it and turning the bulb base clockwise.


After installing the light bulb, turn on the front turn signal light to visually check that there is no light leaking from the bulb base.

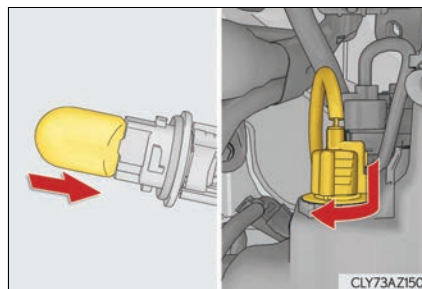

- 5 After replacing the left side bulb, install the washer fluid filler opening to its original position.

■ Outer foot lights


- 1 Press the upper part of the outside rear view mirror to tilt the mirror face upward, and apply protective tape to the lower part of the mirror cover.

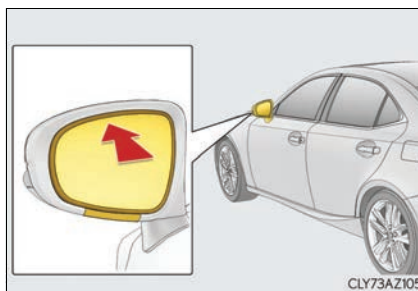

- 2 Insert 2 flathead screwdrivers wrapped in protective tape, and disconnect the tabs behind the mirror.

Pry the mirror out toward you, disconnecting the tabs 2 at a time.

Work carefully, ensuring that you do not drop the mirror.

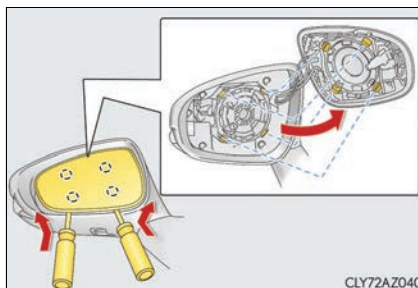


- 3 Disconnect the connectors behind the mirror, and remove the mirror.

When removing the thin connectors, make sure to mark one of the connectors with a piece of tape, to avoid mixing them up when reinstalling.


Work carefully, ensuring that you do not drop the mirror.

When handling the mirror, do not touch the parts applied with grease.


The number of connectors equipped differs by vehicle specification.

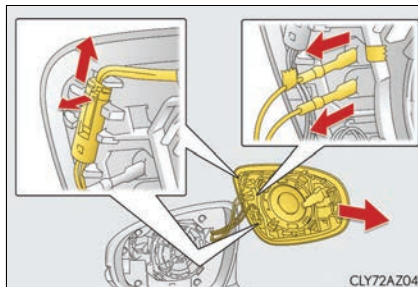


- 4 Remove the 5 screws and take off the mirror's outer cover and the cover behind the mirror.

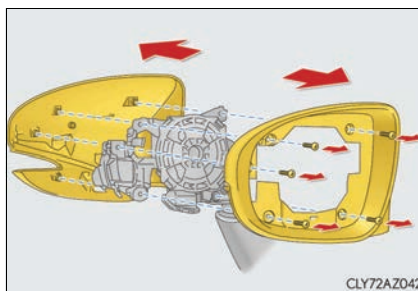

- 5** Turn the bulb base counterclockwise.

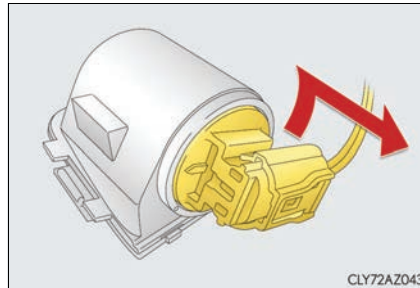


- 6** Remove the light bulb.

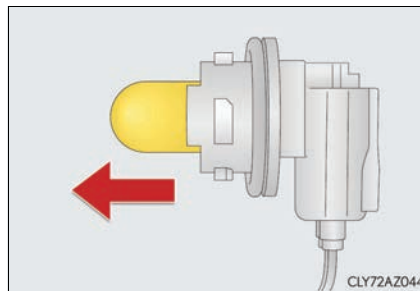

- 7** Install a new light bulb then install the bulb base to the light unit by inserting it and turning the bulb base clockwise.

When inserting the socket, align the marks printed on the light body and the socket.

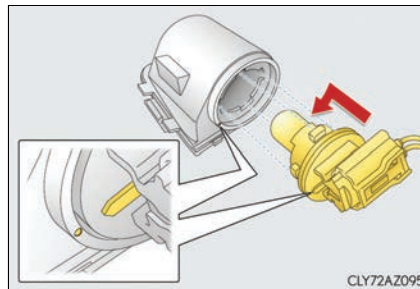


- 8** Install the visor cover on the mirror frame, secure it with a screw, and install the side turn signal light and outer foot light.

Use only the screw position shown in the illustration.


Align the tabs on the side turn signal light unit and the cover and install it.

Interlock the groove of the outer foot light unit with the tabs on the cover and secure it.

After installing the outer foot light unit, turn on the outer foot light to visually check that there is no light leaking from the bulb base.

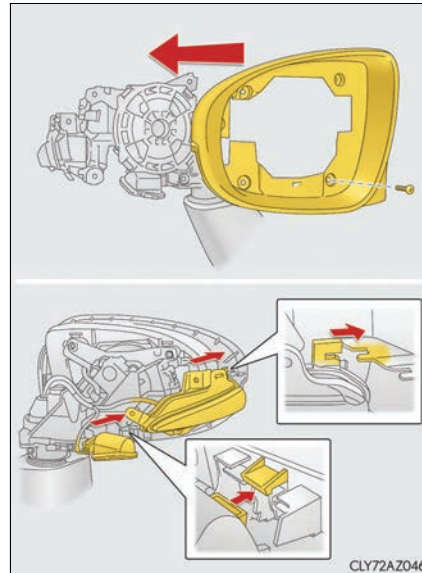


- 9** Disconnect the tabs, and separate the top and bottom of the outer cover of the mirror.

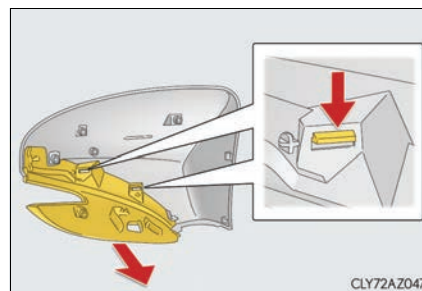


- 10** Install the outer cover of the mirror by installing the lower side first, then installing the upper side.

When installing the lower side of the cover, insert the side turn signal light pin into the hole in the cover.

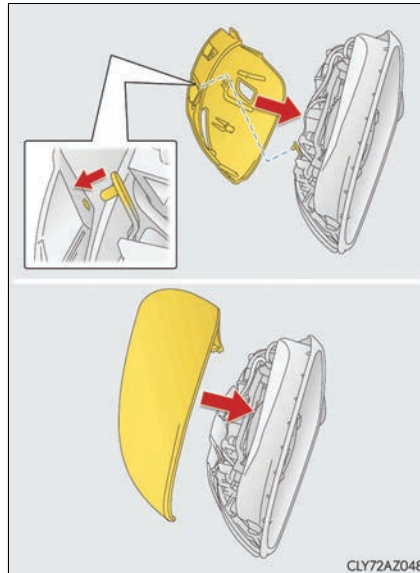

- 11** Secure the cover with screws and reconnect the connectors back together.

Secure the wire harness by reinstalling it to the hooks on the back side of the mirror surface as it was.

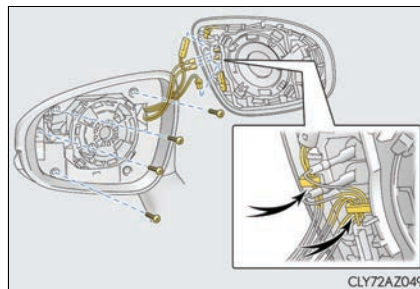


- 12** Align the tabs, and secure the mirror by pushing in each diagonally-opposite pair of tabs in order.

Make sure to insert the tabs in order as shown in the illustration, and push them in until a click is heard.

If you do not hear the click, do not force the tabs in. Instead, remove the mirror and check that the tabs are aligned.

After securing the mirror, remove the protective tape applied to the lower part of the mirror cover.

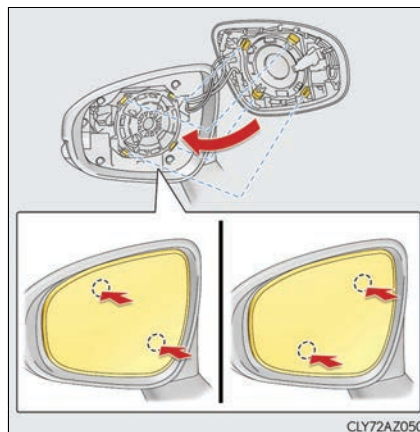

■ Replacing the following bulbs

If any of the lights listed below has burnt out, have it replaced by your Lexus dealer.

- Headlights
- Front position lights and daytime running lights
- Front turn signal lights (LED type)
- Side turn signal lights
- Stop/tail lights
- Tail lights
- Back-up light
- Rear turn signal lights
- Rear fog light (if equipped)
- High mounted stoplight
- License plate lights

■ LED Lights

The lights other than the front turn signal lights (bulb type) and outer foot lights each consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to your Lexus dealer to have the light replaced.

■ Condensation build-up on the inside of the lens

Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction. Contact your Lexus dealer for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the headlight.

■ When replacing the front turn signal lights (bulb type)

When the washer fluid filler opening is removed with a large amount of washer fluid contained in the washer tank, washer fluid may spill onto the vehicle and cleaning may be required.

■ When replacing light bulbs

→P. 580

**WARNING****■ Replacing light bulbs**

- Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights.
The bulbs become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb.
Also, if the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the headlight unit. This may damage the headlights or cause condensation to build up on the lens.

■ To prevent damage or fire

- Make sure bulbs are fully seated and locked.
- Check the wattage of the bulb before installing to prevent heat damage.

**NOTICE****■ When replacing the outer foot lights**

If the front window is stopping you from conducting the replace operation properly, open the window on the side you are working on to allow you enough space to work. Continuing the operation without giving yourself enough space to work could lead you to scratch the vehicle.

When trouble arises

8

8-1. Essential information

Emergency flashers	590
If your vehicle has to be stopped in an emergency	591
If the vehicle is trapped in rising water	592

8-2. Steps to take in an
emergency


If your vehicle needs to be towed	593
If you think something is wrong	599
Fuel pump shut off system	600
If a warning light turns on or a warning buzzer sounds	601
If a warning message is displayed	607
If you have a flat tire (vehicles with a spare tire)	632
If you have a flat tire (vehicles with run-flat tires)	644
If the engine will not start	645
If the electronic key does not operate properly	647
If the vehicle battery is discharged	650
If your vehicle overheats	655
If the vehicle becomes stuck	659

Emergency flashers

The emergency flashers are used to warn other drivers when the vehicle has to be stopped in the road due to a breakdown, etc.

Press the switch.

All the turn signals will flash.
To turn them off, press the switch once again.

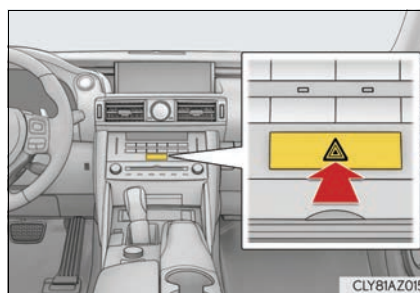

■ Emergency flashers

If the emergency flashers are used for a long time while the engine is not operating, the battery may discharge.

If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1 Steadily step on the brake pedal with both feet and firmly depress it.
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2 Shift the shift lever to N.
► If the shift lever is shifted to N
- 3 After slowing down, stop the vehicle in a safe place by the road.
- 4 Stop the engine.
► If the shift lever cannot be shifted to N
- 3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.
- 4 To stop the engine, press and hold the engine switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.



- 5 Stop the vehicle in a safe place by the road.

WARNING

■ If the engine has to be turned off while driving

Power assist for the brakes and steering wheel will be lost, making the brake pedal harder to depress and the steering wheel heavier to turn. Decelerate as much as possible before turning off the engine.

If the vehicle is trapped in rising water

In the event the vehicle is submerged in water, remain calm and perform the following.

- Remove the seat belt first.
- If the door can be opened, open the door and exit the vehicle.
- If the door can not be opened, open the window using the power window switch and exit the vehicle through the window.
- If the window can not be opened using the power window switch, remain calm, wait until the water level inside the vehicle rises to the point that the water pressure inside of the vehicle equals the water pressure outside of the vehicle, and then open the door and exit the vehicle.

WARNING

■ Using an emergency hammer* for emergency escape

The front side windows and rear side windows, as well as the rear window can be shattered with an emergency hammer* used for emergency escape. However, an emergency hammer can not shatter the windshield as it is laminated glass.

*: Contact your Lexus dealer or aftermarket accessory manufacturer for further information about an emergency hammer.

■ Escaping the vehicle from the window

There are cases where escaping the vehicle from the window is not possible due to seating position, passenger body type, etc.

When using an emergency hammer, consider your seat location and the size of the window opening to ensure that the opening is accessible and large enough to escape.

If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Lexus dealer or commercial towing service, using a wheel-lift type truck or flatbed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.


Situations when it is necessary to contact dealers before towing

The following may indicate a problem with your transmission. Contact your Lexus dealer or commercial towing service before towing.


- The engine is running but the vehicle does not move.
- The vehicle makes an abnormal sound.

Towing with a sling-type truck

Do not tow with a sling-type truck to prevent body damage.

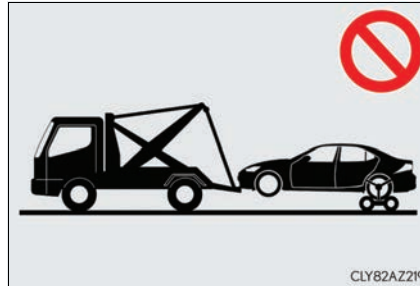
**Towing with a wheel-lift type truck**

► From the front

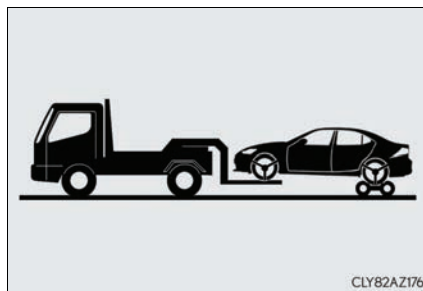

Use a towing dolly under the rear wheels.


► From the rear

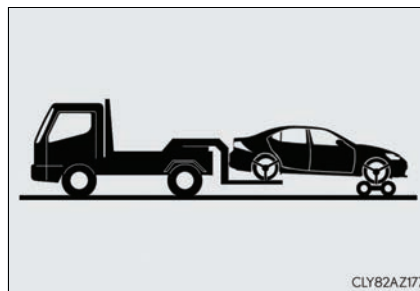

Use a towing dolly under the front wheels.


Using a flatbed truck

If your vehicle is transported by a flatbed truck, it should be tied down at the locations shown in the illustration.

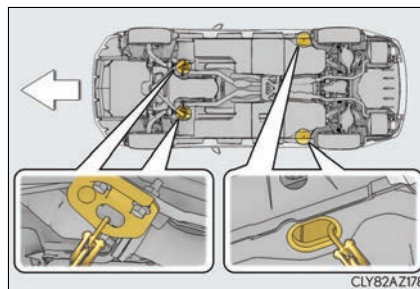

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

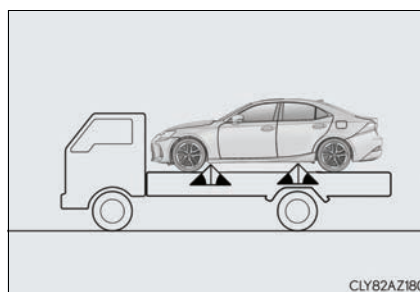

Emergency towing

If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing eyelets. This should only be attempted on hard surfaced roads for at most 80 km (50 miles) at under 30 km/h (18 mph).


A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

Emergency towing procedure


- 1** Take out the towing eyelet. (→P. 633)

- 2** Remove the eyelet cover using a flathead screwdriver.


To protect the bodywork, place a rag between the screwdriver and the vehicle body as shown in the illustration.

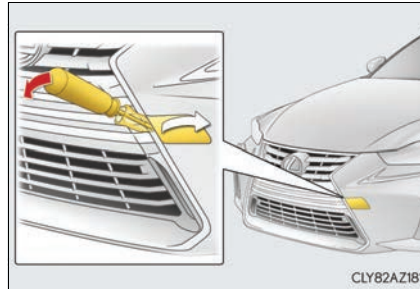

- 3** Insert the towing eyelet into the hole and tighten partially by hand.

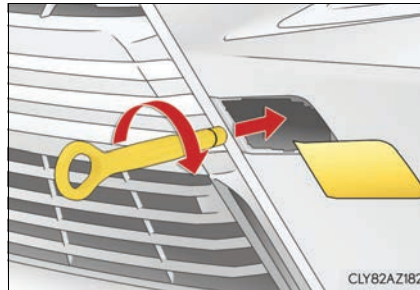

- 4** Tighten down the towing eyelet securely using a wheel nut wrench or hard metal bar.

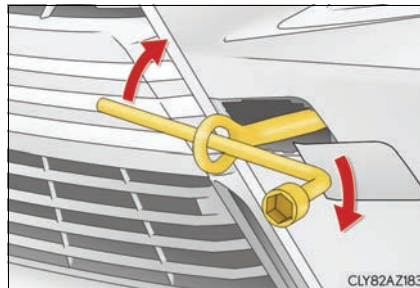

- 5** Securely attach cables or chains to the towing eyelet.
Take care not to damage the vehicle body.
- 6** Enter the vehicle being towed and start the engine.
If the engine does not start, turn the engine switch to IGNITION ON mode.
- 7** Shift the shift lever to N and release the parking brake.
When the shift lever cannot be shifted: →P. 232

■ While towing

If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.

■ Wheel nut wrench


Wheel nut wrench is installed in the trunk. (→P. 633)

⚠ WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ When towing the vehicle

Be sure to transport the vehicle with all four wheels raised off the ground. If the vehicle is towed with the tires contacting the ground, the drivetrain and related parts may be damaged or an accident may occur due to a change in direction of the vehicle.

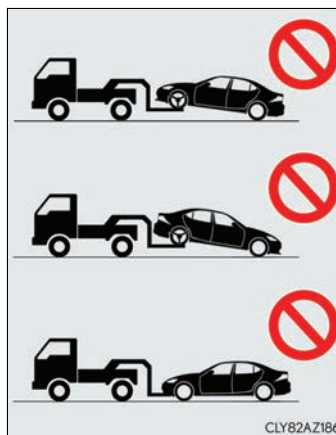

■ While towing

- When towing using cables or chains, avoid sudden starts, etc. which place excessive stress on the towing eyelets, cables or chains. The towing eyelets, cables or chains may become damaged, broken debris may hit people, and cause serious damage.
- Do not turn the engine switch off.
There is a possibility that the steering wheel is locked and cannot be operated.

■ Installing towing eyelet to the vehicle

Make sure that towing eyelet is installed securely.
If not securely installed, towing eyelet may come loose during towing.



NOTICE

■ To prevent damage to the vehicle when towing using a wheel-lift type truck

- Do not tow the vehicle from the rear when the engine switch is off. The steering lock mechanism is not strong enough to hold the front wheels straight.
- When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

■ To prevent damage to the vehicle when towing with a sling-type truck

Do not tow with a sling-type truck, either from the front or rear.

■ To prevent damage to the vehicle during emergency towing

Do not secure cables or chains to the suspension components.

■ Before towing the vehicle (vehicles with a Stop & Start system)

To protect components of the Stop & Start system, before towing the vehicle, turn the engine switch off and then restart the engine. If the engine cannot be started, turn the engine switch to IGNITION ON mode.

If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Lexus dealer as soon as possible.

Visible symptoms

- Fluid leaks under the vehicle.
(Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge needle continually points higher than normal.

Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the engine

Operational symptoms

- Engine missing, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

Fuel pump shut off system

To minimize the risk of fuel leakage when the engine stalls or when an airbag inflates upon collision, the fuel pump shut off system stops the supply of fuel to the engine.

Follow the procedure below to restart the engine after the system is activated.

- 1 Turn the engine switch to ACCESSORY mode or turn it off.
- 2 Restart the engine.



NOTICE

■ Before starting the engine

Inspect the ground under the vehicle.

If you find that fuel has leaked onto the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

If a warning light turns on or a warning buzzer sounds

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by your Lexus dealer.

Warning light and warning buzzer list

Warning light	Warning light/Details/Actions
	Brake system warning light Indicates that: • The brake fluid level is low; or • The brake system is malfunctioning → Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.
 (If equipped)	Charging system warning light Indicates a malfunction in the vehicle's charging system → Immediately stop the vehicle in a safe place and contact your Lexus dealer.
	Malfunction indicator lamp Indicates a malfunction in: • The electronic engine control system; • The electronic throttle control system; or • The electronic automatic transmission control system → Have the vehicle inspected by your Lexus dealer immediately.
	SRS warning light Indicates a malfunction in: • The SRS airbag system; or • The seat belt pretensioner system → Have the vehicle inspected by your Lexus dealer immediately.
	ABS warning light Indicates a malfunction in: • The ABS; or • The brake assist system → Have the vehicle inspected by your Lexus dealer immediately.
	Parking brake warning light (warning buzzer)*¹ Indicates that the parking brake is engaged → Release the parking brake.

Warning light	Warning light/Details/Actions
	Electric power steering system warning light (warning buzzer) Indicates a malfunction in the EPS (Electric Power Steering) system → Have the vehicle inspected by your Lexus dealer immediately.
 (If equipped)	LDA (Lane Departure Alert) indicator If the LDA indicator is illuminated: Indicates a malfunction in the LDA (Lane Departure Alert with steering control) system. → Check the warning message displayed on the multi-information display. (→P. 607) If the LDA indicator flashes: Indicates that the vehicle has deviated from the lane (while the LDA [Lane Departure Alert with steering control] system is operating) → Check the area around the vehicle and return the vehicle to between the lane lines.
 (Flashes or illuminates) (If equipped)	PCS warning light Indicates a malfunction in the PCS (Pre-Collision System) or that the system is temporarily unavailable due to the vehicle being extremely hot/cold, or dirt around a front sensor, etc. (→P. 278, 617) → Follow the instructions displayed on the multi-information display. (→P. 278, 617) If the PCS (Pre-Collision System) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate. → P. 278
	Slip indicator Indicates a malfunction in: • The VSC (Vehicle Stability Control) system; • The TRC (Traction Control) system; or • The hill-start assist control system The light will flash when the VSC or the TRC system is operating. → Have the vehicle inspected by your Lexus dealer immediately.
 (Flashes) (If equipped)	Stop & Start cancel indicator Indicates a malfunction in the Stop & Start system (The Stop & Start cancel indicator will come on when the system is canceled.: →P. 307) → Have the vehicle inspected by your Lexus dealer immediately.
	Open door warning light (warning buzzer)*2 Indicates that a door or the trunk is not fully closed → Check that all the doors and the trunk are closed.

Warning light	Warning light/Details/Actions
	Low fuel level warning light Indicates that remaining fuel is approximately 10 L (2.6 gal., 2.2 Imp. gal.) or less → Refuel the vehicle.
	Driver's and front passenger's seat belt reminder light (warning buzzer)*3 Warns the driver and/or front passenger to fasten their seat belts → Fasten the seat belt. If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) turn off.
 (If equipped)	Rear passengers' seat belt reminder lights (warning buzzer)*4 Warns the rear passengers to fasten their seat belts → Fasten the seat belt.
	Master warning light A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction. → P. 607
	Tire pressure warning light When the light comes on: Low tire inflation pressure such as • Natural causes (→P. 605) • Flat tire (→P. 632, 644) → Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer. When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system → Have the system checked by your Lexus dealer.

*1: Parking brake engaged warning buzzer:

→P. 611

*2: Open door warning buzzer:

→P. 609

*3: Driver's and front passenger's seat belt warning buzzer:

► GCC countries^{*5}, Jordan and Lebanon

Driver's seat belt warning buzzer:

The driver's seat belt warning buzzer sounds to alert the driver that his or her seat belt is not fastened. Once the engine switch is turned IGNITION ON mode, the buzzer sounds. If the seat belt is still unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

Front passenger's seat belt warning buzzer:

The front passenger's seat belt warning buzzer sounds to alert the front passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

► Brunei, Macau, Malaysia, Singapore, South Africa and Thailand

Driver's and front passenger's seat belt warning buzzer:

The driver's and front passenger's seat belt warning buzzer sounds to alert the driver and front passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

*4: Rear passenger's seat belt warning buzzer:

The rear passengers' seat belt warning buzzer sounds to alert the rear passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time, after the seat belt is fastened and unfastened and the vehicle reaches a certain speed.

*5: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

■ Front passenger detection sensor, seat belt reminder and warning buzzer

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ If the malfunction indicator lamp comes on while driving

The malfunction indicator lamp will come on if the fuel tank becomes completely empty. If the fuel tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact your Lexus dealer as soon as possible.

■ Electric power steering system warning light (warning buzzer)

When the battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sound.

■ When the tire pressure warning light comes on

Carry out the following procedure after the tire temperature has lowered sufficiently.

- Check the tire inflation pressure and adjust to the appropriate level.
- If the warning light does not go out even after several minutes, check that the tire inflation pressure is at the specified level and carry out initialization.

The warning light may come on again if the above operations are conducted without first allowing the tire temperature to lower sufficiently.

■ The tire pressure warning light may come on due to natural causes

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

■ When a tire is replaced with the spare tire (if equipped)

The compact spare tire is not equipped with a tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire.

■ Conditions that the tire pressure warning system may not function properly

→P. 560

■ If the tire pressure warning light frequently comes on after blinking for 1 minute

If the tire pressure warning light frequently comes on after blinking for 1 minute when the engine switch is turned to IGNITION ON mode, have it checked by your Lexus dealer.

■ Warning buzzer

In some cases, the buzzer may not be heard due to being in a noisy location or audio sound.

**WARNING**

■ **If both the ABS and the brake system warning lights remain on**

Stop your vehicle in a safe place immediately and contact your Lexus dealer. The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

■ **When the electric power steering system warning light comes on**

The steering wheel may become extremely heavy.

When steering wheel operations are heavier than usual, grip the steering wheel firmly and operate it using more force than usual.

■ **If the tire pressure warning light comes on**

Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.

► Vehicles with a compact spare tire

● Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.

● If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest Lexus dealer.

● Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

► Vehicles with run-flat tires

● Decelerate to the lowest appropriate speed as soon as possible. Do not drive over 60 km/h (37 mph).

● Check and adjust the tire inflation pressure immediately.

● If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Have the tire replaced by the nearest Lexus dealer.

● Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

■ **If a blowout or sudden air leakage should occur**

The tire pressure warning system may not activate immediately.

**NOTICE**

■ **To ensure the tire pressure warning system operates properly**

Do not install tires with different specifications or makers, as the tire pressure warning system may not operate properly.

If a warning message is displayed

If a warning is shown on the multi-information display, stay calm and perform the following actions:

- ▶ Except F SPORT models
- ▶ F SPORT models (when the main meter is in the center position)



- ▶ F SPORT models (when the main meter is in the right-side position)




① Master warning light


The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display.

② Multi-information display

If any of the warning lights come on again after the following actions have been performed, contact your Lexus dealer.



Warning message and warning buzzer list

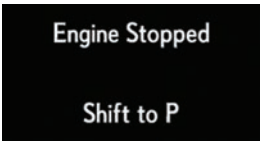Warning message	Details/Actions
 (If equipped)	Indicates that there is a high possibility of a frontal collision, or that the pre-collision braking function is operating A buzzer also sounds. → Avoid the collision by decelerating using the brakes or taking other evasive actions.
  (Flashes)	Indicates that the engine was stopped with the shift lever not in P A buzzer also sounds. → Shift the shift lever to P.
  (Flashes)	Indicates that the engine was stopped while driving A buzzer also sounds. → Stop the vehicle in a safe place such as the shoulder of a road.
 (If equipped)	Indicates that your vehicle is nearing the vehicle ahead (in vehicle-to-vehicle distance control mode) A buzzer also sounds. → Slow the vehicle by applying the brakes.

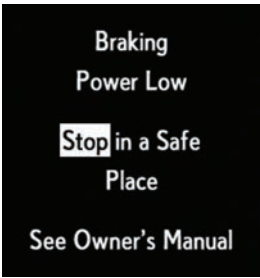Warning message	Details/Actions
  (Flashes) (If equipped)	Indicates that the vehicle has deviated from the lane (while the LDA [Lane Departure Alert with steering control] system is operating) The lane line on the side the vehicle has deviated from flashes in amber. A buzzer also sounds. → Check around the vehicle and back to inside of the lane lines.
  (Flashes)	Indicates that: • The brake fluid level is low; or • The brake system is malfunctioning A buzzer also sounds. → Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.
 	Indicates that one or more of the doors is not fully closed The system also indicates which doors are not fully closed. If the vehicle reaches a speed of 5 km/h (3 mph),  flashes and a buzzer sounds to indicate that the door(s) are not yet fully closed. → Make sure that all the doors are closed.
	Indicates that the hood is not fully closed If the vehicle reaches a speed of 5 km/h (3 mph),  flashes and a buzzer sounds to indicate that the hood is not yet fully closed. → Close the hood.

Warning message	Details/Actions
	Indicates that the trunk is not fully closed If the vehicle reaches a speed of 5 km/h (3 mph),  flashes and a buzzer sounds to indicate that the trunk is not yet fully closed. → Close the trunk.
Parking Assist Malfunction  (If equipped)	Indicates a malfunction in the Lexus parking assist-sensor The assist-sensors flash. A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
Clean Parking Assist Sensor  (If equipped)	Indicates that a Lexus parking assist-sensor is dirty or covered with ice A buzzer also sounds. → Clean the sensor.

Warning message	Details/Actions
Power Steering Malfunction Steering Power Low Visit Your Dealer	Indicates a malfunction in the EPS (Electric Power Steering) system A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
Steering Power Low Visit Your Dealer	
Power Steering Malfunction Visit Your Dealer	
 	
Release Parking Brake   (Flashes)	Indicates that the vehicle is being driven at 5 km/h (3 mph) or more with the parking brake still engaged A buzzer also sounds. → Release the parking brake.

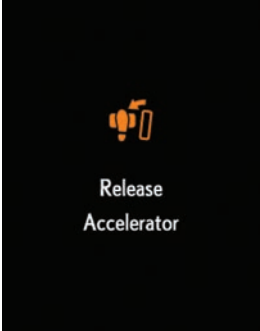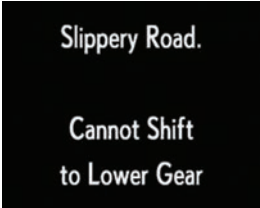Warning message	Details/Actions
  (Flashes)	Indicates that the shift position was changed and Drive-Start Control was operated while depressing the accelerator pedal A buzzer also sounds. → Momentarily release the accelerator pedal.
 	Indicates that the shift lever was used to attempt to shift to the first gear position in M mode on a slippery road surface The gear position will not shift from the second gear. A buzzer also sounds. → Drive the vehicle in the second or a higher gear position.
 (If equipped)	Indicates that vehicle speed has reached or exceeded 120 km/h (75 mph) The buzzer will stop sounding after 6 seconds or if you decelerate below 120 km/h (75 mph). (The warning message will stay on.) → Reduce your vehicle speed.



Warning message	Details/Actions
 LDA Hold Steering Wheel (If equipped)	Indicates that the LDA (Lane Departure Alert with steering control) system has determined that the driver does not have the hands on the steering wheel while the steering control function is on If the driver operates the steering wheel only a small amount, the system may be unable to detect the steering wheel operations and this warning may be displayed. A buzzer also sounds. (For GCC countries*, Jordan, Lebanon and Thailand) → Firmly hold the steering wheel.
LDA Steering Assist Unavailable Hold Steering Wheel  (If equipped)	Except for GCC countries*, Jordan, Lebanon and Thailand: Indicates that steering control function is temporarily canceled due to the LDA (Lane Departure Alert with steering control) system determining that the driver does not have the hands on the steering wheel while the steering control function is on If the driver operates the steering wheel only a small amount, the system may be unable to detect the steering wheel operations and this warning may be displayed. A buzzer also sounds. (for Korea) → Firmly hold the steering wheel.
Check Engine Visit Your Dealer  	Indicates an engine malfunction A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
Check Engine Reduced Engine Power Visit Your Dealer  	Indicates an engine malfunction A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.

Warning message	Details/Actions
Reduced Engine Power Visit Your Dealer 	Indicates an engine malfunction A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
SRS Airbag System Malfunction Visit Your Dealer 	Indicates a malfunction in: • The SRS airbag system; or • The seat belt pretensioner system A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
Antilock Brake System Malfunction Visit Your Dealer 	Indicates a malfunction in: • The ABS; or • The brake assist system A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
 Engine Coolant Temp High Stop in a Safe Place See Owner's Manual 	Indicates that the engine coolant temperature is too high A buzzer also sounds. → P. 655

Warning message	Details/Actions
 Charging System Malfunction See Owner's Manual  (F SPORT model)	Indicates a malfunction in the vehicle's charging system. → Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.
Radar Cruise Control Unavailable Clean Sensor  (If equipped)	Indicates that the radar sensor is dirty or covered with ice. A buzzer also sounds. → Clean the sensor.
Radar Cruise Control Unavailable  (If equipped)	Indicates that the dynamic radar cruise control system cannot be used temporarily due to bad weather. A buzzer also sounds. → Use the dynamic radar cruise control system when it becomes available again.

Warning message	Details/Actions
Smart Entry & Start System Malfunction See Owner's Manual 	Indicates a malfunction in the smart entry & start system A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
Blind Spot Monitor Unavailable  (If equipped)	Indicates that a Blind Spot Monitor sensor or the surrounding area on the bumper is dirty or covered with ice A buzzer also sounds. → Clean off the dirt, snow, ice, etc. and drive the vehicle with the operation conditions of the BSM function (→P. 346) satisfied for approximately 10 minutes. If the warning message does not disappear, the sensor may be misaligned. Have the vehicle inspected by your Lexus dealer.
Cruise Control Malfunction Visit Your Dealer 	Indicates a malfunction in the cruise control system (if equipped) or dynamic radar cruise control system (if equipped) Press the "ON/OFF" button once to deactivate the system, and then press the button again to reactivate the system. A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
Lane Departure Alert Malfunction Visit Your Dealer   (If equipped)	Indicates a malfunction in the LDA (Lane Departure Alert with steering control) system A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.

Warning message	Details/Actions
Front Camera Unavailable Front Camera Vision Blocked Clean and Demist Windshield   (If equipped)	The operation conditions of the camera sensor are not met. The following systems may be suspended until the problem shown in the message is resolved. • PCS (Pre-Collision System) • LDA (Lane Departure Alert with steering control) • Dynamic radar cruise control • Automatic High Beam → P. 278
Lane Departure Alert Unavailable   (If equipped)	Indicates that the system is temporarily unavailable due to a malfunction in a sensor other than the camera sensor. A buzzer also sounds. → Turn the LDA (Lane Departure Alert with steering control) system off, wait for a little while, and then turn the LDA (Lane Departure Alert with steering control) system back on.
Pre-Collision System Malfunction Visit Your Dealer   (If equipped)	Indicates a malfunction in the PCS (Pre-Collision System). A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.


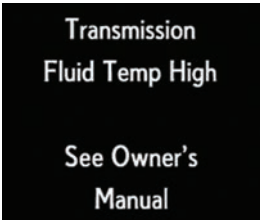
 
Warning message	Details/Actions
 Blind Spot Monitor System Malfunction Visit Your Dealer  (If equipped)	Indicates a malfunction in the BSM (Blind Spot Monitor) system A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
 Oil Pressure Low Stop in a Safe Place See Owner's Manual 	Indicates abnormal engine oil pressure A buzzer also sounds. → Immediately stop the vehicle in a safe place and contact your Lexus dealer.
 Transmission Fluid Temp High See Owner's Manual 	Indicates that the automatic transmission fluid temperature is too high A buzzer also sounds. → Immediately stop the vehicle in a safe place and contact your Lexus dealer.
 Check VGRS System  (If equipped)	Indicates a malfunction in the VGRS (Variable Gear Ratio Steering) system A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.




Warning message	Details/Actions
POP UP HOOD Activated. 	Indicates that the Pop Up Hood system has operated A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
POP UP HOOD Failure. 	Indicates a malfunction in the Pop Up Hood system A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
Lane Departure Alert Unavailable Below Approx 50km/h (If equipped)	Indicates that the LDA (Lane Departure Alert with steering control) system cannot be used as the vehicle speed is approximately 50 km/h (32 mph) or less → Drive the vehicle at approximately 50 km/h (32 mph) or more.
Stop & Start System Malfunction Visit Your Dealer  (If equipped)	Indicates a malfunction in the Stop & Start system A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
Engine Stopped Steering Power Low  	Indicates that the engine was stopped while driving A buzzer also sounds. → Operate the steering wheel with more force than usual.

Warning message	Details/Actions
Turn Lights Off  (Flashes)	Indicates that the engine switch is turned off or turned to ACCESSORY mode and the driver's door is opened while the lights are turned on A buzzer also sounds. → Turn the lights off.
Moon Roof Open  (Flashes) (If equipped)	Indicates that the moon roof is not fully closed (with the engine switch off, and the driver's door open) A buzzer also sounds. → Close the moon roof.
Window Open  (Flashes)	Indicates that the windows are not fully closed (with the engine switch off, and the driver's door open) A buzzer also sounds. → Close all the windows.
Window / Moon Roof Open  (Flashes) (If equipped)	Indicates that the windows and the moon roof are not fully closed (with the engine switch off, and the driver's door open) A buzzer also sounds. → Close all the windows and the moon roof.

Warning message	Details/Actions
 Drive-Start Control Malfunction Visit Your Dealer 	Indicates a malfunction in the Drive-Start Control A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer immediately.
 Brake Override Malfunction Visit Your Dealer 	Indicates a malfunction in the Brake Override System A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer immediately.
Engine Oil Level Low Add or Replace	Indicates that engine oil level is low This message may appear if the vehicle is stopped on a slope. Move the vehicle to a level surface and check to see if the message disappears. → Check the level of engine oil, and add if necessary.

Warning message	Details/Actions
Headlight System Malfunction Visit Your Dealer 	Indicates a malfunction in: • The automatic headlight leveling system; or • The Automatic High Beam system (if equipped); or • The LED headlight system A buzzer also sounds. → Have the vehicle inspected by your Lexus dealer.
 Accelerator and Brake Pedals Depressed Simultaneously  (Flashes)	Indicates that the accelerator and brake pedal are being depressed simultaneously, and the Brake Override System is operating. → Release the accelerator pedal and depress the brake pedal.
Tire Pressure [kPa] 250 180 250 250  (If equipped)	Indicates that the tire inflation pressure is low → Check the tire inflation pressure, and adjust to the appropriate level.
Tire Pressure  (If equipped)	Indicates a malfunction in the tire pressure warning system → Stop the vehicle in a safe place and turn the engine switch off then on again. If the tire pressure warning indicator flashes for 1 minute then illuminates, there is a malfunction in the system. Have the vehicle inspected by your Lexus dealer.

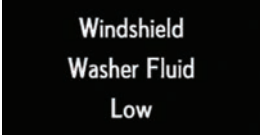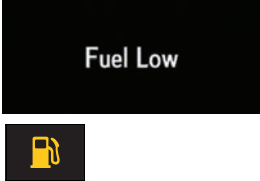 Warning message	Details/Actions
 (If equipped)	Indicates that the tire position information cannot be recognized → Drive for a short while and check if the display updates. If the radio wave conditions improve, the display may return to normal. If the tire pressure is still not displayed after driving for several minutes, stop the vehicle in a safe place, turn the engine switch off then on again, and start driving. If the tire pressure is still not displayed even after repeating this process several times, have the vehicle inspected by your Lexus dealer.
	Indicates that the washer fluid level is low → Add washer fluid.
	Indicates that remaining fuel is approximately 10 L (2.6 gal., 2.2 Imp. gal.) or less → Refuel the vehicle.
	Indicates that the outside temperature is approximately 3°C (37°F) or lower A buzzer also sounds. → Drive carefully, as the road may be icy.
	Indicates that the TRC (Traction Control) system has been deactivated → Turn the TRC on. (→P. 359)

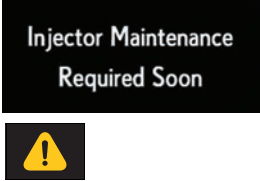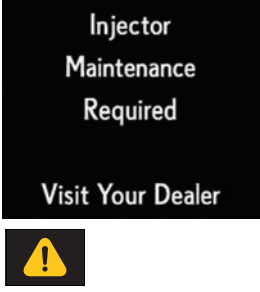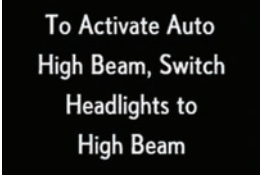Warning message	Details/Actions
 (If equipped)	Indicates that the engine oil is scheduled to be changed. (The indicator will not work properly unless the message has been reset.) → Check the engine oil, and change if necessary. After changing the engine oil, the message should be reset.
 (If equipped)	Indicates that the fuel injectors require maintenance soon → Have your Lexus dealer add injector cleaner to the fuel tank and reset the message as necessary.
 (If equipped)	Indicates that the engine oil should be changed. (After the engine oil is changed and the message has been reset.) → Check and change the engine oil, and oil filter by your Lexus dealer. After changing the engine oil, the message should be reset.
 (If equipped)	Indicates that the fuel injectors require maintenance → Have your Lexus dealer add injector cleaner to the fuel tank and reset the message.
 (If equipped)	Indicates that the Automatic High Beam switch is pressed while the headlights are in low beam. → Turn the high beam on and press the Automatic High Beam switch again.

Warning message	Details/Actions
VSC Turned Off Pre-Collision Brake System Unavailable  (If equipped)	Indicates that, since the VSC (Vehicle Stability Control) system was turned off, the pre-collision braking and pre-collision brake assist are stopped (The pre-collision warning function will be operational) → Turn the VSC on. (→P. 360)
Pre-Collision System Unavailable  (If equipped)	Indicates that the PCS (Pre-Collision System) is temporarily unavailable → When conditions improve, the system resumes operation. If this message is displayed continuously, have the vehicle inspected by your Lexus dealer.
High Power Consumption Partial Limit On AC/Heater Operation  (Flashes)	Indicates that operation of large electricity consuming systems such as the air conditioning system are suspended → Stop using unnecessary electric components to reduce electricity consumption. Wait a while until the electric power supply is restored. If this message is frequently displayed, have the vehicle inspected at your Lexus dealer immediately.
Pre-Collision System Unavailable Clean Sensor  (If equipped)	Indicates that part of the PCS (Pre-Collision System) sensor is dirty, covered with ice, etc. → Remove any dirt, ice, etc.

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar and Kuwait

■ Warning messages

The warning message illustrations used are intended as examples, and may differ from the image that is actually displayed on the multi-information display.

■ Warning message in dynamic radar cruise mode (if equipped)

In the following cases, the warning message may not be displayed even if vehicle-to-vehicle distance decreases:

- When your vehicle and the vehicle ahead are traveling at the same speed or the vehicle ahead is traveling more quickly than your vehicle
- When the vehicle ahead is traveling at a very low speed
- Immediately after cruise control speed is set
- At the instant the accelerator pedal is depressed

■ The LDA (Lane Departure Alert with steering control) lane departure warning function (if equipped)

In the following situations, the warning message will not be displayed even if a lane line is crossed.

- When the vehicle speed deviates from the operating range of the LDA system functions (→P. 285)
- When the lane lines cannot be recognized (→P. 287)

■ Resetting the message indicating maintenance is required (if equipped)

Make sure to reset the oil change system. (→P. 546)

■ Conditions that the tire pressure warning system may not function properly (if equipped)

→P. 560




■ Warning buzzer

→P. 605

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Continuous	—	Shift to P Before Exiting Vehicle  (Flashes)	The driver's door was opened when the shift lever was not in P and the engine switch was not turned off. → Shift the shift lever to P.
Continuous	Continuous	Shift to P Before Exiting Vehicle Key Not Detected Check Key Location  (Flashes) (Displayed alternately)	The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was not in P and the engine switch was not turned off. → Shift the shift lever to P. → Bring the electronic key back into the vehicle.
Once	—	Key Not Detected Check Key Location	The electronic key is not detected when an attempt is made to start the engine. → Start the engine with the electronic key present.

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	Continuous	Turn Off Vehicle Key Not Detected Check Key Location (Displayed alternately)  (Flashes)	An attempt was made to exit the vehicle with the electronic key and lock the doors without first turning the engine switch off when the shift lever was in P. → Turn the engine switch off and lock the doors again.
Once	3 times	Key Not Detected Check Key Location	The electronic key was carried outside the vehicle and a door other than the driver's door was opened and closed while the engine switch was in a mode other than off. → Bring the electronic key back into the vehicle. The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was in P and the engine switch was not turned off. → Turn the engine switch off. → Bring the electronic key back into the vehicle.
9 times	—	Key Not Detected Check Key Location	An attempt was made to drive when the electronic key was not inside the vehicle. → Confirm that the electronic key is inside the vehicle.

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
—	Con- tinuous	Key Left inside Vehicle	An attempt was made to lock the doors using the smart entry & start system while the electronic key was still inside the vehicle. → Retrieve the electronic key from the vehicle and lock the doors again.
Once	Con- tinuous	Key Left inside Vehicle	An attempt was made to lock either front door by opening a door and putting the inside lock button into the lock position, then closing the door by pulling on the outside door handle with the electronic key still inside the vehicle. → Retrieve the electronic key from the vehicle and lock the doors again.
Once	—	Key Battery Low	The electronic key has a low battery. → Replace the electronic key battery. (→P. 574)
Once	—	Steering Wheel Lock Press Engine Switch while Turning Wheel  (Flashes)	The steering lock could not be released within 3 seconds of the engine switch being pressed. → Press the engine switch while depressing the brake pedal and moving the steering wheel left and right.

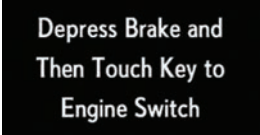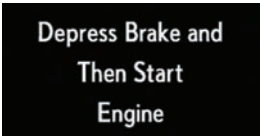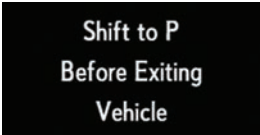Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	—		- When the doors were unlocked with the mechanical key and then the engine switch was pressed, the electronic key could not be detected in the vehicle. - The electronic key could not be detected in the vehicle even after the engine switch was pressed two consecutive times. → Touch the electronic key to the engine switch while depressing the brake pedal.
Once	—		During an engine starting procedure in the event that the electronic key was not functioning properly (→P. 648), the engine switch was touched with the electronic key. → Press the engine switch within 10 seconds of the buzzer sounding.
—	—		Indicates that: - With the engine switch off, the doors were unlocked and then the driver's door was opened and closed. - The engine switch was turned to ACCESSORY mode without starting the engine. - The shift lever was shifted to P or N from another position with the engine switch in IGNITION ON mode. → Press the engine switch while depressing the brake pedal.
Once	—	  (Flashes)	The engine switch has been turned off with the shift lever in a position other than P or N. → Shift the shift lever to P.

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	—	Turn Off Vehicle  (Flashes)	After the engine switch has been turned off with the shift lever in a position other than P, the shift lever has been shifted to P. → Turn the engine switch off.
—	—	Power Turned Off to Save Battery	Power was turned off due to the automatic power off function. → Next time when starting the engine, increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the battery.
Continuous	—	Shift to  and Press Engine Switch to Restart  (Flashes)	Indicates that the engine was stopped in an emergency while driving → To restart the engine, shift the shift lever to N and turn the engine switch to IGNITION ON mode.*
Once	—	Push and Hold Engine Switch for Emergency Stop  (Flashes)	Indicates that the engine switch has been pressed while driving → Except when emergency stopping of the vehicle is needed, immediately release the engine switch.

*: The engine may not be restarted depending on the vehicle condition.

■ **Warning messages**

→P. 626

■ **Warning buzzer**

→P. 605

If you have a flat tire (vehicles with a spare tire)

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.

For details about tires: →P. 555

WARNING

■ If you have a flat tire


Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Before jacking up the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Stop the engine.
- Turn on the emergency flashers. (→P. 590)

Location of the spare tire, jack and tools

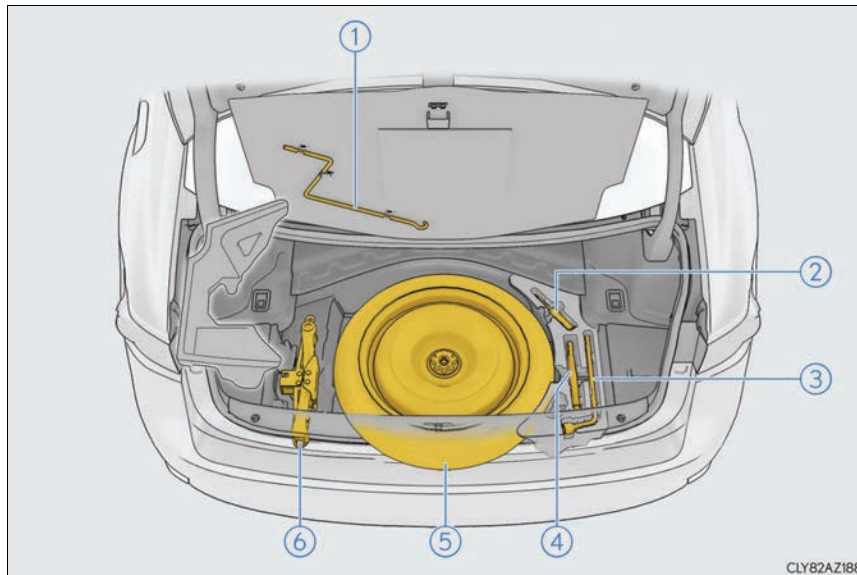

- ① Jack handle
- ② Screwdriver
- ③ Wheel nut wrench

- ④ Towing eyelet
- ⑤ Spare tire
- ⑥ Jack

**WARNING****■ Using the tire jack**


Observe the following precautions.

Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Put the jack properly in its jack point.
- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start the engine or drive the vehicle while the vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- When lowering the vehicle, make sure that there is no-one near the vehicle. If there are people nearby, warn them vocally before lowering.

Taking out the jack and jack handle


- 1** Remove the luggage mat.
- 2** Take out the jack handle from the reverse side of the luggage mat. Remove the spacer.

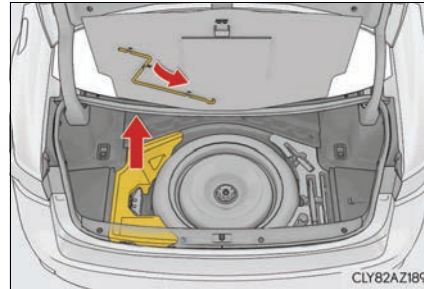

- 3** Take out the jack.


- ① For tightening
- ② For loosening

If the jack is too tightly installed to be removed by hand, insert a tool, such as the screwdriver included with the vehicle, into the hole of the jack (portion "A") and loosen the jack.

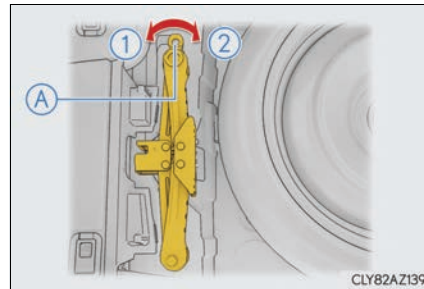


Taking out the spare tire

- 1 Remove the luggage mat.
- 2 Remove the spacer and tool tray.

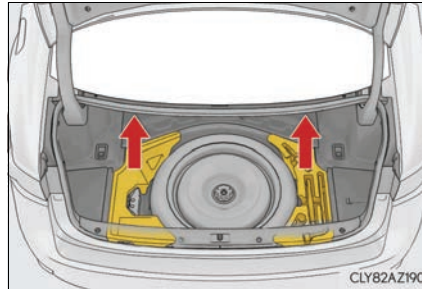

- 3 Loosen the center fastener that secures the spare tire.


If the center fastener cannot be turned by hand, use the wheel nut wrench that is stored in the trunk. (To secure the tire, tighten the center fastener by hand. Do not use the wrench or other tools.)

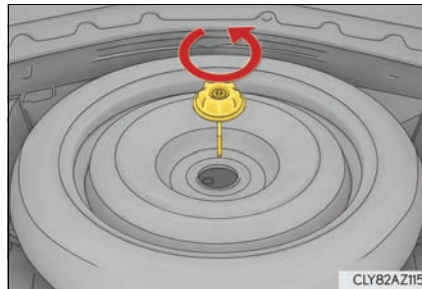**! WARNING****■ When storing the spare tire**

Be careful not to catch fingers or other body parts between the spare tire and the body of the vehicle.


Replacing a flat tire

- 1** Chock the tires.

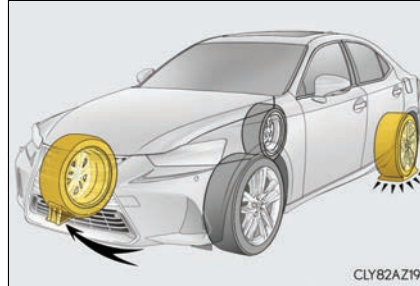


Flat tire		Wheel chock positions
Front	Left-hand side	Behind the rear right-hand side tire
	Right-hand side	Behind the rear left-hand side tire
Rear	Left-hand side	In front of the front right-hand side tire
	Right-hand side	In front of the front left-hand side tire

- 2** Slightly loosen the wheel nuts (one turn).

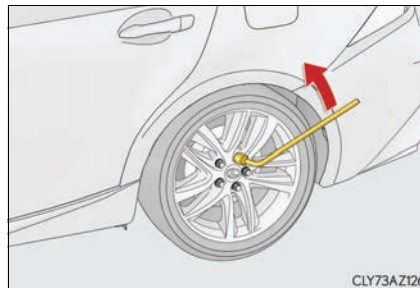


- 3 Turn the tire jack portion “A” by hand until the notch of the jack is in contact with the jack point.

The jack point guides are located under the rocker panel. They indicate the jack point positions.

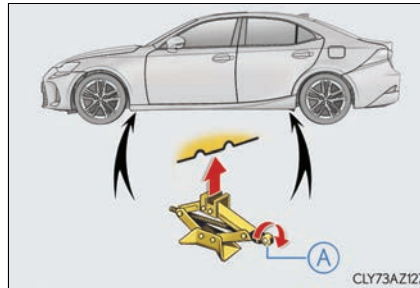


- 4 Raise the vehicle until the tire is slightly raised off the ground.

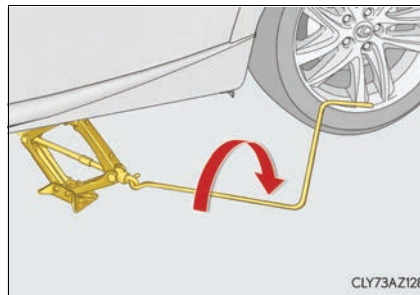

- 5 Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

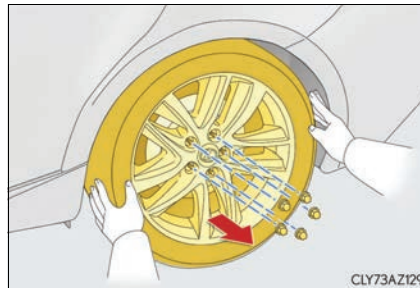


 WARNING**■ Replacing a flat tire**

- Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.
After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.
- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
 - Never use oil or grease on the wheel bolts or wheel nuts.
Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing a serious accident. Remove any oil or grease from the wheel bolts or wheel nuts.
 - Have the wheel nuts tightened with a torque wrench to 103 N•m (10.5 kgf•m, 76 ft•lbf) as soon as possible after changing wheels.
 - Do not attach a heavily damaged wheel ornament, as it may fly off the wheel while the vehicle is moving.
 - When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
 - If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by your Lexus dealer.

Installing the spare tire


- 1 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

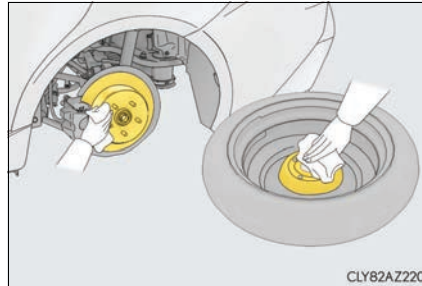


- 2 Install the tire and loosely tighten each wheel nut by hand by approximately the same amount.

When replacing an aluminum wheel with a steel wheel, tighten the wheel nuts until the tapered portion comes into loose contact with the disc wheel seat.

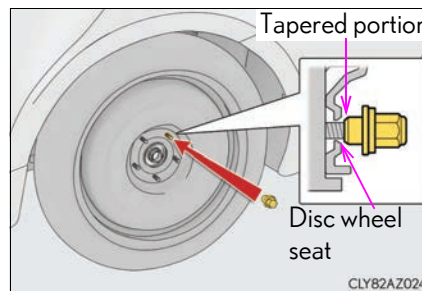


- 3 Lower the vehicle.

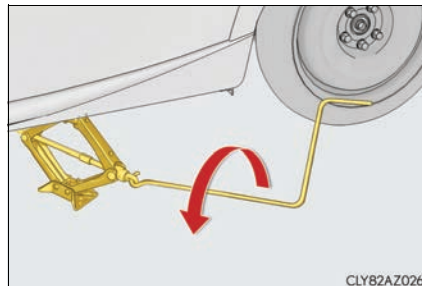

- 4 Firmly tighten each wheel nut two or three times in the order shown in the illustration.

Tightening torque:
103 N•m (10.5 kgf•m, 76 ft•lbf)

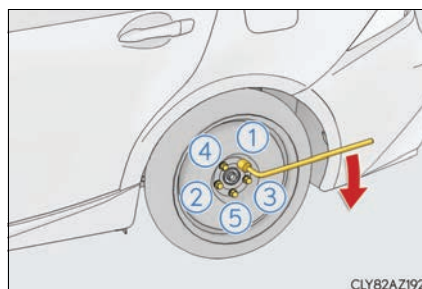

- 5 Stow the flat tire, tire jack and all tools.

■ The compact spare tire

- The compact spare tire is identified by the label "TEMPORARY USE ONLY" on the tire sidewall.
Use the compact spare tire temporarily, and only in an emergency.
- Make sure to check the tire inflation pressure of the compact spare tire.
(→P. 673, 675)

■ When using the compact spare tire

As the compact spare tire is not equipped with a tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated by the tire pressure warning system. Also, if you replace the compact spare tire after the tire pressure warning light comes on, the light remains on.

■ When the compact spare tire is equipped

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires.

■ If you have a flat rear tire on a road covered with snow or ice (vehicles with front and rear tires of the same size and compact spare tire)

Install the compact spare tire on one of the front wheels of the vehicle. Perform the following steps and fit tire chains to the rear tires:

- 1 Replace a front tire with the compact spare tire.
- 2 Replace the flat rear tire with the tire removed from the front of the vehicle.
- 3 Fit tire chains to the rear tires.

**WARNING**

■ **When using the compact spare tire**

- Remember that the compact spare tire provided is specifically designed for use with your vehicle. Do not use your compact spare tire on another vehicle.
- Do not use more than one compact spare tires simultaneously.
- Replace the compact spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

■ **When the compact spare tire is attached**

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- | | |
|--|--|
| • ABS & Brake assist | • LDA (Lane Departure Alert with steering control) (if equipped) |
| • VSC | • VGRS (if equipped) |
| • TRC | • Lexus parking assist monitor (if equipped) |
| • Cruise control (if equipped) | • Lexus parking assist-sensor (if equipped) |
| • Dynamic radar cruise control (if equipped) | • Navigation system (if equipped) |
| • PCS (if equipped) | |
| • EPS | |
| • AVS (if equipped) | |

■ **Speed limit when using the compact spare tire**

Do not drive at speeds in excess of 80 km/h (50 mph) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

■ **After using the tools and jack**

Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.



NOTICE

■ Be careful when driving over bumps with the compact spare tire installed on the vehicle

When driving with the compact spare tire installed, the vehicle height will be different than when driving with standard tires. Be careful when driving over uneven road surfaces, etc.

■ Driving with tire chains and the compact spare tire

Do not fit tire chains to the compact spare tire.

Tire chains may damage the vehicle body and adversely affect driving performance.

■ When replacing the tires

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Lexus dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

If you have a flat tire (vehicles with run-flat tires)


Your vehicle is not equipped with a spare tire, but instead you can continue driving the vehicle with run-flat tires even if any tire goes flat.

In this case, slow down and drive with extra caution.

■ Run-flat tires (A “RFT” or “DSST” mark is molded on the sidewall)

Take your vehicle to the nearest Lexus dealer or authorized tire dealer as soon as possible if any tire goes flat.

The vehicle can be driven for a maximum of 300 km (186 miles) at a speed below 60 km/h (37 mph) after the tire pressure warning light comes on. (→P. 603)

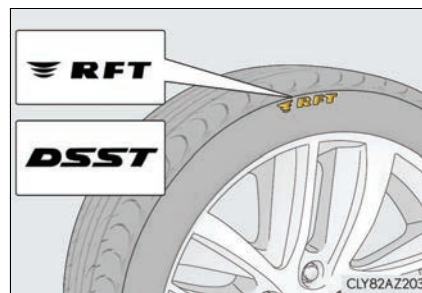

■ In some conditions (such as at high temperatures)

You cannot continue driving for up to 300 km (186 miles).

■ For the detailed information on run-flat tires

See the tire warranty booklet.

■ When replacing the tires

→P. 637

⚠ NOTICE

■ When replacing the tires

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Lexus dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

■ When driving over bumps

If a vehicle has a flat tire, the vehicle height will be lower than usual. Ensure that nothing strikes the bottom of the vehicle.

■ To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Lexus dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P. 557)

If the engine will not start

If the engine will not start even though correct starting procedures are being followed (→P. 222), consider each of the following points:

The engine will not start even though the starter motor operates normally.

One of the following may be the cause of the problem:

- There may not be sufficient fuel in the vehicle's tank.
Refuel the vehicle.
- The engine may be flooded.
Try to restart the engine again following correct starting procedures.
(→P. 222)
- There may be a malfunction in the engine immobilizer system.
(→P. 104)

The starter motor turns over slowly, the interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The battery terminal connections may be loose or corroded.
- The battery may be discharged. (→P. 650)

The starter motor does not turn over

The engine starting system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, an interim measure is available to start the engine. (→P. 646)

The starter motor does not turn over, the interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

- One or both of the battery terminals may be disconnected.
- The battery may be discharged. (→P. 650)
- There may be a malfunction in the steering lock system.

Contact your Lexus dealer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function

When the engine does not start, the following steps can be used as an interim measure to start the engine if the engine switch is functioning normally:

- 1** Set the parking brake.
- 2** Shift the shift lever to P.
- 3** Turn the engine switch to ACCESSORY mode.
- 4** Press and hold the engine switch for about 15 seconds while depressing the brake pedal firmly.

Even if the engine can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by your Lexus dealer.

If the electronic key does not operate properly


If communication between the electronic key and vehicle is interrupted (→P. 168) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors and trunk can be opened and the engine can be started by following the procedure below.

Locking and unlocking the doors, unlocking the trunk and key linked functions

■ Doors

Use the mechanical key (→P. 149) in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows and moon roof (turn and hold)*
- ③ Unlocks all the doors

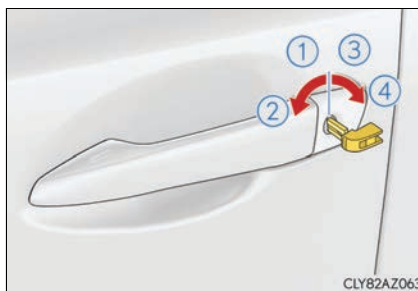


Some models: Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.

- ④ Opens the windows and moon roof (turn and hold)*

*: This setting must be customized at your Lexus dealer.

■ Trunk

Turn the mechanical key clockwise to open. (→P. 109)

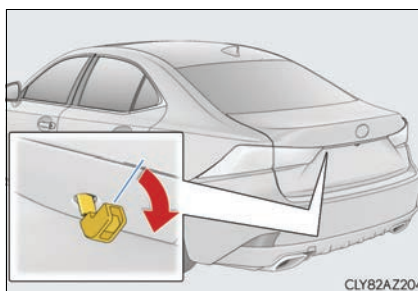


Starting the engine

- 1** Ensure that the shift lever is in P and depress the brake pedal.

- 2** Touch the Lexus emblem side of the electronic key to the engine switch.

When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode.

When the smart entry & start system is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.

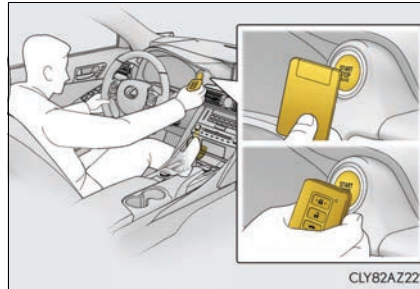

- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the engine switch.

In the event that the engine still cannot be started, contact your Lexus dealer.

■ Stopping the engine

Shift the shift lever to P and press the engine switch as you normally do when stopping the engine.

■ Replacing the key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P. 574)

■ Alarm

Using the mechanical key to lock the doors will not set the alarm system.

If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered.

■ Changing engine switch modes

Release the brake pedal and press the engine switch in step **3** above.

The engine does not start and modes will be changed each time the switch is pressed. (→P. 223)

■ When the electronic key does not work properly

- Make sure that the smart entry & start system has not been deactivated in the customization setting. If it is off, turn the function on.
(Customizable features: →P. 679)

- Check if battery-saving mode is set. If it is set, cancel the function. (→P. 168)



WARNING

■ When using the mechanical key and operating the power windows or moon roof

Operate the power window or moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window or moon roof.

Also, do not allow children to operate the mechanical key. It is possible for children and other passengers to get caught in the power window or moon roof.

If the vehicle battery is discharged


The following procedures may be used to start the engine if the vehicle's battery is discharged.

You can also call your Lexus dealer or a qualified repair shop.

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.


- 1 Confirm that the electronic key is being carried.

When connecting the jumper (or booster) cables, depending on the situation, the alarm may activate and doors locked. (→P. 107)

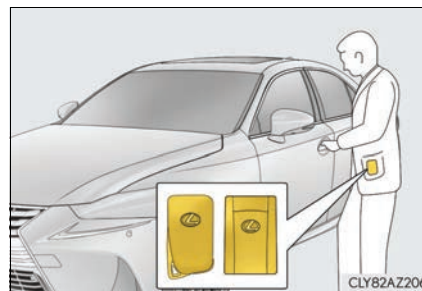


- 2 Open the hood. (→P. 539)
- 3 Connect the jumper cables according to the following procedure:


► Left-hand drive vehicles (IS350)

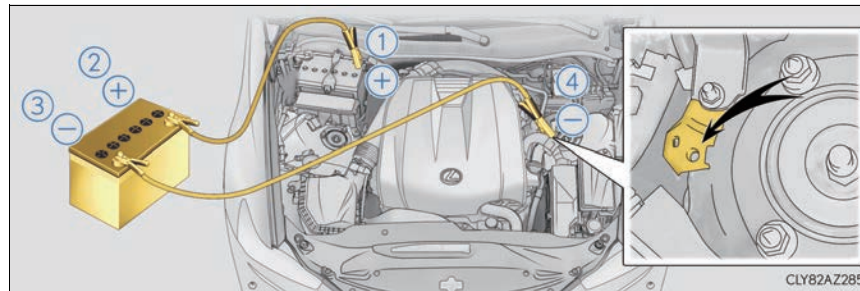


► Right-hand drive vehicles (IS350)

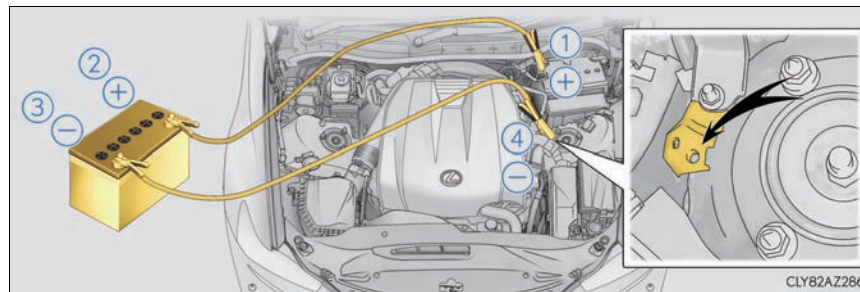

► Left-hand drive vehicles (IS300)

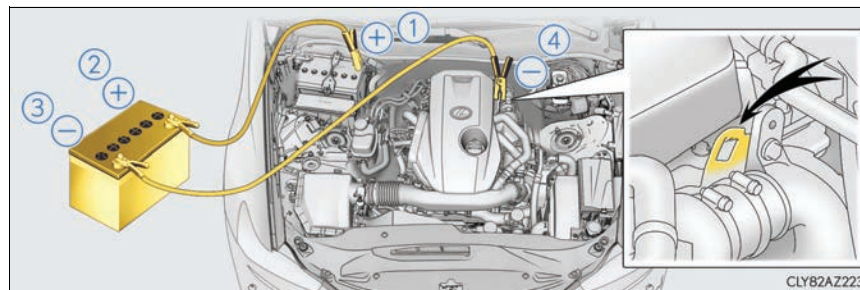

► Right-hand drive vehicles (IS300)

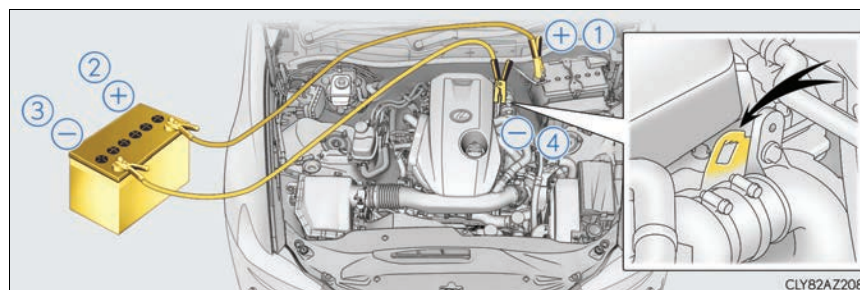

- ① Connect a positive jumper cable clamp to the positive (+) battery terminal on your vehicle.
- ② Connect the clamp on the other end of the positive cable to the positive (+) battery terminal on the second vehicle.
- ③ Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle.
- ④ Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the battery and any moving parts, as shown in the illustration.
- 4 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the battery of your vehicle.
- 5 Open and close any of the doors of your vehicle with the engine switch off.
- 6 Maintain the engine speed of the second vehicle and start the engine of your vehicle by turning the engine switch to IGNITION ON mode.
- 7 Once the vehicle's engine has started, remove the jumper cables in the exact reverse order from which they were connected.

Once the engine starts, have the vehicle inspected at your Lexus dealer as soon as possible.

■ Starting the engine when the battery is discharged

The engine cannot be started by push-starting.

■ To prevent battery discharge

- Turn off the headlights and the audio system while the engine is stopped. (Vehicles with a Stop & Start system: except when the engine is stopped by the Stop & Start system.)
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ Charging the battery

The electricity stored in the battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the battery may discharge, and the engine may be unable to start. (The battery recharges automatically during driving.)

■ When recharging or replacing the battery

- In some cases, it may not be possible to unlock the doors using the smart entry & start system when the battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.
- The engine may not start on the first attempt after the battery has recharged but will start normally after the second attempt. This is not a malfunction.
- The engine switch mode is memorized by the vehicle. When the battery is reconnected, the system will return to the mode it was in before the battery was discharged. Before disconnecting the battery, turn the engine switch off.
If you are unsure what mode the engine switch was in before the battery discharged, be especially careful when reconnecting the battery.
- Vehicles with Stop & Start system:
For a while after the battery terminals have been disconnected and reconnected, for a while after the battery has been replaced, the Stop & Start system may not automatically stop the engine for approximately 5 to 60 minutes.

■ When exchanging the battery (vehicles with Stop & Start system)

Use a genuine battery specifically designed for use with the Stop & Start system or equivalent to a genuine battery. If an unsupported battery is used, Stop & Start system functions may be restricted to protect the battery.

Also, battery performance may decrease and the engine may not be able to restart. Contact your Lexus dealer for details.

**WARNING****■ Avoiding battery fires or explosions**

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the "+" terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the battery.

■ Battery precautions

The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery:

- When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention.
Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the battery.

**NOTICE****■ When handling jumper cables**

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans or engine drive belt.


If your vehicle overheats

The following may indicate that your vehicle is overheating.

- The needle of the engine coolant temperature gauge (→P. 119) enters the red zone or a loss of engine power is experienced. (For example, the vehicle speed does not increase.)
- “Engine Coolant Temp High Stop in a Safe Place See Owner’s Manual” is shown on the multi-information display.
- Steam comes out from under the hood.


Correction procedures

- 1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the engine.
- 2 If you see steam:
Carefully lift the hood after the steam subsides.
If you do not see steam:
Carefully lift the hood.
- 3 After the engine has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.
 - ① Radiator
 - ② Cooling fansIf a large amount of coolant leaks, immediately contact your Lexus dealer.

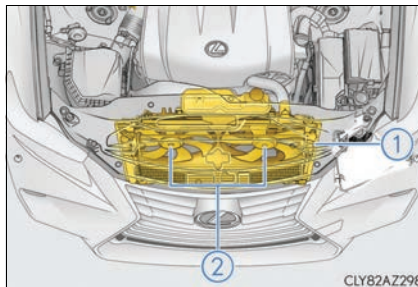


- 4 Engine coolant reservoir:
The coolant level is satisfactory if it is between the "FULL" and "LOW" lines on the reservoir.

► IS350

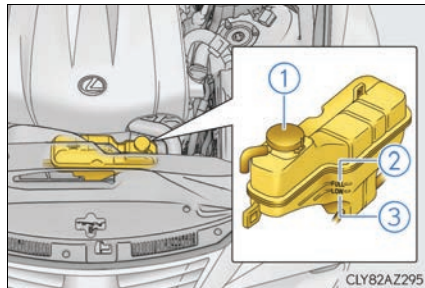

► IS300

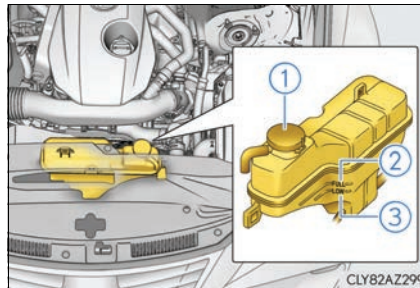


- ① Reservoir cap
- ② "FULL" line
- ③ "LOW" line

Intercooler coolant reservoir (IS300):


The coolant level is satisfactory if it is between the "F" and "L" lines on the reservoir.

- ① Reservoir cap
- ② "F" line
- ③ "L" line

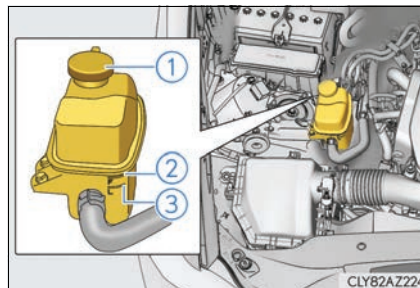


5 Add coolant if necessary.


► Engine (IS350)

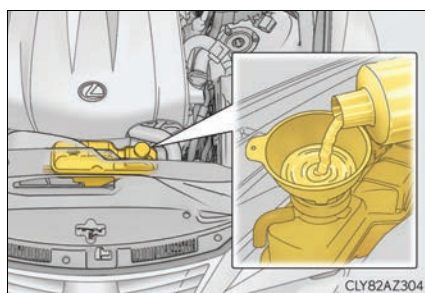

► Engine (IS300)

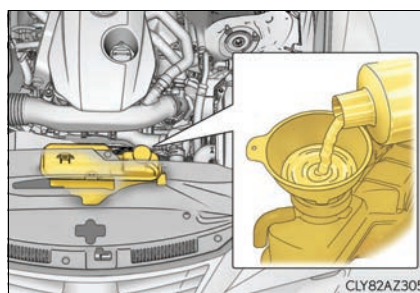

► Intercooler (IS300)

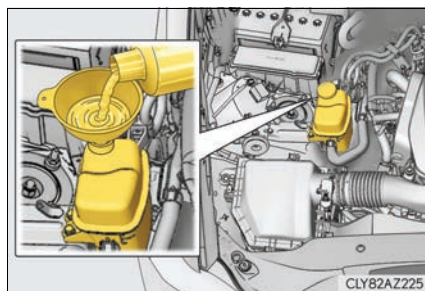

Water can be used in an emergency if coolant is unavailable.

6 Start the engine and turn the air conditioning system on to check that the radiator cooling fans operate and to check for coolant leaks from the radiator or hoses.

The fans operate when the air conditioning system is turned on immediately after a cold start. Confirm that the fans are operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly. (The fans may not operate in freezing temperatures.)

7 If the fans are not operating:

Stop the engine immediately and contact your Lexus dealer.

If the fans are operating:

Have the vehicle inspected at the nearest Lexus dealer.

8 Check if "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" is shown on the multi-information display.

If the message does not disappear:

Stop the engine and contact your Lexus dealer.

If the message is not displayed:

Have the vehicle inspected at the nearest your Lexus dealer.


WARNING

■ When inspecting under the hood of your vehicle


Observe the following precautions.

Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- Keep hands and clothing (especially a tie, a scarf or a muffler) away from the fans and belts. Failure to do so may cause the hands or clothing to be caught, resulting in serious injury.
- IS350: Do not loosen the coolant inlet cap or coolant reservoir cap while the engine and radiator are hot. (The coolant inlet cap is located under the engine cover.) High temperature steam or coolant could spray out.

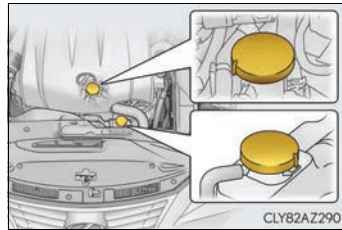

- IS300: Do not loosen the coolant inlet cap, coolant reservoir cap, or intercooler reservoir cap while the engine and radiator are hot. High temperature steam or coolant could spray out.

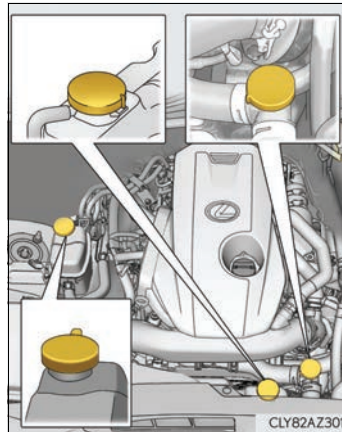

NOTICE

■ When adding engine coolant

Add coolant slowly after the engine has cooled down sufficiently. Adding cool coolant to a hot engine too quickly can cause damage to the engine.

■ To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use any coolant additive.

If the vehicle becomes stuck


Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

- 1 Stop the engine. Set the parking brake and shift the shift lever to P.
- 2 Remove the mud, snow or sand from around the rear wheels.
- 3 Place wood, stones or some other material under the rear wheels to help provide traction.
- 4 Restart the engine.
- 5 Shift the shift lever to D or R and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

■ When it is difficult to free the vehicle


- Vehicles without Stop & Start system

Press  to turn off TRC.

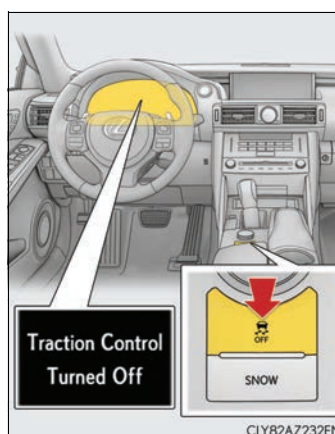

- Vehicles with Stop & Start system

Press  to turn off TRC.

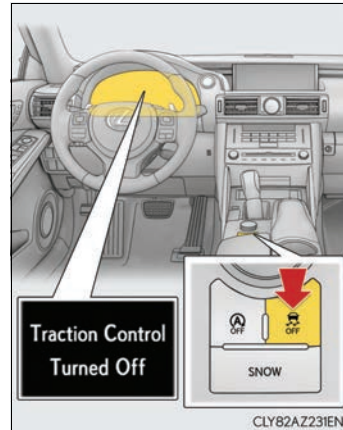

WARNING

■ When attempting to free a stuck vehicle

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

■ When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

NOTICE

■ To avoid damaging the transmission and other components

- Avoid spinning the rear wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

Vehicle specifications

9

9-1. Specifications

Maintenance data (fuel, oil level, etc.)	662
Fuel information.....	677

9-2. Customization

Customizable features	679
-----------------------------	-----

9-3. Initialization

Items to initialize	688
---------------------------	-----

Maintenance data (fuel, oil level, etc.)

Dimensions and weights

Overall length		4680 mm (184.3 in.)
Overall width		1810 mm (71.3 in.)
Overall height ^{*1}		1430 mm (56.3 in.)
Wheelbase		2800 mm (110.2 in.)
Tread ^{*1}	Front	1535 mm (60.4 in.)
	Rear	1550 mm (61.0 in.) 1540 mm (60.6 in.) ^{*2}
Gross vehicle mass ^{*3}	IS350	2130 kg (4696 lb.)
	IS300	2125 kg (4685 lb.)
Maximum permissible axle capacity ^{*3}	Front	1090 kg (2403 lb.)
	Rear	1200 kg (2646 lb.)
Drawbar load ^{*3}		75 kg (165 lb.)
Towing capacity ^{*3}	With brake	1500 kg (3307 lb.)
	Without brake	750 kg (1653 lb.)

^{*1}: Unladen vehicle

^{*2}: Vehicles with 255/35R18 tires


^{*3}: For South Africa with a towing package

Vehicle identification


■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.



This number is stamped on the top left of the instrument panel and in the engine compartment.

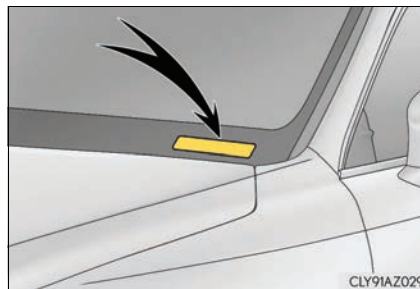

► IS300

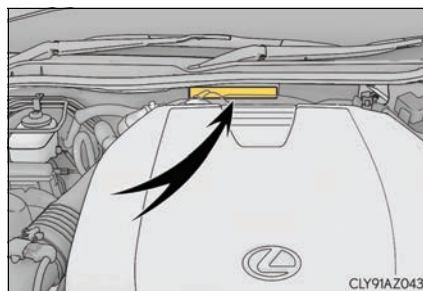

This number is also on the Certification Regulation label^{*1} or the manufacturer's label^{*2}.

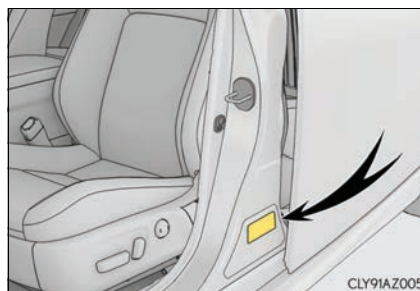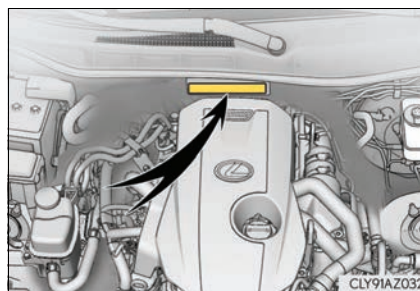

^{*1}: For GCC countries ^{*3}, Jordan, Lebanon and Korea

^{*2}: Except for GCC countries ^{*3}, Jordan, Lebanon and Korea

^{*3}: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

■ **Year of manufacture and country of origin (GCC countries*, Jordan and Lebanon)**



The year of the manufacture and country of origin are shown on the Certification Regulation label.

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

■ **Engine number**

► IS350

► IS300

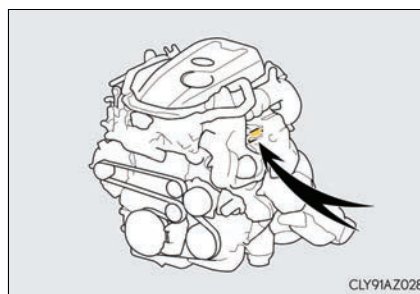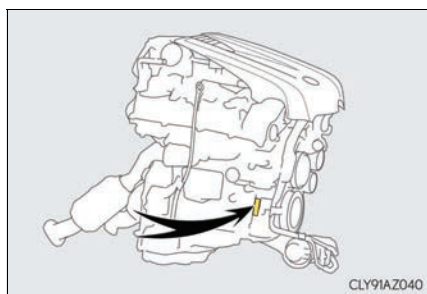

The engine number is stamped on the engine block as shown.

Engine

	IS350	IS300
Model	2GR-FKS	8AR-FTS
Type	6-cylinder V type, 4-cycle, gasoline	4-cylinder in line, 4-cycle, gasoline (with turbocharger)
Bore and stroke	94.0 × 83.0 mm (3.70 × 3.27 in.)	86.0 × 86.0 mm (3.39 × 3.39 in.)
Displacement	3456 cm ³ (210.9 cu. in.)	1998 cm ³ (121.9 cu. in.)
Valve clearance (engine cold)	Automatic adjustment	
Drive belt tension	Automatic adjustment	
Maximum vehicle speed ^{*1}	230 km/h (143 mph)	
Maximum torque (NET) ^{*1}	380 N•m @ 4800 - 4900 rpm	350 N•m @ 1650 - 4400 rpm
Maximum output (NET) ^{*1}	232 kW @ 6600 rpm	180 kW @ 5800 rpm

^{*1}: For vehicles with model code ^{*2} that has "V" as the last letter

^{*2}: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P. 663)

Fuel

Fuel type	Unleaded gasoline only
Research Octane Number	95 or higher 95 (Octane rating 91) or higher ^{*1}
Fuel tank capacity (Reference)	66 L (17.4 gal., 14.5 Imp. gal.) 66.3 L (17.5 gal., 14.6 Imp. gal.) ^{*2}

^{*1}: For Brazil

^{*2}: For Korea

Lubrication system

■ Oil capacity (Drain and refill [Reference ^{*1)}])

	IS350	IS300
With filter	5.7 L (6.0 qt., 5.0 Imp. qt.) 5.8 L (6.1 qt., 5.1 Imp. qt.) ^{*2}	4.6 L (4.9 qt., 4.0 Imp. qt.)
Without filter	5.5 L (5.8 qt., 4.8 Imp. qt.)	4.3 L (4.5 qt., 3.8 Imp. qt.)

^{*1)} The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

^{*2)} For GCC countries ^{*3)}, Jordan, Lebanon, Chile and vehicles with a towing package for South Africa

^{*3)} Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar and Kuwait

■ Engine oil selection (IS350)

“Toyota Genuine Motor Oil” is used in your Lexus vehicle. Use Lexus approved “Toyota Genuine Motor Oil” or equivalent to satisfy the following grade and viscosity.

Oil grade:

0W-20, 5W-20, 5W-30 and 10W-30:


API grade SL “Energy-Conserving”, SM “Energy-Conserving”, SN “Resource-Conserving” or SN PLUS “Resource-Conserving”; or ILSAC multigrade engine oil

15W-40:

API grade SL, SM, SN or SN PLUS multigrade engine oil

Recommended viscosity (SAE):

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 0W-20, 5W-20 or 5W-30 engine oil is recommended.

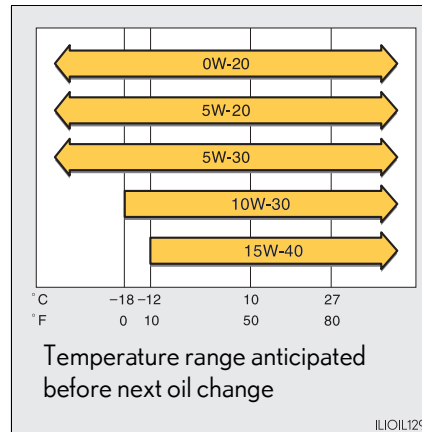

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:


Either or both API registered marks are added to some oil containers to help you select the oil you should use.

① API Service Symbol

Top portion: "API SERVICE SN" means the oil quality designation by American Petroleum Institute (API).
Center portion: "SAE 0W-20" means the SAE viscosity grade.
Lower portion: "Resource-Conserving" means that the oil has fuel-saving and environmental protection capabilities.

② ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

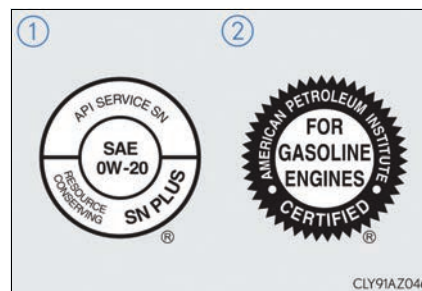

■ Engine oil selection (IS300)

“Toyota Genuine Motor Oil” is used in your Lexus vehicle. Use Lexus approved “Toyota Genuine Motor Oil” or equivalent to satisfy the following grade and viscosity.

Oil grade:


API grade SL “Energy-Conserving”, SM “Energy-Conserving”, SN “Resource-Conserving” or SN PLUS “Resource-Conserving”; or ILSAC multigrade engine oil

Viscosity grade:

SAE 0W-20, 5W-20, 5W-30 and 10W-30

Recommended viscosity (SAE):

If you use SAE 10W-30 engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 0W-20, 5W-20 or 5W-30 engine oil is recommended.

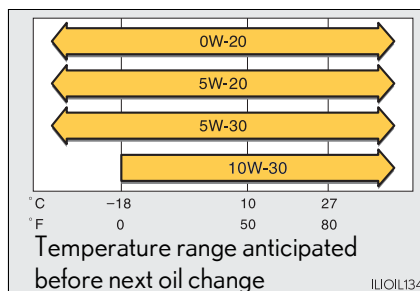

Oil viscosity (0W-20 is explained here as an example):


- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

① API Service Symbol

Top portion: "API SERVICE SN" means the oil quality designation by American Petroleum Institute (API).
Center portion: "SAE 0W-20" means the SAE viscosity grade.
Lower portion: "Resource-Conserving" means that the oil has fuel-saving and environmental protection capabilities.

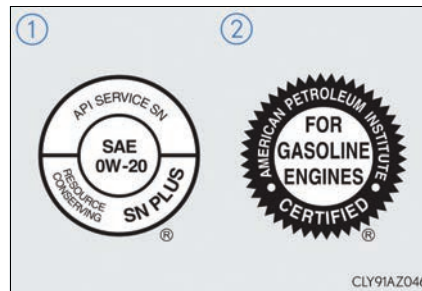

② ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

Cooling system

Capacity ^{*1}	IS350	9.4 L (9.9 qt., 8.3 Imp. qt.) 9.9 L (10.5 qt., 8.7 Imp. qt.) ^{*2}
	IS300	▶ Engine 7.8 L (8.2 qt., 6.9 Imp. qt.) ^{*3} 7.9 L (8.3 qt., 7.0 Imp. qt.) ^{*4} ▶ Intercooler 3.0 L (3.2 qt., 2.6 Imp. qt.)
Coolant type		Use either of the following: • "Toyota Super Long Life Coolant" • Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

^{*1}: The fluid capacity is a reference quantity.

If replacement is necessary, contact your Lexus dealer.

^{*2}: For GCC countries^{*5}, Jordan, Lebanon and vehicles with a towing package for South Africa

^{*3}: Vehicles without a Stop & Start system

^{*4}: Vehicles with a Stop & Start system

^{*5}: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

Ignition system (spark plug)

	IS350	IS300
Make	DENSO FK20HBR8	NGK DILFR7K9G
Gap	0.8 mm (0.031 in.)	0.9 mm (0.035 in.)

 NOTICE

 Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

Electrical system

Battery	
Specific gravity reading at 20°C (68°F):	1.25 or higher If the specific gravity is lower than the standard value, charge the battery.
Charging rates	
Quick charge	15 A max.
Slow charge	5 A max.

Automatic transmission

Fluid capacity *1	IS350	9.5 L (10.0 qt., 8.4 Imp. qt.)
	IS350*2	9.7 L (10.2 qt., 8.5 Imp. qt.)
	IS300	8.7 L (9.2 qt., 7.7 Imp. qt.)
Fluid type		Toyota Genuine ATF WS

*1: The fluid capacity is a reference quantity.

If replacement is necessary, contact your Lexus dealer.

*2: For GCC countries *3, Jordan and Lebanon

*3: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

NOTICE

■ Automatic transmission fluid type

Using transmission fluid other than "Toyota Genuine ATF WS" may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage the transmission of your vehicle.

Differential

- IS350/IS300 (vehicles without LSD [Limited Slip Differential])

Oil capacity	1.35 L (1.42 qt., 1.19 Imp. qt.)
Oil type and viscosity	Toyota Genuine Differential gear oil LT 75W-85 GL-5 or equivalent*

- IS350 (vehicles with LSD [Limited Slip Differential])

Oil capacity	1.35 L (1.42 qt., 1.19 Imp. qt.)
Oil type and viscosity	Toyota Genuine Differential gear oil LX 75W-85 GL-5 or equivalent*

*: Your Lexus vehicle is filled with "Toyota Genuine Differential Gear Oil" at the factory. Use Lexus approved "Toyota Genuine Differential Gear Oil" or an equivalent oil of matching quality to satisfy the above specification. Please contact your Lexus dealer for further details.

Brakes

Pedal clearance* ¹	107 mm (4.2 in.) Min.
Pedal free play	1.0 – 6.0 mm (0.04 – 0.24 in.)
Parking brake pedal travel* ²	7 - 10 clicks
Fluid type	SAE J1703 or FMVSS No. 116 DOT 3, or SAE J1704 or FMVSS No. 116 DOT 4

*¹: Minimum pedal clearance when depressed with a force of 500 N (51.0 kgf, 112.4 lbf) while the engine is running.

*²: Parking brake pedal travel when depressed with a force of 300 N (30.6 kgf, 67.4 lbf)

Steering

Free play	Less than 30 mm (1.2 in.)
-----------	---------------------------

Tires and wheels (for Korea)

► 17-inch tires

Tire manufacturer	Bridgestone	Dunlop
Tire rolling resistance rating (5 levels)*	4	5
Tire wet grip rating (5 levels)*	3	3
Tire size	225/45R17 91V	
Tire inflation pressure (Recommended cold tire inflation pressure)	Driving under normal conditions Front: 250 kPa (2.5 kgf/cm ² or bar, 36 psi) Rear: 250 kPa (2.5 kgf/cm ² or bar, 36 psi) Driving at high speeds (above 160 km/h [100 mph]) (in countries where such speeds are permitted by law) Add 30 kPa (0.3 kgf/cm ² or bar, 5 psi) to the front tires and rear tires. Never exceed the maximum cold tire inflation pressure indicated on the tire sidewall.	
Wheel size	17 × 7 1/2J	
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)	

*: A rating closer to "1" indicates higher performance.

► 18-inch tires

Tire manufacturer	Bridgestone	
Tire rolling resistance rating (5 levels)*	4	4
Tire wet grip rating (5 levels)*	3	3
Tire size	225/40R18 88W	255/35R18 90W
Tire inflation pressure (Recommended cold tire inflation pressure)	Driving under normal conditions Front: 250 kPa (2.5 kgf/cm ² or bar, 36 psi) Rear: 250 kPa (2.5 kgf/cm ² or bar, 36 psi) Driving at high speeds (above 190 km/h [118 mph]) (in countries where such speeds are permitted by law) Add 40 kPa (0.4 kgf/cm ² or bar, 6 psi) to the front tires and rear tires. Never exceed the maximum cold tire inflation pressure indicated on the tire sidewall.	
Wheel size	18 × 8J (225/40R18), 18 × 8 1/2J (255/35R18)	
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)	

*: A rating closer to “1” indicates higher performance.

► Compact spare tire

Tire size	T125/70D17 98M
Tire inflation pressure (Recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm ² or bar, 60 psi)
Wheel size	17 × 4T
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

Tires and wheels (except for Korea)

► 17-inch tires

Tire size	225/45R17 91W, 225/45RF17 91W	
Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	kPa (kgf/cm ² or bar, psi)
	More than 190 km/h (118 mph)	290 (2.9, 42)
	190 km/h (118 mph) or less	250 (2.5, 36)
Wheel size	17 × 7 1/2J	
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)	

► 18-inch tires

Tire size	225/40R18 88Y, 255/35R18 90Y	
Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	kPa (kgf/cm ² or bar, psi)
	More than 220 km/h (137 mph)	260 (2.6, 38)
	220 km/h (137 mph) or less	250 (2.5, 36)
Wheel size	18 × 8J (225/40R18), 18 × 8 1/2J (255/35R18)	
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)	

► Compact spare tire

Tire size	T125/70D17 98M
Tire inflation pressure (Recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm ² or bar, 60 psi)
Wheel size	17 × 4T
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

■ When towing a trailer (for South Africa with a towing package)

Add 20.0 kPa (0.2 kgf/cm² or bar, 3 psi) to the recommended tire inflation pressure and drive at speeds below 100 km/h (62 mph).

Light bulbs*

	Light bulbs	W	Type
Exterior	Front turn signal lights (bulb type)	21	A
	Outer foot lights	5	B
Interior	Door courtesy lights	5	B
	Vanity lights	8	B
	Interior light	8	B
	Personal lights	8	B
	Footwell lights	3.8	B
	Trunk light	5	B

A: Wedge base bulbs (amber)

B: Wedge base bulbs (clear)

*: Light bulbs not listed in this table are LED bulbs.

Fuel information

You must only use unleaded gasoline.

Select premium unleaded gasoline with a Research Octane Number of 95 (octane rating 91) or higher for optimum engine performance.

If this premium type cannot be obtained, you may temporarily use unleaded gasoline with a Research Octane Number as low as 91 (octane rating 87).

■ Use of ethanol blended gasoline in a gasoline engine

- ▶ Except for Thailand and Korea

Lexus allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.


- ▶ For Thailand

Lexus allows the use of ethanol blended gasoline where the ethanol content is up to 20%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

- ▶ For Korea

- Use only gasoline containing up to 15% ethanol.

DO NOT use any flex-fuel or gasoline that could contain more than 15% ethanol, including from any pump labeled E30, E50, E85 (which are only some examples of fuel containing more than 15% ethanol).

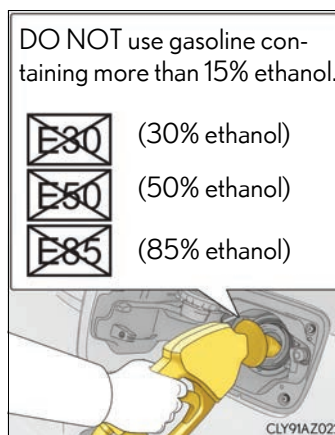

- Make sure that the ethanol blended gasoline to be used has a suitable Research Octane Number.

■ If your engine knocks

- Consult your Lexus dealer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.



NOTICE

■ Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use gasoline with metallic additives, for example manganese, iron or lead, otherwise it may cause damage on your engine or emission control system.
- Do not add aftermarket fuel additives which contain metallic additives.
- Except for Thailand and Korea: Bioethanol fuel sold under names such as "E50" or "E85" and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 10% max ethanol. The use of fuel with more than 10% ethanol content (E10) will damage the vehicle's fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask your Lexus dealer.
- For Korea: Bioethanol fuel sold under names such as "E50" or "E85" and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 15% max ethanol. The use of fuel with more than 15% ethanol content (E15) will damage the vehicle's fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask your Lexus dealer.
- For Thailand: Bioethanol fuel sold under names such as "E50" or "E85" and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 20% max ethanol. The use of fuel with more than 20% ethanol content (E20) will damage the vehicle's fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask your Lexus dealer.
- Do not use the methanol blended gasoline such as M15, M85, M100. The use of gasoline containing methanol may cause engine damage or failure.

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed by using the meter control switches, the Remote Touch or Lexus Display Audio controller or at your Lexus dealer.

Customizing vehicle features

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the shift lever in P and the parking brake set.

■ Changing by using the Remote Touch or Lexus Display Audio controller

- ▶ Vehicles with a Remote Touch

- 1 Press the "MENU" button on the Remote Touch.
- 2 Select  on the "Menu" screen and select .

Various setting can be changed. Refer to the list of settings that can be changed for details.

- ▶ Vehicles with a Lexus Display Audio controller

- 1 Press the "MENU" button on the Lexus Display Audio controller.
- 2 Select "Setup" on the "MENU" screen and select "Vehicle".

Various setting can be changed. Refer to the list of settings that can be changed for details.

■ Changing by using the meter control switches

→P. 134

Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

- ① Settings that can be changed using the Remote Touch or Lexus Display Audio controller

- ② Settings that can be changed by your Lexus dealer

Definition of symbols: ○ = Available, – = Not available

■ Gauges, meters and multi-information display (→P. 119, 124)

Function	Default setting	Customized setting	①	②
Units*1	km (L/100km)	km (km/L)	○	–
Color*2	Color 1	Color 2	○	–

*1: The default setting varies according to countries.

*2: Except F SPORT models

■ Door lock (→P. 154, 161, 647)

Function	Default setting	Customized setting	①	②
Unlocking using a mechanical key*	All doors unlocked in one step	Driver's door unlocked in one step, all doors unlocked in two steps	–	○
Speed-detecting automatic door lock function	On	Off	○	○
Shifting gears to position other than P locks all doors	Off	On	○	○
Shifting gears to P unlocks all doors*	Off	On	○	○
Opening driver's door unlocks all doors*	On	Off	○	○
Locking/unlocking of the trunk when all doors are locked/unlocked	On	Off	–	○

*: The default setting varies according to country.

■ Smart entry & start system and wireless remote control (→P. 154, 161)

Function	Default setting	Customized setting	①	②
Operation buzzer volume*	5	Off	○	○
		1 to 7		
Operation signal (Emergency flashers)	On	Off	○	○
Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	30 seconds	60 seconds	–	○
		120 seconds		
Open door warning buzzer	On	Off	–	○
Welcome light illumination control	On	Off	–	○

*: If equipped

■ Smart entry & start system (→P. 154, 161, 166)

Function	Default setting	Customized setting	①	②
Smart entry & start system	On	Off	○	○
Smart door unlocking*	All the doors	Driver's door	○	○
Number of consecutive door lock operations	2 times	As many as desired	–	○

*: The default setting varies according to country.

■ Wireless remote control (→P. 148, 154, 161)

Function	Default setting	Customized setting	①	②
Wireless remote control	On	Off	–	○
Unlocking operation* ¹	All doors unlocked in one step	Driver's door unlocked in one step, all doors unlocked in two steps	○	○
Trunk unlocking operation	Press and hold (short)	One short press	–	○
		Push twice		
		Press and hold (long)		
		Off		
Alarm (panic mode)* ²	On	Off	–	○

*¹: The default setting varies according to country.

*²: If equipped

■ Driving position memory* (→P. 179)

Function	Default setting	Customized setting	①	②
Driver's seat movement when exiting the vehicle	Standard	Off	○	○
		Partial		
Doors linked to the driving position memory recall function	Driver's door	All doors	–	○

*: If equipped

■ Outside rear view mirrors (→P. 191)

Function	Default setting	Customized setting	①	②
Automatic mirror folding and extending operation*	Linked to the locking/unlocking of the doors	Off	-	○
		Linked to operation of the engine switch		

*: If equipped

■ Power windows (→P. 195)

Function	Default setting	Customized setting	①	②
Mechanical key linked operation	Off	On	-	○
Wireless remote control linked operation*	Off	On	-	○
Wireless remote control linked operation signal (buzzer)*	On	Off	-	○

*: If equipped

■ Moon roof* (→P. 199)

Function	Default setting	Customized setting	①	②
Mechanical key linked operation	Off	On	-	○
Linked operation of components when mechanical key is used (open only)	Slide only	Tilt only	-	○
Wireless remote control linked operation*	Off	On	-	○
Linked operation of components when wireless remote control is used (open only)*	Slide only	Tilt only	-	○
Wireless remote control linked operation signal (buzzer)*	On	Off	-	○

*: If equipped

■ Turn signal lever (→P. 234)

Function	Default setting	Customized setting	①	②
The number of times the turn signal lights flash automatically when the turn signal lever is moved to the first position during a lane change ^{*1}	3	5	-	○
		7		
		Off ^{*2}		
		Off ^{*3}		

^{*1}: After flashing the turn signal lights when turning left or right while this function is off and the turn signal lever is moved to the first position in the direction of the flashing light, the turn signal lights can be selected to be flashing or off.

^{*2}: The turn signal lights keep flashing if the turn signal lever is moved to the first position in the direction of flashing light.

^{*3}: The turn signal lights will be off if the turn signal lever is moved to the first position in the direction of flashing light.

■ Automatic light control system (→P. 239)

Function	Default setting	Customized setting	①	②
Light sensor sensitivity	Standard	-2 to 2	○	○
Time elapsed before headlights automatically turn on [*]	Standard	Long	-	○

^{*}: Except for Taiwan

■ Lights (→P. 239)

Function	Default setting	Customized setting	①	②
Daytime running light system ^{*1}	On	Off	○	○

^{*1}: For GCC countries ^{*2}, Jordan and Lebanon

^{*2}: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

■ Lexus parking assist-sensor ^{*1}(→P. 314)

Function	Default setting	Customized setting	①	②
Detection distance of the front center sensor	Far	Near	☐	☐
Detection distance of the rear center sensor	Far	Near	☐	☐
Buzzer volume	3	1 to 5	☐	☐
Display setting ^{*2}	All sensors displayed	Display off	☐	☐

^{*1}: If equipped

^{*2}: When Lexus parking assist-sensor is operating.

■ Driving mode select switch (→P. 353)

Function	Default setting	Customized setting	①	②
Powertrain control in customized mode [*]	Normal	Power	☐	—
		Eco		
Chassis control in customized mode [*]	Normal	Sport	☐	—
Air conditioning operating in customized mode [*]	Normal	Eco	☐	—

^{*}: If equipped

■ Automatic air conditioning system (→P. 479)

Function	Default setting	Customized setting	①	②
Switching between outside air and recirculated air mode linked to "AUTO" switch operation	On	Off	☐	☐
A/C Auto switch operation	On	Off	☐	☐

■ Seat heaters ^{*} (→P. 491)

Function	Default setting	Customized setting	①	②
Seat heater timer control	Off	On	☐	☐

^{*}: If equipped

■ Illumination (→P. 493)

Function	Default setting	Customized setting	①	②
Time elapsed before the interior lights turn off	15 seconds	Off	○	○
		7.5 seconds		
		30 seconds		
Operation after the engine switch is turned off	On	Off	–	○
Operation when the doors are unlocked	On	Off	–	○
Operation when you approach the vehicle with the electronic key on your person	On	Off	–	○
Inside door handle lights	On	Off	–	○
Time elapsed before the outer foot lights turn off	15 seconds	Off	○	○
		7.5 seconds		
		30 seconds		
Operation of the outer foot lights when you approach the vehicle with the electronic key on your person	On	Off	–	○
Operation of the outer foot lights when the doors are unlocked with the power door lock switch	On	Off	–	○

■ Seat belt reminder (→P. 603)

Function	Default setting	Customized setting	①	②
Vehicle speed linked seat belt reminder buzzer ^{*1}	On	Off	–	○

^{*1}: For GCC countries^{*2}, Jordan and Lebanon

^{*2}: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

■ Vehicle customization

- When the speed-detecting automatic door lock and shift-linked automatic door lock are both on, the door lock operates as follows.
 - When shifting the shift lever to any position other than P, all the doors will be locked.
 - If the vehicle is started with all doors locked, the speed-detecting automatic door lock will not operate.
 - If the vehicle is started with any door unlocked, the speed-detecting automatic door lock will operate.
- When the smart entry & start system is off, the entry unlock function cannot be customized.
- When the doors remain closed after unlocking the doors and the timer activated automatic door lock function activates, signals will be generated in accordance with the operation buzzer volume and operational signal (Emergency flashers) function settings.
- Some settings can be changed using a switch or the audio system screen. If a setting is changed using a switch, the changed setting will not be reflected on the audio system screen until the engine switch is turned off and then to IGNITION ON mode.



WARNING

■ During customization

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.



NOTICE

■ During customization

To prevent battery discharge, ensure that the engine is running while customizing features.

Items to initialize

The following item must be initialized for normal system operation after such cases as the battery being reconnected, or maintenance being performed on the vehicle:

Item	When to initialize	Reference
Engine oil maintenance data [*]	• After changing the engine oil	P. 546
Tire pressure warning system	• When rotating the tires • When changing the tire inflation pressure by changing traveling speed or load weight, etc.	P. 558

^{*}: If equipped

Index

What to do if... (Troubleshooting).....	690
Alphabetical index.....	694

For vehicles with a navigation system, refer to the “Navigation System Owner’s Manual” for information regarding the equipment listed below.

- Navigation system
- Audio/video system

What to do if... (Troubleshooting)

If you have a problem, check the following before contacting your Lexus dealer.

The doors cannot be locked, unlocked, opened or closed



You lose your keys

- If you lose your mechanical keys, new genuine mechanical keys can be made by your Lexus dealer. (→P. 150)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact your Lexus dealer immediately. (→P. 153)



The doors cannot be locked or unlocked

- Is the electronic key battery weak or depleted? (→P. 574)
- Is the engine switch in IGNITION ON mode?
When locking the doors, turn the engine switch off. (→P. 223)
- Is the electronic key left inside the vehicle?
When locking the doors, make sure that you have the electronic key on your person.
- The function may not operate properly due to the condition of the radio wave. (→P. 168)



The rear door cannot be opened

- Is the child-protector lock set?
The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P. 158)

**The trunk lid is closed with the electronic key left inside**

- The function to prevent the electronic key from being left inside the trunk will operate and you can open the trunk as usual. Take the key out from the trunk. (→P. 163)

If you think something is wrong**The engine does not start**

- Did you press the engine switch while firmly depressing the brake pedal? (→P. 222)
- Is the shift lever in P? (→P. 224)
- Is the electronic key anywhere detectable inside the vehicle? (→P. 166)
- Is the steering wheel unlocked? (→P. 224)
- Is the electronic key battery weak or depleted?
In this case, the engine can be started in a temporary way. (→P. 648)
- Is the battery discharged? (→P. 650)

**The shift lever cannot be shifted from P even if you depress the brake pedal**

- Is the engine switch in IGNITION ON mode?
If you cannot release the shift lever by depressing the brake pedal with the engine switch in IGNITION ON mode. (→P. 231)

**The steering wheel cannot be turned after the engine is stopped**

- It is locked automatically to prevent theft of the vehicle. (→P. 224)



The windows do not open or close by operating the power window switches

- Is the window lock switch pressed?

The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P. 195)



The engine switch is turned off automatically

- The auto power off function will be operated if the vehicle is left in ACCESSORY or IGNITION ON mode (the engine is not running) for a period of time. (→P. 224)



A warning buzzer sounds during driving

- The seat belt reminder light is flashing

Are the driver and the front passenger wearing the seat belts? (→P. 603)

- The parking brake indicator is on

Is the parking brake released? (→P. 236)

Depending on the situation, other types of warning buzzer may also sound. (→P. 601, 607)



An alarm is activated and the horn sounds (if equipped)

- Did anyone inside the vehicle open a door or anything move inside the vehicle during setting the alarm?

The sensor detects them and the alarm sounds. (→P. 107)

Do one of the following to deactivate or stop the alarm:

- Unlock the doors or open the trunk using the entry function or wireless remote control. (Except for Malaysia and South Africa, the mechanical key can also be used.)
- Except for Malaysia and South Africa: Turn the engine switch to ACCESSORY or IGNITION ON mode, or start the engine.
- For Malaysia and South Africa: Start the engine.

**A warning buzzer sounds when leaving the vehicle**

- Is the message displayed on the multi-information display?
Check the message on the multi-information display. (→P. 607)

**A warning light turns on or a warning message is displayed**

- When a warning light turns on or a warning message is displayed, refer to P. 601, 607.

When a problem has occurred**If you have a flat tire**

- Vehicles with a spare tire
Stop the vehicle in a safe place and replace the flat tire with the spare tire.
(→P. 632)
- Vehicles with run-flat tires
Slow down and drive with extra caution. Take your vehicle to the nearest Lexus dealer or authorized tire dealer to have the flat tire replaced.
(→P. 644)

**The vehicle becomes stuck**

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow.
(→P. 659)

Alphabetical index

A

- | | | | |
|------------------------------------|-----|------------------------------------|--------|
| A/C | 479 | Curtain shield airbag | |
| Air conditioning filter | 572 | precautions | 49 |
| Automatic air conditioning | | General airbag precautions | 47 |
| system | 479 | Locations of airbags | 45 |
| S-FLOW mode | 481 | Modification and disposal of | |
| AAC disc | 408 | airbags | 50 |
| ABS (Anti-lock Brake System) | 357 | Side airbag operating | |
| Warning light | 601 | conditions | 51 |
| Adaptive Variable Suspension | | Side airbag precautions | 47 |
| system (AVS) | 358 | Side and curtain shield airbags | |
| Air cleaner filter | 554 | operating conditions | 51 |
| Air conditioning filter | 572 | Side and curtain shield airbags | |
| Air conditioning system | 479 | precautions | 47 |
| Air conditioning filter | 572 | SRS airbags | 45 |
| Automatic air conditioning | | SRS warning light | 601 |
| system | 479 | Airbag manual on-off system | 59 |
| S-FLOW mode | 481 | Alarm | 107 |
| Airbags | 45 | Anchor brackets | 86, 95 |
| Airbag manual on-off system | 59 | Antennas (smart entry & | |
| Airbag operating conditions | 51 | start system) | 166 |
| Airbag precautions for | | Anti-lock Brake System (ABS) | 357 |
| your child | 47 | Warning light | 601 |
| Correct driving posture | 38 | Approach warning | 296 |
| Curtain shield airbag operating | | Armrest | 506 |
| conditions | 51 | Assist grips | 508 |
| | | Audio input | 379 |

Audio system.....	372
Audio CD/DVD player.....	408
Audio input	379
AUX port/ USB port.....	379
Bluetooth® audio.....	438
DVD video.....	415
iPod.....	420
Optimal use.....	390
Portable music player.....	429
Radio.....	404
Steering wheel audio switch.....	378
USB memory.....	424
Video CD.....	413
Automatic headlight leveling system	241
Automatic High Beam	242
Automatic light control system	239
AUX port.....	379
Average fuel economy....	142, 143, 145
Average vehicle speed	142
AVS (Adaptive Variable Suspension system).....	358

B

Back-up light	
Replacing light bulb	587
Battery.....	550
Battery checking.....	550
If the vehicle battery is discharged	650
Preparing and checking before winter.....	363
Warning light.....	601
Blind Spot Monitor (BSM)	339
Bluetooth®	
Audio system.....	438
Hands-free system (for cellular phone)	439
Bottle holders.....	498
Brake	
Fluid.....	672
Parking brake.....	236
Warning light.....	601
Brake assist	357
Break-in tips	206
Brightness control	
Instrument panel light control	123
BSM (Blind Spot Monitor)	339
BSM function.....	345
RCTA function.....	348

C

Card key.....	148
Care.....	516, 520
Aluminum wheels.....	517
Exterior.....	516
Interior.....	520
Seat belts.....	521
Cargo hooks.....	500
CD player.....	408
Chains.....	364
Child restraint system.....	62, 93
Child seats definition.....	62
Child seats installation.....	86, 95
Installing a CRS to the passenger seat.....	64, 96
Installing CRS with ISOFIX rigid anchors.....	89, 100
Installing CRS with seat belts.....	87, 98
Installing CRS with top strap.....	91, 102

Child safety.....	61
Airbag precautions.....	47
Battery precautions.....	552, 654
Child restraint system.....	62, 93
How your child should wear the seat belt.....	42
Installing child restraints.....	62, 93
Moon roof precautions.....	202
Power window lock switch.....	195
Power window precautions.....	198
Rear door child-protectors.....	158
Removed electronic key battery precautions.....	576
Seat belt precautions.....	44
Seat heater precautions.....	491
Trunk precautions.....	164
Child-protectors.....	158
Cleaning.....	516, 520
Aluminum wheels.....	517
Exterior.....	516
Interior.....	520
Seat belts.....	521
Clock.....	504
Coat hooks.....	508
Condenser.....	549
Console box.....	497
Cooling system.....	547
Engine overheating.....	655
Cruise control.....	
Cruise control.....	301
Dynamic radar cruise control.....	289
Cup holders.....	498
Current fuel consumption.....	142, 143
Curtain shield airbags.....	45
Customizable features.....	680

D

DAB (Digital Audio Broadcast)	404
Daytime running light system	240
Defogger	
Outside rear view mirrors	486
Rear window	486
Windshield	486
Differential	672
Digital Audio Broadcast (DAB)	404
Dimensions	662
Display	
Drive information	130
Dynamic radar cruise control	289
LDA (Lane Departure Alert with steering control)	284
Multi-information display	124
Warning message	607
Do-it-yourself maintenance	537
Door courtesy lights	
Location	493
Wattage	676

Door lock	
Doors	154
Smart entry & start system	166
Wireless remote control	148
Doors	154
Automatic door locking and unlocking system	158
Door lock	154
Open door warning buzzer	155
Open door warning light	602
Outside rear view mirrors	191
Rear door child-protector	158
Side windows	195
Drive information	130
Driver's and front passenger's seat belt reminder light	603
Driver's seat position memory	179
Drive-Start Control	205
Driving	204
Break-in tips	206
Correct driving posture	38
Driving mode select switch	353
Procedures	204
Winter drive tips	363
Dynamic radar cruise control	289
DVD player	415

E

Eco drive mode	353
Eco Driving Indicator	139
Eco-friendly driving tips	367
EDR (Event data recorder)	10
Elapsed time	142, 145
Electric Power Steering (EPS)	358
Warning light	602
Electronic key	148
Battery-saving function	167
If the electronic key does not operate properly	647
Replacing the battery	574
Emergency, in case of	
If a warning message is displayed	607
If the electronic key does not operate properly	647
If the engine will not start	645
If the vehicle battery is discharged	650
If the vehicle is trapped in rising water	592
If the warning buzzer sounds	601

If the warning light turns on	601
If you have a flat tire	632, 644
If you think something is wrong	599
If your vehicle becomes stuck	659
If your vehicle has to be stopped in an emergency	591
If your vehicle needs to be towed	593
If your vehicle overheats	655
Emergency brake signal	358
Emergency flashers	590
Engine	665
ACCESSORY mode	223
Compartment	542
Engine switch	222
Hood	539
How to start the engine	222
Identification number	664
If the engine will not start	645
Ignition switch (engine switch)	222
Overheating	655

Engine coolant	547
Capacity	670
Checking	547
Preparing and checking before winter	363
Engine coolant temperature gauge	119
Engine immobilizer system	104
Engine oil	544
Capacity	666
Checking	544
Preparing and checking before winter	363
Engine oil maintenance data	546
Engine switch	222
EPS (Electric Power Steering)	358
Warning light	602
Event data recorder (EDR)	10

F

First-aid kit storage belt	500
Flat tire	
Vehicles with a spare tire	632
Vehicles with run-flat tires	644
Floor mats	36
Fluid	
Automatic transmission	671
Brake	672
Washer	553
Fog light	246
Replacing light bulbs	587
Switch	246
Footwell light	493
Wattage	676
Front personal lights	494
Wattage	676
Front position lights	239
Light switch	239
Replacing light bulbs	587
Front seats	175
Adjustment	175
Cleaning	520
Correct driving posture	38
Driving position memory	179
Head restraints	184
Power easy access system	179
Seat heaters	492
Seat position memory	179
Seat ventilators	492

Front turn signal lights.....	234
Replacing light bulbs.....	582, 587
Turn signal lever.....	234
Wattage.....	676
Fuel.....	255
Capacity.....	665
Fuel gauge.....	119
Fuel pump shut off system.....	600
Information.....	677
Refueling.....	255
Type.....	665
Warning light.....	603
Fuel consumption	
Average fuel	
economy.....	142, 143, 145
Current fuel consumption.....	142
Fuel filler door.....	255
If the fuel filler door	
cannot be opened.....	257
Refueling.....	255
Fuel gauge.....	119
Fuel pump shut off system.....	600
Fuses.....	577

G

Garage door opener.....	509
Gauges.....	119
Gear positions.....	231
Glove box.....	497
Glove box light.....	497

H

Hands-free system	
(for cellular phone).....	439
Head restraints.....	184
Headlight cleaner.....	247
Headlights.....	239
Automatic High Beam	
system.....	242
Light switch.....	239
Replacing light bulbs.....	587
Heaters.....	479
Air conditioning system.....	479
Heated steering wheel.....	491
Outside rear view mirrors.....	486
Seat heaters.....	492
Hill-start assist control.....	357
Hood.....	539
Open.....	539
Pop Up Hood.....	55
Hooks	
Cargo hooks.....	500
Coat hooks.....	508
Retaining hooks (floor mat).....	36
Horn.....	188

I

Identification	
Engine.....	664
Vehicle.....	663
Ignition switch (engine switch).....	222
Illuminated entry system.....	494
Indicators.....	116
Initialization	
Engine oil maintenance data	546
Moon roof.....	201
Multi-information display.....	134
Power windows.....	196
Tire pressure warning system	558
Initiators (tire pressure warning system).....	566
Inside door handle lights.....	493
Inside rear view mirror	189
Instrument panel light control	123
Intercooler	549
Intercooler coolant	547
Capacity	670
Checking	547
Preparing and checking before winter	363
Interior lights.....	493
Wattage.....	676
Intrusion sensor and tilt sensor	110
ISOFIX rigid anchors.....	89, 100

J

Jack	
Positioning the jack	540
Vehicle-equipped jack.....	633
Jack handle	633
Jam protection function	
Moon roof.....	200
Power window	196

K

Keyless entry	
Smart entry & start system.....	154, 161
Wireless remote control	154, 161
Keys.....	148
Battery-Saving Function.....	167
Electronic key.....	148
Engine switch	222
If the electronic key does not operate properly.....	647
Key number plate.....	148
Keyless entry.....	154, 161
Mechanical key	149
Replacing the battery	574
Warning buzzer.....	155
Wireless remote control	148
Knee airbags	45

L

Lane Departure Alert	
with steering control (LDA).....	279
Language	
(multi-information display)	134
LDA (Lane Departure Alert	
with steering control).....	279
Lever	
Auxiliary catch lever.....	539
Hood lock release lever.....	539
Shift lever.....	227
Tilt and telescopic steering	
lock release lever	187
Turn signal lever.....	234
Wiper lever.....	247
Lexus Display Audio controller	374
Lexus Display Audio system.....	372
Lexus parking assist-sensor	314
Lexus parking assist monitor	323
Lexus Safety System + ...	259
Automatic High Beam.....	242
Dynamic radar cruise control	289
LDA (Lane Departure Alert	
with steering control)	279
PCS (Pre-Collision System).....	266

License plate lights	239
Light switch.....	239
Replacing light bulbs	587
Light bulbs	
Replacing.....	582
Wattage	676
Lights	
Automatic High Beam	
system.....	242
Fog light switch.....	246
Headlight switch.....	239
Illuminated entry system	494
Interior light	494
Interior lights list	493
Personal lights.....	494
Replacing light bulbs	582
Trunk light	163
Turn signal lever.....	234
Vanity lights.....	503
Wattage	676
Lock steering column	224
Low profile tire	560
Luggage security system	162
Luggage under tray	502

M**Maintenance**

- Do-it-yourself maintenance 537
- Maintenance data 662
- Maintenance requirements 523
- Scheduled maintenance 525

Malfunction indicator lamp 601**Master warning light 603****Meter**

- Changing the display 122
- Indicators 116
- Instrument panel light control 123
- Meters 119
- Multi-information display 124
- Warning lights 115

MirrorLink™ 464**Mirrors**

- Inside rear view mirror 189
- Outside rear view mirror defoggers 486
- Outside rear view mirrors 191
- Vanity mirrors 503

Moon roof 199

- Door lock linked moon roof operation 200
- Jam protection function 200
- Operation 199

MP3 disc 408**Multi-information display 124**

- Audio system-linked 124
- Drive information 130
- Dynamic radar cruise control 301
- LDA (Lane Departure Alert with steering control) 284
- Navigation system-linked 124
- Settings 134
- Warning message 607

N**Navigation system *****Needle 134****O****Odometer 119****Oil**

- Differential oil 672
- Engine oil 666

Opener

- Hood 539
- Trunk 161

Outer foot lights

- Location 493
- Replacing light bulbs 583
- Wattage 676

*: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual".

Outside rear view mirrors	191
Adjusting and folding.....	191
BSM (Blind Sport Monitor).....	339
Linked mirror function	
when reversing.....	193
Mirror position memory.....	179
Outside rear view mirror	
defoggers	486
Outside temperature	119
Overheating	655

P

Paddle shift switches	229
Parking assist sensors	314
Parking brake.....	236
PCS (Pre-Collision System)	266
Warning light.....	602
Personal lights.....	494
Wattage.....	676
Pollen removal mode.....	486
Pop-up display	134
Pop Up Hood.....	55
Power easy access system	179
Power outlet.....	505
Power steering (Electric power	
steering system).....	358
Warning light.....	602
Power windows.....	195
Door lock linked window	
operation.....	197
Jam protection function.....	196
Operation.....	195
Window lock switch.....	195
Pre-Collision System (PCS)	266
Warning light.....	602

R

Radar cruise control (dynamic	
radar cruise control).....	289
Radiator	549
Radio.....	404
Rear Cross Traffic Alert	339
Rear fog light	246
Replacing light bulb	587
Switch.....	246
Rear passengers' seat belt	
reminder lights	603
Rear seat	177
Fold down the seatback	177
Luggage security system	162
Rear personal lights.....	494
Wattage	676
Rear sunshade	506
Operation.....	506
Reverse operation feature	506
Rear turn signal lights	234
Replacing light bulbs	587
Turn signal lever.....	234

Rear view mirror

Inside rear view mirror 189

Outside rear view mirrors 191

Rear view monitor system 323**Rear window defogger** 486**Refueling** 255

Capacity 665

Fuel types 665

If the fuel filler door cannot
be opened 257

Opening the fuel tank cap 257

Remote Touch* 474**Replacing**

Electronic key battery 574

Fuses 577

Light bulbs 581

Tires 632

Rev indicator 121**Rev peak** 122**Run-flat tires** 644**S****Scheduled maintenance** 525**Seat belt reminder light** 603**Seat belts** 40

Adjusting the seat belt 41

Child restraint system
installation 62, 93Cleaning and maintaining
the seat belt 521Emergency Locking
Retractor (ELR) 42

How to wear your seat belt 40

How your child should wear
the seat belt 42Pregnant women, proper
seat belt use 43Reminder light and
buzzer 603

Seat belt pretensioners 41

SRS warning light 601

Seat heaters 492**Seat position memory** 179**Seat ventilators** 492*: For vehicles with a navigation system, refer to the
"Navigation System Owner's Manual".

Seats, Front	175	Service reminder indicators	114
Adjustment.....	175	S-FLOW mode	481
Adjustment precautions.....	176	Shift lever	227
Child seats/child restraint		Automatic transmission.....	227
system installation	62, 93	If the shift lever cannot be	
Cleaning.....	520	shifted from P	232
Driving position memory.....	179	Shift lock system	231
Head restraints.....	184	Shift position and gear position	119
Power easy access system.....	179	Side airbags	45
Properly sitting in the seat	38	Side mirrors	191
Seat heaters	492	Adjusting and folding.....	191
Seat position memory	179	BSM (Blind Spot Monitor).....	339
Seat ventilators.....	492	Linked mirror function when	
Seats, Rear	177	reversing	193
Fold down the seatback.....	177	Mirror position memory	179
Luggage security system.....	162	Side turn signal lights	234
Sensor		Replacing light bulbs	587
Automatic headlight system.....	240	Turn signal lever.....	234
Inside rear view mirror.....	190		
Intrusion sensor and tilt sensor	110		
LDA (Lane Departure Alert			
with steering control)	279		
Lexus parking assist-sensor.....	314		
Radar sensor.....	261, 344		
Rain-sensing windshield			
wipers.....	253		

Side windows.....	195	Steering wheel.....	187
Slip indicator	602	Adjustment	187
Smart entry & start system.....	166	Audio switches	378
Antenna location.....	166	Heated steering wheel	491
Entry functions.....	154, 161	Power easy access system.....	179
Starting the engine	222	Steering wheel position	
Snow mode	228	memory	179
Snow tires.....	365	Stop & start system	
Spare tire	632	Function.....	305
Inflation pressure.....	673, 675	Idling stop time	310
Storage location.....	633	Replacing battery	653
Spark plug.....	670	Stop lights	
Specifications	662	Emergency brake signal.....	358
Speech command system	470	Replacing light bulbs	587
Speedometer	119	Storage feature	496
Speed indicator	121	Stuck	
Sport mode.....	353	If the vehicle becomes stuck	659
Steering lock.....	224	Sun visors.....	503
Column lock release.....	224	Sunshade	
		Rear	506
		Roof.....	200

Switches

ASC (Active Sound Control).....	237
Audio remote control	
switches.....	378
Automatic High Beam switch.....	242
BSM (Blind Spot Monitor)	
switch.....	339
Cruise control switch	289, 301
Door lock switches	157
Driving mode select switch	353
Driving position memory	
switches.....	179
Emergency flashers switch	590
Engine switch.....	222
Fog light switch.....	246
Heated steering wheel	
switch.....	491
Ignition switch.....	222
LDA (Lane Departure Alert)	
switch.....	283
Lexus parking assist-sensor	
switch.....	314

Light switch.....	239
Meter control switches.....	124
Moon roof switches.....	199
Outside rear view mirror	
switches	191
Paddle shift switches.....	229
Power door lock switch.....	157
Power window switches.....	195
Rear sunshade switch.....	506
Rear window and outside rear	
view mirror defoggers	
switch.....	486
Seat heater switches	492
Seat ventilator switches.....	492
Snow mode switch	228
Talk switch.....	447
Telephone switches	447
Tilt and telescopic steering	
control switch	187
Tire pressure warning reset	
switch.....	558
Trunk opener main switch.....	162
Trunk opener switch.....	161
Vehicle-to-vehicle distance	
switch.....	295
VSC OFF switch.....	359
Window lock switch	195
Windshield wiper	
and washer switch.....	247
Windshield wiper de-icer	
switch.....	486

T

Tachometer	119
Tail lights	239
Light switch	239
Replacing light bulbs	587
Talk switch	447
Telephone switches	447
Theft deterrent system	
Alarm	107
Engine immobilizer system	104
Intrusion sensor and tilt sensor	110
Tire inflation pressure	568
Maintenance data	673, 675
Tire inflation pressure display	
function	557
Warning light	603
Tire pressure warning system	557
Initializing	558
Installing tire pressure warning	
valves and transmitters	557
Registering ID codes	558
Tire pressure warning reset	
switch	558
Warning light	603

Tires	555
Chains	364
Checking	555
If you have a flat tire	632, 644
Inflation pressure	673, 675
Replacing	632
Rotating tires	556
Size	673, 675
Snow tires	365
Spare tire	632
Tire inflation pressure display	
function	557
Tire pressure warning system	557
Warning light	603
Tools	633
Top strap	91, 102
Towing	593
Emergency towing	593
Towing capacity	662
Towing eyelet	596
Trailer towing	214, 221
Traction Control (TRC)	357
Trailer towing	214, 221

Transmission	227
Automatic transmission.....	227
Driving mode select switch.....	353
If the shift lever cannot be	
shifted from P	232
M mode.....	230
Paddle shift switches	229
TRC (Traction Control)	357
Trip meters	119
Trunk	161
Luggage security system.....	162
Smart entry & start system.....	161
Trunk features.....	500
Trunk grip	162
Trunk light.....	163
Trunk opener main switch	162
Trunk opener switch	161
Wireless remote control	161
Trunk light	163
Wattage.....	676
Turn signal lights.....	234
Replacing light	
bulbs	582, 587
Turn signal lever.....	234
Wattage.....	676

U

Units	134
USB device	424, 468
Connecting	379
USB audio	424
USB photo.....	468
USB video.....	424
USB port	379

V

Vanity lights	503
Wattage	676
Vanity mirrors	503
Variable Gear Ratio Steering	
(VGRS)	357
VDIM (Vehicle Dynamics	
Integrated Management)	358
Vehicle data recordings	9
Vehicle identification number	663
Vehicle Stability Control	
(VSC)	357
Ventilators (seat ventilators)	492
VGRS (Variable Gear Ratio	
Steering)	357
Video CD operation.....	413
VSC (Vehicle Stability	
Control)	357

W**Warning buzzers**

Approach warning.....	296
Downshifting	231
Driver's and front passenger's seat belt reminder	603
Lexus parking assist-sensor	317
Open door.....	602
Pre-Collision braking.....	267
Rear passengers' seat belt reminder	603

Warning lights.....115

ABS.....	601
Brake system	601
Charging system	601
Driver's and front passenger's seat belt reminder light.....	603
Electric power steering system	602
Low fuel level	603
Malfunction indicator lamp.....	601
Master warning light	603
Open door.....	602
Pre-Collision System.....	602
Rear passengers' seat belt reminder lights.....	603
Slip indicator.....	602
SRS.....	601
Tire pressure	603

Warning messages.....607**Warning reflector storage belt.....502****Washer**

Checking.....	553
Preparing and checking before winter.....	363
Switch.....	247

Washing and waxing.....516**Weight****Wheels.....570**

Replacing.....	570
Size.....	673, 675

Window lock switch.....195**Windows**

Power windows	195
Rear window defogger	486


Windshield wipers

Intermittent windshield wipers with interval adjuster	247
Rain-sensing windshield wipers	249

Winter driving tips**Wireless remote control**

Battery-Saving Function.....	167
Locking/Unlocking.....	154, 161
Replacing the battery	574

WMA disc

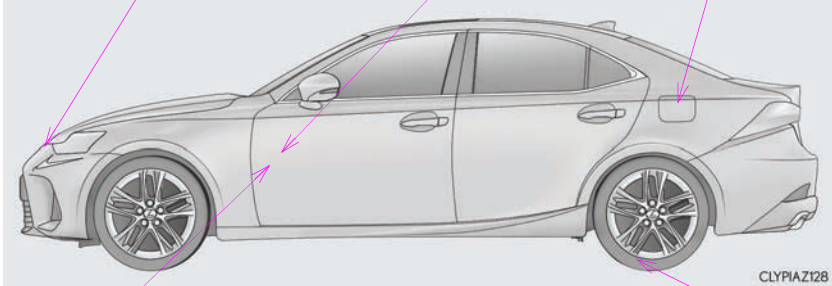GAS STATION INFORMATION	
Auxiliary catch lever P. 539	Trunk opener P. 161
	
Hood lock release lever P. 539	Tire inflation pressure P. 673, 675
Fuel tank capacity (Reference)	66 L (17.4 gal., 14.5 Imp. gal.) 66.3 L (17.5 gal., 14.6 Imp. gal.) (for Korea)
Fuel type	Unleaded gasoline only P. 665
Cold tire inflation pressure	P. 673, 675
Engine oil capacity (Drain and refill – reference)	P. 666
Engine oil type	P. 666

